



Maytag [Residential Maytag LDE18CS Dryer Parts](#) Parts Diagram 02 - REAR VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y052740	62739		Nut, Lock
002	201385		Not Available	ELEM BK 1200
003	210684			Foot, Adjustable Leg
004	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
005	Y302699	22003428		Leg, Adjustable
006	NLA		Not Available	CABINET-WHITE
007	NLA		Not Available	CABINET-ALMOND
008	NLA		Not Available	CABINET-HARVEST WHEAT
009	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
010	NLA		Not Available	TOP COVER-WHITE
011	NLA		Not Available	TOP COVER-ALMOND
012	NLA		Not Available	TOP COVER-HARVEST WHEAT
013	Y303442			EXHAUST DUCT ASSEMBLY
014	NLA		Not Available	SCREW & WASHER ASSY.

015	NLA	Not Available	CONTROL COVER-WHITE
016	NLA	Not Available	CONTROL COVER-ALMOND
017	NLA	Not Available	CONTROL COVER-HARVEST WHEAT
018	NLA	Not Available	OUTER CASE-WHITE
019	NLA	Not Available	OUTER CASE-ALMOND
020	NLA	Not Available	OUTER CASE-HARVEST WHEAT---NA
021	Y305086		Adjustable Leg And Nut
022	Y310632	1163839	Screw

