


Maytag LDE27CT 08 - FRONT PANEL & DOOR ASSEMBLY

SECTION: FRONT PANEL & DOOR ASSEMBLY
 MODEL: DE-DG27CS-CT

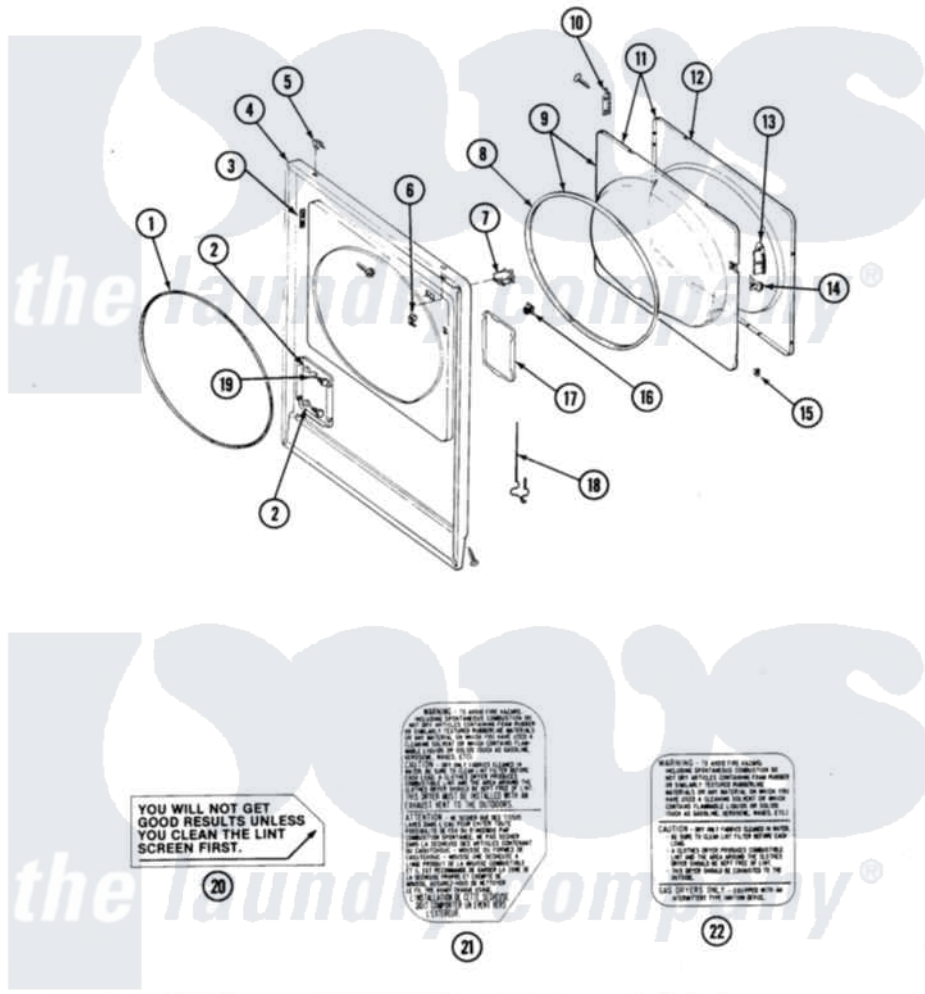

Issue Date: 10/90

Maytag Residential Maytag LDE27CT Dryer Parts Parts Diagram 08 - FRONT PANEL & DOOR ASSEMBLY
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	314937			Seal, Front Panel
002	NLA		Not Available	PART NOT USED
003	Y313907			Fastener, Twin
004	204439			Screw And Fstner Assembly
"	NLA		Not Available	PANEL, FRONT (WHT)
005	212982	22001650		Fastener, Spring
006	Y310376			Clip, Door Switch Harness
007	Y305753	W10169313		Switch-Dor
008	314935	33001192		Seal, Door
009	308069		Not Available	DOOR, INNER W/GASKET
010	307099	33001230		Hinge, Door
"	Y314062			Screw, Door Hinge And Panel
011	NLA		Not Available	DOOR, COMPLETE LESS HINGES (WH
012	314967		Not Available	DOOR W/WINDOW OUTER HALF (WHT)
"	NLA		Not Available	DOOR W/WIN CUT OUT

	NLA		OUTER ALMNA
013	314939		Handle, Door
"	314974		Handle, Door
"	314975		Handle, Door
014	314936	33001305	Strike, Door
"	314944	33001305	Strike, Door
015	Y313910		Clip, Door Liner To Outer Panel
016	306436		Door Latch Kit--W
017	NLA	Not Available	PART NOT USED
018	Y314025		Latch For Access Door
019	312369		Sleeve, Access Panel Stud Part Not Used
020	Y313340		LABEL, LINT SCREEN INSTRUCTION
021	314941	Not Available	LABEL, INSTRUCTION
022	NLA	Not Available	INSTRUCTION LABEL

