


# Maytag LDE410 01 - CONTROL PANEL

MODEL DE-DG410 CONTROL PANEL

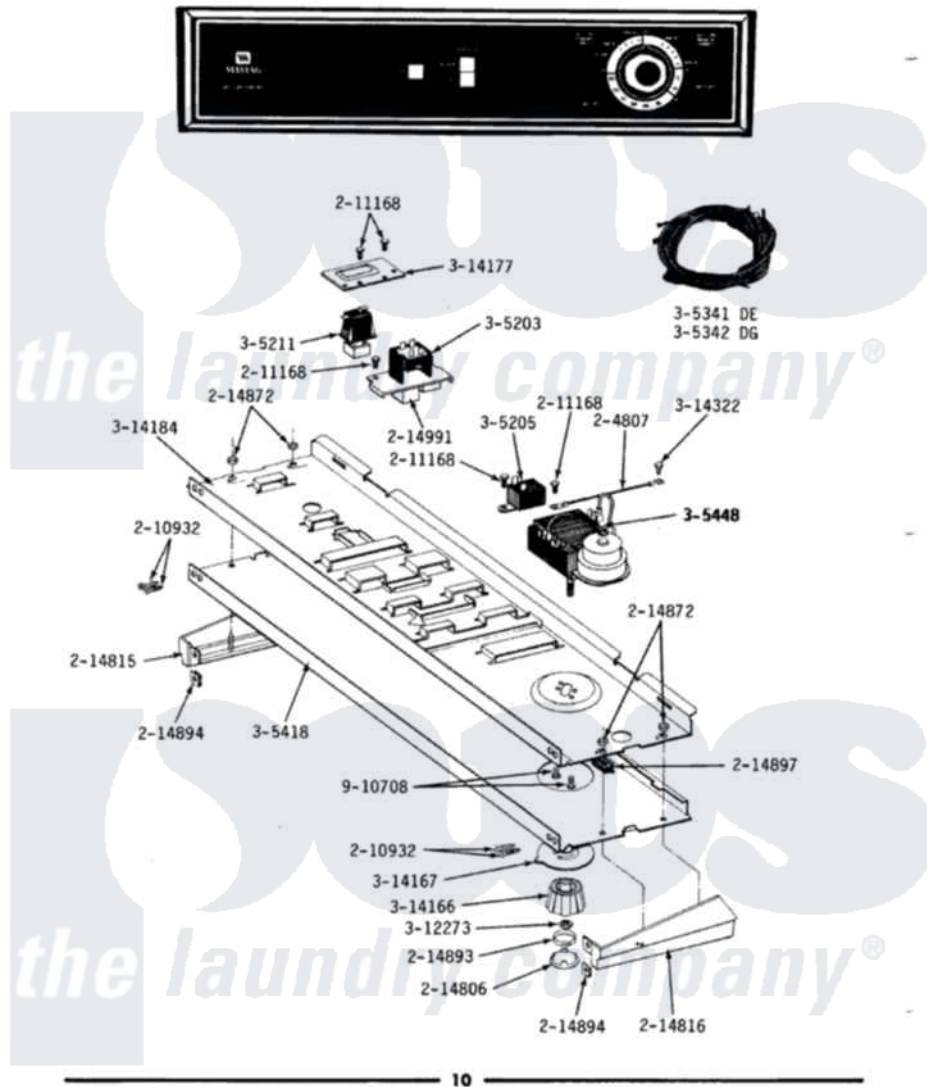

Maytag [Residential Maytag LDE410 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL  
 Click on the part number to view part

| Item | Original Part Number   | Replaced By               | Status        | Part Description                                |
|------|------------------------|---------------------------|---------------|---|
| 1    | <a href="#">204807</a> |                           |               | Ground Wire, Supp. Plte To Top Cover            |
| 2    | <a href="#">210932</a> |                           |               | Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct |
| 3    | 211168                 | <a href="#">W10139210</a> |               | Screw, 8-18 X 5/16                              |
| 4    | 214806                 |                           | Not Available | CAP FOR TIMER KNOB                              |
| 5    | <a href="#">214815</a> |                           |               | End Cap F/Control Panel-LH                      |
| 6    | <a href="#">214816</a> |                           |               | End Cap F/Control Panel-RH                      |
| 7    | <a href="#">214872</a> |                           |               | Palnut, End Cap Note: Nut, Lamp Holder          |
| 8    | 214893                 |                           | Not Available | DETENT RING F/TIMER KNOB CA                     |
| 9    | <a href="#">214894</a> |                           |               | Fastener, End Cap                               |
| 10   | <a href="#">214897</a> |                           |               | Pad, Control Panel                              |
| 11   | <a href="#">214991</a> |                           |               | Button For Switch                               |
| 12   | 305203                 |                           | Not Available | TEMPERATURE SELECTOR SWITCH                     |
| 13   | 305205                 | <a href="#">694419</a>    |               | Mini-Buzzer                                     |

|    |                         |                        |                          |
|----|-------------------------|------------------------|--------------------------|
| 14 | <a href="#">305211</a>  |                        | Push To Start Switch     |
| 15 | <a href="#">305448</a>  |                        | Timer                    |
| 16 | <a href="#">305341</a>  |                        | Main Wire Harness        |
| 17 | 305342                  | Not Available          | MAIN WIRE HARNESS        |
| 18 | 305418                  | Not Available          | CONTROL PANEL            |
| 19 | <a href="#">312273</a>  |                        | Nut, Control Knob        |
| 20 | <a href="#">Y314166</a> |                        | Knob For Timer           |
| 21 | 314167                  | Not Available          | TIMER DIAL INDICATOR     |
| 22 | 314177                  | Not Available          | BRACKET FOR START SWITCH |
| 23 | <a href="#">314184</a>  |                        | Back Up Plate            |
| 24 | Y314322                 | <a href="#">211251</a> | Screw, Transformer       |
| 25 | 910708                  | <a href="#">488234</a> | Screw 8-32 X 1/4         |

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>