



Maytag [Residential Maytag LDE4910ACW Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	214872			Palnut, End Cap Note: Nut, Lamp Holder
2	314184			Back Up Plate
3	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
4	207215		Not Available	END CAP LH
5	214894			Fastener, End Cap
6	308262		Not Available	CONTROL PANEL
7	315042			Dial Skirt
8	315041			Knob, Timer
9	312273			Nut, Control Knob
10	215821		Not Available	CAP, KNOB
11	207216		Not Available	END CAP RH
12	214897			Pad, Control Panel
13	315317	488234		Screw 8-32 X 1/4
14	Y308218			Timer RPR
15	211204	00767		Screw, 8A X 3/8 HeX Washer

15	211294	30707	Head Tapping
16	204807		Ground Wire, Supp. Plte To Top Cover
17	211168	W10139210	Screw, 8-18 X 5/16
18	305205	694419	Mini-Buzzer
19	207365		2 Button Switch
20	307305		Switch Push To Start
21	308332	Not Available	WIRE HARNESS
22	16000327	Not Available	GUIDE, QUICK REF. - MAYTAG
"	315086	Not Available	MANUAL, USE & CARE

