


Maytag LDE710 01 - CONTROL PANEL

MODEL DE-DG710 CONTROL PANEL

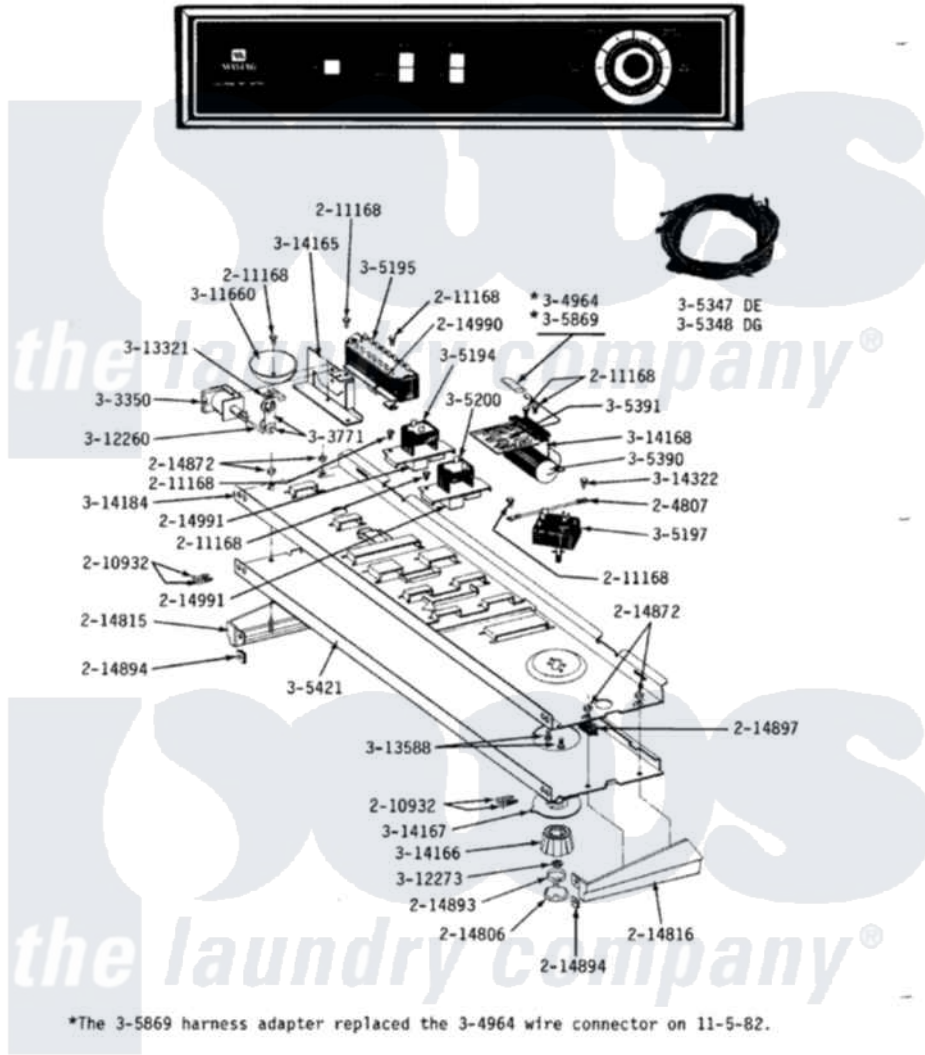

Maytag [Residential Maytag LDE710 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	204807			Ground Wire, Supp. Plte To Top Cover
2	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
3	211168	W10139210		Screw, 8-18 X 5/16
4	214806		Not Available	CAP FOR TIMER KNOB
5	214815			End Cap F/Control Panel-LH
6	214816			End Cap F/Control Panel-RH
7	214872			Palnut, End Cap Note: Nut, Lamp Holder
8	214893		Not Available	DETENT RING F/TIMER KNOB CA
9	214894			Fastener, End Cap
10	214897			Pad, Control Panel
11	214990			Button For Switch
12	214991			Button For Switch
13	Y303350		Not Available	SOLENOID
14	Y303771		Not Available	CHIME ACTUATOR

14	1303771	Not Available	ASSEMBLY
15	304964		Wire Connector
16	305194	Not Available	DRYNESS OR PRESS CARE SWITC
17	305195		Start Control Switch
18	305197	Not Available	CYCLE SELECTOR SWITCH
19	305200	Not Available	TEMPERATURE SELECTOR SWITCH
20	305347	Not Available	MAIN WIRE HARNESS
21	305348	WB48M1	Ov Rack GDE
22	305390	Not Available	EDGEBOARD CONNECTOR ASSEMBL
23	305391		Printed Circuit Board
24	305421	Not Available	CONTROL PANEL
25	305869	Not Available	HARNESS ADAPTER WIRE
26	Y311660		Chime
27	Y312260	Not Available	LINK
28	312273		Nut, Control Knob
29	Y313321		Chime Actuator
30	Y313588	488234	Screw 8-32 X 1/4
31	314165	Not Available	CHIME AND SOLENOID BRACKET
32	Y314166		Knob For Timer
33	314167	Not Available	TIMER DIAL INDICATOR
34	314168	313611	Button-DR
35	314184		Back Up Plate
36	Y314322	211251	Screw, Transformer

the laundry company[®]

the laundry company[®]