


# Maytag LDG18CM 06 - CM CONTROL CENTER

**DE-DG18CM-CS** **CM-CS CONTROL CENTER**  
 DE-DG18CM ORIGINAL, SERIES 01, 02, 03 & 04  
 DE-DG18CS ALL MODELS

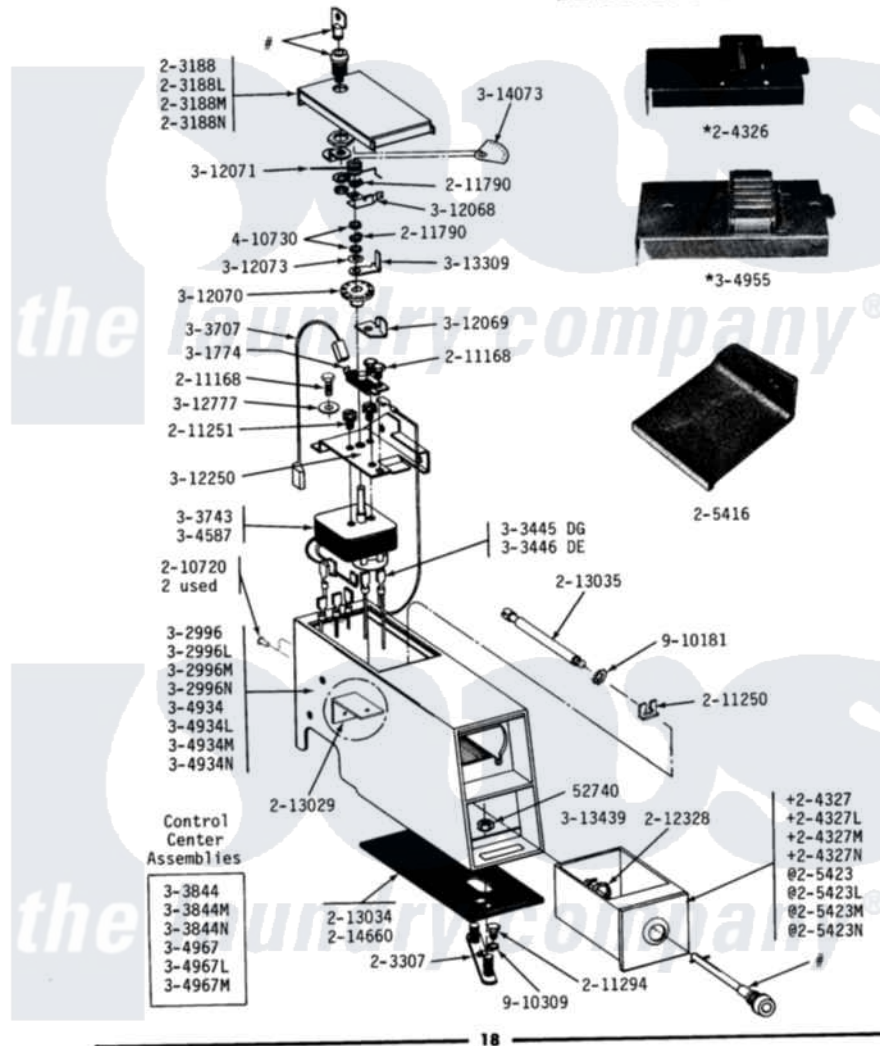

Maytag Residential Maytag LDG18CM Dryer Parts Parts Diagram 06 - CM CONTROL CENTER  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y052740	<a href="#">62739</a>		Nut, Lock
002	203188		Not Available	TIMER ACCESS DOOR (WHT)
003	203188L		Not Available	ACCESS DOOR-ALMOND
004	203188M		Not Available	ACCESS DOOR-HARVEST WHEAT
005	NLA		Not Available	MTG. STRAP---NA
006	NLA		Not Available	COIN DROP ASSEMBLY
007	NLA		Not Available	COIN BOX-WHITE---NA
008	NLA		Not Available	COIN BOX-ALMOND
009	NLA		Not Available	COIN BOX - HARVEST WHEAT
010	<a href="#">205416</a>			Guard For Coin Box
011	205423	<a href="#">208883</a>		Coin Box K
012	205423L	<a href="#">208883</a>		Coin Box K
013	205423M	<a href="#">208883</a>		Coin Box K
014	<a href="#">210720</a>			Rivet, Bearing To Tumbler Frnt

015	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
016	NLA		Not Available	FASTENER
017	NLA		Not Available	FASTENER
018	<a href="#">211251</a>			Screw, Transformer
019	211294	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
020	<a href="#">211790</a>			Lock Ring For Timer Shaft
021	212328	<a href="#">W10139762</a>		Hex Nut, 3/4-27
022	<a href="#">213029</a>			Timer Support Bracket
023	NLA		Not Available	GASKET UNDER CONTROL CENTER
024	<a href="#">213035</a>			Bolt, Locking
025	<a href="#">Y301774</a>			Switch For Coin Slide
026	NLA		Not Available	OUTER CASE-WHITE
027	NLA		Not Available	OUTER CASE-ALMOND
028	NLA		Not Available	OUTER CASE-HARVEST WHEAT
029	<a href="#">Y303707</a>			Wire Assembly
030	<a href="#">Y303743</a>			Timer
031	Y303445		Not Available	MAIN WIRE HARNESS
032	NLA		Not Available	CONTROL CENTER-WHITE
033	NLA		Not Available	CONTROL CENTER-WHITE
034	NLA		Not Available	TIMER MOTOR
035	NLA		Not Available	OUTER CASE-ALMOND
036	NLA		Not Available	OUTER CASE-HARVEST WHEAT---NA
037	NLA		Not Available	COIN BOX COVER
038	<a href="#">Y312068</a>			Return Lever
039	<a href="#">Y312069</a>			Stop For Actuator
040	NLA		Not Available	RATCHET FOR TIMER
041	<a href="#">Y312071</a>			Return Spring For Actuator
042	<a href="#">312073</a>			Spring Washer
043	<a href="#">312250</a>			Timer Support Bracket
044	NLA		Not Available	WASHER
045	<a href="#">Y313309</a>			Timer Actuator Lever
046	Y313439		Not Available	INSTRUCTION LABEL
047	<a href="#">314073</a>			Time Indicator Gage
048	<a href="#">410730</a>			Washer
049	<a href="#">910181</a>			Lockwasher, Terminal Block
050	<a href="#">910309</a>			Washer, Mounting Strap