


Maytag LDG19CS 07 - CONTROL CENTER CASE

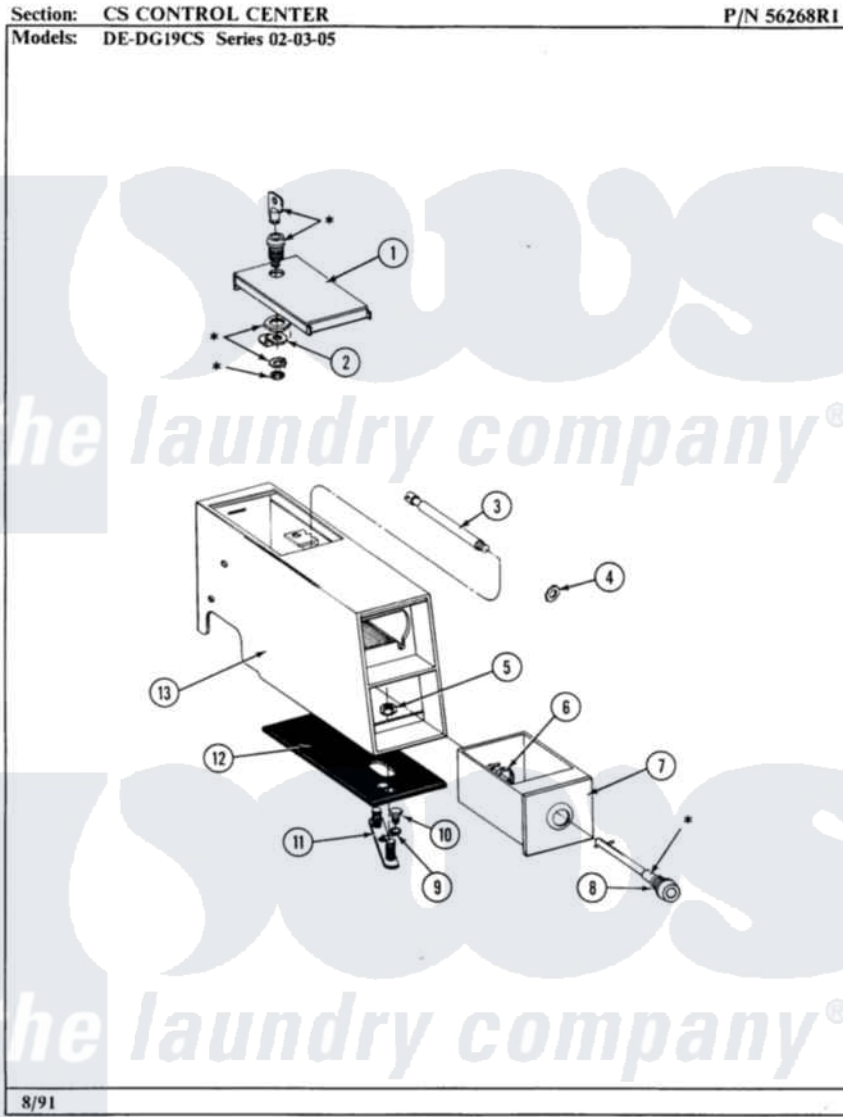

14

Maytag [Residential Maytag LDG19CS Dryer Parts](#) Parts Diagram 07 - CONTROL CENTER CASE
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	203188		Not Available	TIMER ACCESS DOOR (WHT)
"	203188L		Not Available	ACCESS DOOR-ALMOND
"	203188M		Not Available	ACCESS DOOR-HARVEST WHEAT
002	213750	W10133266		Cam-Lock
003	213035			Bolt, Locking
004	910181			Lockwasher, Terminal Block
005	Y052740	62739		Nut, Lock
006	212328	W10139762		Hex Nut, 3/4-27
007	205423	208883		Coin Box K
"	205423L	208883		Coin Box K
"	205423M	208883		Coin Box K
008	NLA		Not Available	SPRING WASHER, LOCK
009	910309			Washer, Mounting Strap
010	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

011	NLA	Not Available	MTG. STRAP---NA
012	214660		Gasket, Control Center
013	205646	22001405	Case, Coin Slide
"	205646L	22001405	Case, Coin Slide
"	205646M	22001405	Case, Coin Slide
"	NLA	Not Available	CONTROL CENTER (WHT)

