


Maytag LDG21CS 01 - FRONT VIEW

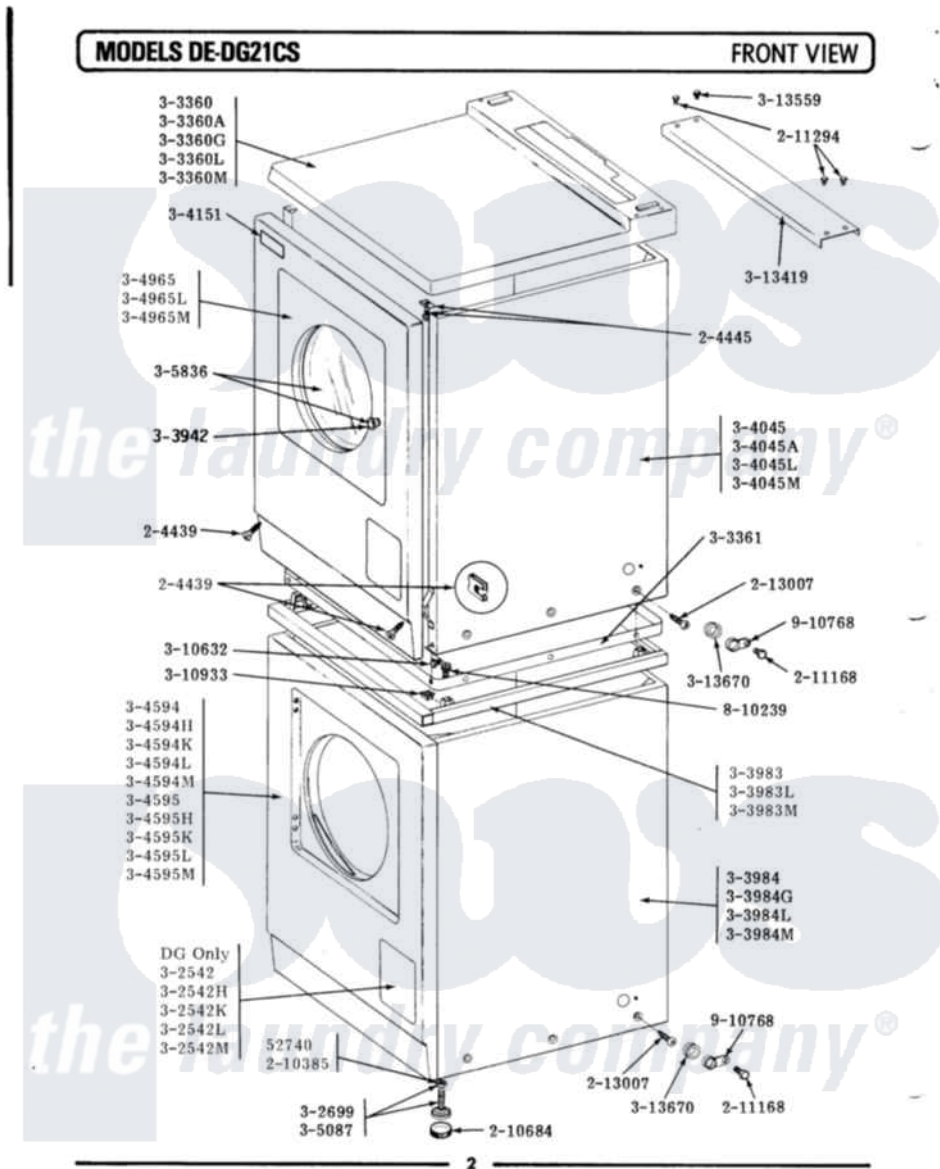

Maytag Residential Maytag LDG21CS Dryer Parts Parts Diagram 01 - FRONT VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y052740	62739		Nut, Lock
002	204439			Screw And Fstner Assembly
003	204445			Screw And Fastener Assembly
004	210385			Lock Nut For Adjustable Leg
005	210684			Foot, Adjustable Leg
006	211168	W10139210		Screw, 8-18 X 5/16
007	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
008	213007			Xfor Cabinet See Cabinet, Back
009	NLA		Not Available	ACCESS DOOR (WHITE)
010	Y302699	22003428		Leg, Adjustable
011	NLA		Not Available	TOP COVER-WHITE
012	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
013	NLA		Not Available	SPACER ASSM-WHITE
014	NLA		Not Available	CABINET-WHITE

015	304045		Not Available	CABINET-WHITE
"	NLA		Not Available	CABINET-ALMOND
016	NLA		Not Available	NAME PLATE ON CONTROL PANEL
017	NLA		Not Available	FRONT PANEL-WHITE
018	NLA		Not Available	FRONT PANEL-WHITE
019	304965			Door Complete-White
"	NLA		Not Available	DOOR COMPLETE, ALMOND
020	Y305087	22003544		Adjustable Leg W/Foot And Nut
021	NLA		Not Available	INNER DOOR WITH KNOB & SCRE
022	NLA		Not Available	KNOB AND SCREW
023	Y310632	1163839		Screw
024	310933	33002194		Nut, Speed
025	NLA		Not Available	COVER PLATE FOR TOP COVER
026	Y313559			Screw
027	33001303			Grommet, Plate Hole
028	NLA		Not Available	SCREW
029	910768	M0280301		Tie Electr

