



Maytag [Residential Maytag LDG21CS Dryer Parts](#) Parts Diagram 03 - CONTROL CENTER SHROUD  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	<a href="#">Y014872</a>			Screw, Coin Meter Stop -
002	Y052740	<a href="#">62739</a>		Nut, Lock
003	NLA		Not Available	MTG. STRAP----NA
004	204051	<a href="#">22204051</a>		Knob
005	NLA		Not Available	COIN BOX-WHITE----NA
006	NLA		Not Available	MAYTAG COIN SLIDE
007	NLA		Not Available	SCREW, HEX HD No.8 X 1/2 INCH
008	211294	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
009	212276	<a href="#">W10116760</a>		Screw
010	212519	<a href="#">488234</a>		Screw 8-32 X 1/4
011	NLA		Not Available	SPRING WASHER FOR LOCK
012	213648	<a href="#">98165</a>		Screw
013	<a href="#">214650</a>			Screw For 2-4051 Knob
014	<a href="#">Y303204</a>			Start Switch With Nuts

015	Y303420		Not Available	SELECTOR SWITCH
016	303963		Not Available	LIGHT, INDICATOR
017	NLA		Not Available	CONTROL SHROUD-WHITE
018	NLA		Not Available	VAULT ASSEMBLY
019	<a href="#">Y303981</a>			Ground Wire For Latch
020	NLA		Not Available	OUTER CASE-WHITE
021	NLA		Not Available	COIN METER STOP WITH SCREWS
022	Y310632	<a href="#">1163839</a>		Screw
023	<a href="#">Y312702</a>			Knurled Nut, Start Switch
024	Y312706	<a href="#">422617</a>		Nut
025	<a href="#">312751</a>			Lockwasher, Start Switch
026	NLA		Not Available	BRACKET FOR SWITCH & RELAY
027	NLA		Not Available	INSULATOR
028	<a href="#">Y313424</a>			Screw, Vault Panel
029	Y313427	<a href="#">206637</a>		Lock Kit
030	313428		Not Available	PLATE FOR LATCH
031	NLA		Not Available	CONTROL PANEL FOR VAULT
032	<a href="#">Y313559</a>			Screw
033	Y313671	<a href="#">33001303</a>		Grommet, Plate Hole
034	910768	<a href="#">M0280301</a>		Tie Electr

