


Maytag LDG303 02 - DOOR

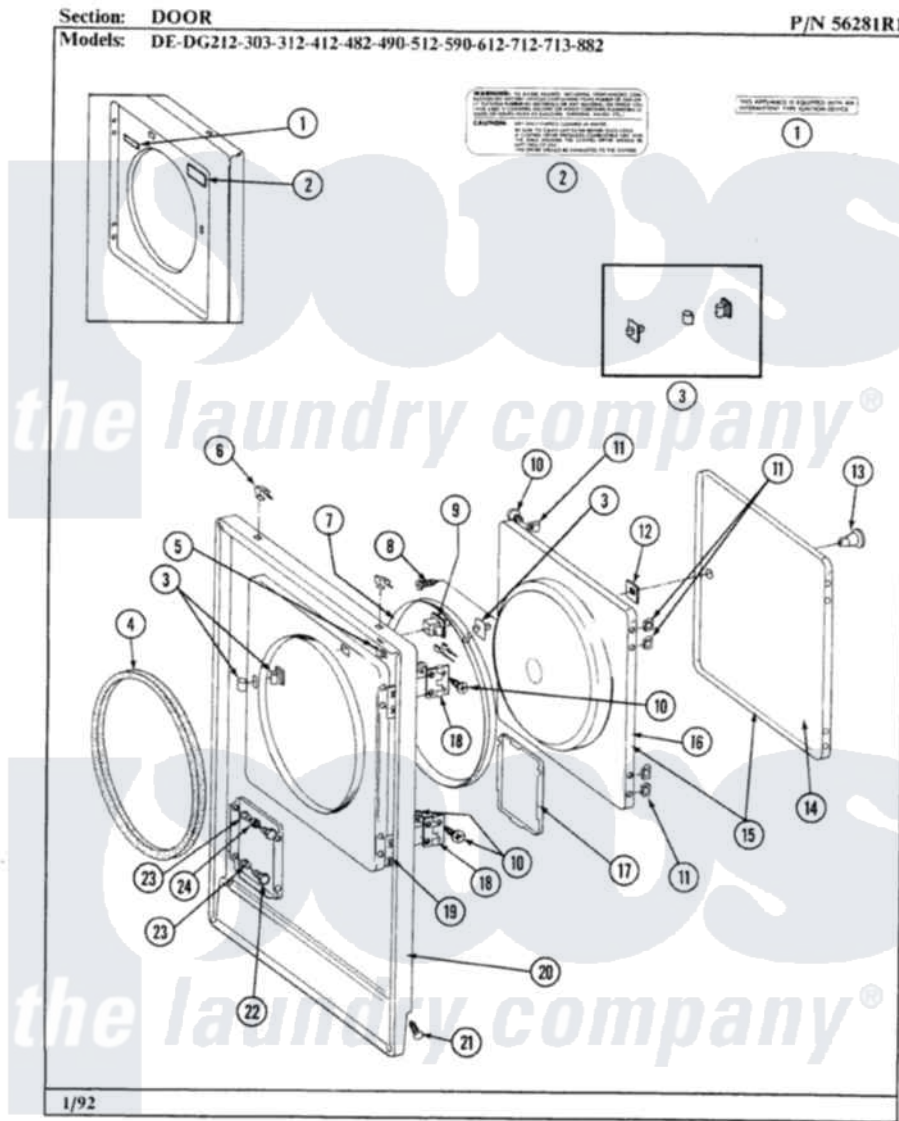

30

Maytag Residential Maytag LDG303 Dryer Parts Parts Diagram 02 - DOOR
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|---------------------------|---------------|---------------------------------|
| 1 | 314119 | | Not Available | GAS IGNITION LABEL |
| 2 | Y313927 | | | INSTRUCTION LABEL |
| 3 | 306436 | | | Door Latch Kit--W |
| 4 | 314286 | | | Seal For Front Panel |
| 5 | Y310376 | | | Clip, Door Switch Harness |
| 6 | 212982 | 22001650 | | Fastener, Spring |
| 7 | 314077 | | | Door Seal |
| 8 | 314347 | 400021-1 | | Screw |
| 9 | Y305753 | W10169313 | | Switch-Dor |
| 10 | Y314062 | | | Screw, Door Hinge And Panel |
| 11 | Y313910 | | | Clip, Door Liner To Outer Panel |
| 12 | Y313911 | | | Door Strike Retainer |
| 13 | 303942 | | Not Available | KNOB AND SCREW |
| 14 | 313908L | | Not Available | DOOR PANEL-ALMOND |
| 15 | 304579L | | Not Available | DOOR-ALMOND |
| " | 306668L | | Not Available | DOOR, ALMOND |

| | | | | |
|----|-------------------------|--------------------------|---------------|--|
| 16 | 305835 | | Not Available | INNER DOOR WITH KNOB & SCRE |
| " | 306676 | | Not Available | INNER DOOR WITH KNOB |
| 17 | 302542L | | Not Available | PART NOT USED. (DG ONLY) |
| 18 | Y304577 | 33001230 | | Hinge, Door |
| 19 | Y313907 | | | Fastener, Twin |
| 20 | 304594L | | Not Available | FRONT PANEL-ALMOND |
| 21 | 204439 | | | Screw And Fstner Assembly |
| 22 | 212949 | 22001866 | | Screw, Relay |
| 23 | 312301 | | Not Available | BUSHING FOR ACCESS STUD |
| 24 | 312369 | | | Sleeve, Access Panel Stud Part Not Used |

the laundry company[®]

the laundry company[®]

the laundry company[®]