

# Maytag LDG303 03 - FRONT VIEW



26

Maytag Residential Maytag LDG303 Dryer Parts Parts Diagram 03 - FRONT VIEW  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211194		Not Available	LOCK WASHER
2	<a href="#">Y313559</a>			Screw
3	<a href="#">307104L</a>			Top Cover Assembly
4	306668L		Not Available	DOOR, ALMOND
5	303942		Not Available	KNOB AND SCREW
6	304594L		Not Available	FRONT PANEL-ALMOND
7	<a href="#">204439</a>			Screw And Fstner Assembly
8	302542L		Not Available	PART NOT USED. (DG ONLY)
9	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
10	Y310632	<a href="#">1163839</a>		Screw
11	Y052740	<a href="#">62739</a>		Nut, Lock
12	<a href="#">Y305086</a>			Adjustable Leg And Nut
13	<a href="#">Y314137</a>			Foot, Rubber
14	<a href="#">213007</a>			Xfor Cabinet See Cabinet, Back
15	305302L		Not Available	CABINET-ALMOND

