


Maytag LDG313 03 - FRONT VIEW

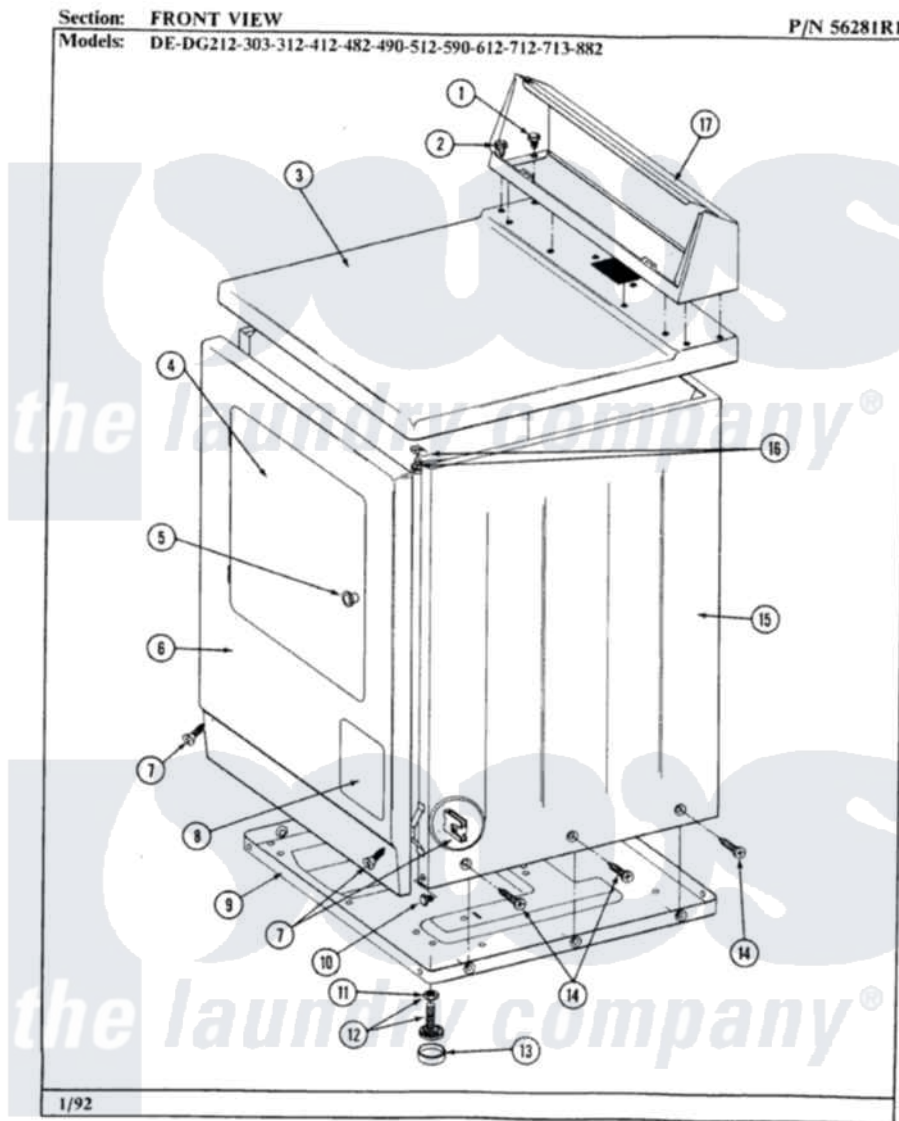

26

Maytag Residential Maytag LDG313 Dryer Parts Parts Diagram 03 - FRONT VIEW
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|-------------------------|---------------|--------------------------------|
| 1 | 211194 | | Not Available | LOCK WASHER |
| 2 | Y313559 | | | Screw |
| 3 | 307104L | | | Top Cover Assembly |
| 4 | 306668L | | Not Available | DOOR, ALMOND |
| 5 | 303942 | | Not Available | KNOB AND SCREW |
| 6 | 304594L | | Not Available | FRONT PANEL-ALMOND |
| 7 | 204439 | | | Screw And Fstner Assembly |
| 8 | 302542L | | Not Available | PART NOT USED. (DG ONLY) |
| 9 | Y303361 | | Not Available | BASE ASSY. (UPPER & LOWER) |
| 10 | Y310632 | 1163839 | | Screw |
| 11 | Y052740 | 62739 | | Nut, Lock |
| 12 | Y305086 | | | Adjustable Leg And Nut |
| 13 | Y314137 | | | Foot, Rubber |
| 14 | 213007 | | | Xfor Cabinet See Cabinet, Back |
| 15 | 305302L | | Not Available | CABINET-ALMOND |

