


# Maytag LDG31CT 01 - FRONT VIEW-DOOR OPEN

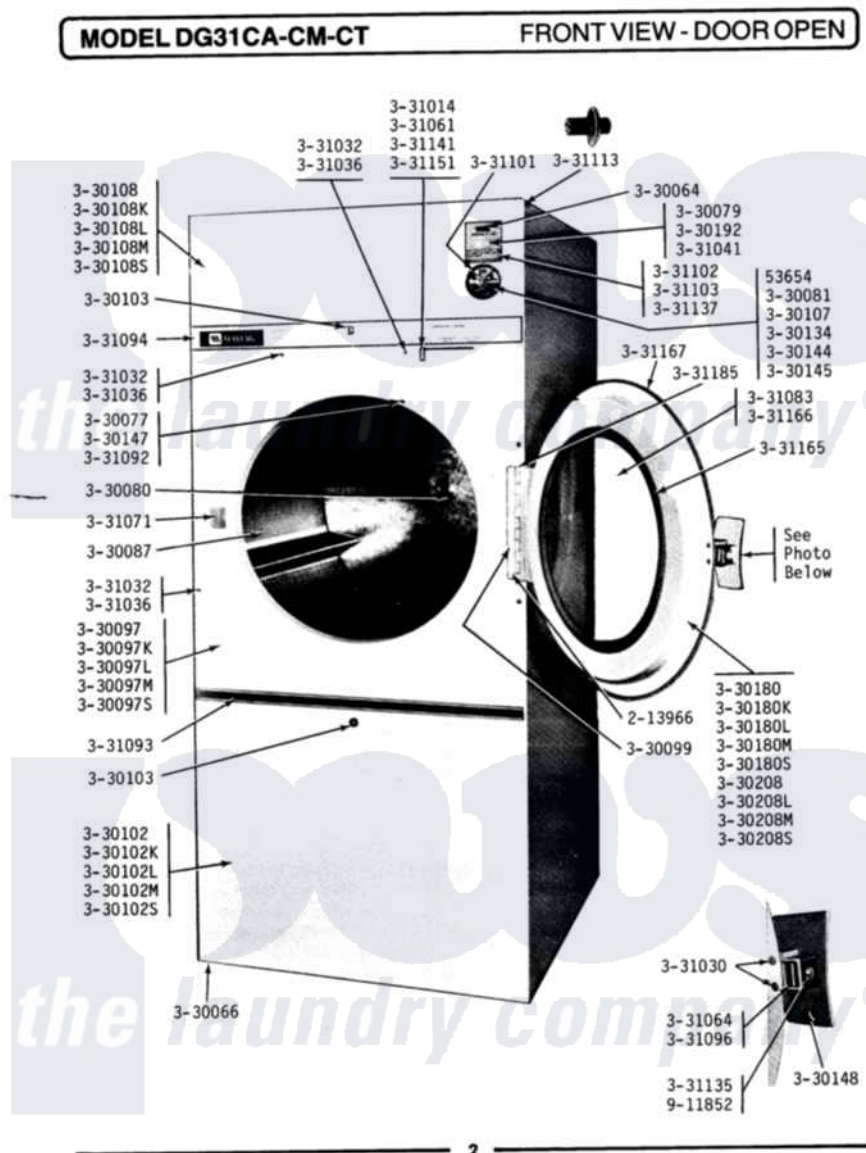

Maytag Residential Maytag LDG31CT Dryer Parts Parts Diagram 01 - FRONT VIEW-DOOR OPEN

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	GULMITE WRENCH No.8
002	NLA		Not Available	SCREW, No.5-40 X 3/8
003	213966	<a href="#">3400014</a>		Screw
004	<a href="#">Y330064</a>			Pilot Light
005	NLA		Not Available	LEVELING LEG
006	<a href="#">Y330077</a>			Door Switch
007	Y330079		Not Available	SWITCH, PUSH-TO-START
008	Y330080		Not Available	SPIDER & SHAFT ASSEMBLY
009	<a href="#">330081</a>			Timer - CA 60 Minutes
010	<a href="#">Y330087</a>			Drum Assembly Complete
011	NLA		Not Available	FRONT PANEL-WHITE
012	NLA		Not Available	FRONT PANEL-ALMOND
013	NLA		Not Available	FRONT PANEL-HARVEST WHEAT
014	NLA		Not Available	HINGE FOR DOOR
015	Y330102			FRONT PANEL-WHITE

016	NLA		Not Available	FRONT PANEL-ALMOND
017	NLA		Not Available	FRONT PANEL-HARVEST WHEAT
018	<a href="#">Y330103</a>			Lock
019	NLA		Not Available	FRONT PANEL-WHITE
020	330108L		Not Available	FRONT PANEL-ALMOND
021	330108M		Not Available	FRONT PANEL-HARVEST WHEAT
022	NLA		Not Available	TIMER W/KNOB AND PIN
023	NLA		Not Available	MOUNTING PLATE (ACCUMULATOR)
024	Y330145		Not Available	CONTA ACCUMULATOR ASSEMBLY
025	<a href="#">Y330147</a>			Part Not Used
026	NLA		Not Available	HANDLE & PIN KIT
027	NLA		Not Available	DOOR-WHITE
028	NLA		Not Available	DOOR-ALMOND
029	NLA		Not Available	DOOR-HARVEST WHEAT
030	Y330192		Not Available	SWITCH, PUSH TO START
031	NLA		Not Available	DOOR-WHITE
032	NLA		Not Available	DOOR-ALMOND
033	NLA		Not Available	DOOR-HARVEST WHEAT
034	331014	<a href="#">8281196</a>		Screw
035	NLA		Not Available	SCREW - HANDLE TO DOOR
036	331032	<a href="#">61002031</a>		Screw, Handle
037	<a href="#">331036</a>			Washer-Front Panel Screws
038	<a href="#">331041</a>			Button-Push-To-Start Switch
039	<a href="#">331061</a>			Knob For Temperature Contro
040	331064		Not Available	MAGNET FOR DOOR HANDLE
041	331071		Not Available	STRIKE PLATE FOR DOOR
042	331083		Not Available	SUPPORT FOR DOOR GLASS
043	NLA		Not Available	ACTUATOR FOR DOOR SWITCH
044	NLA		Not Available	TRIM STRIP-LOWER FRONT PANE
045	NLA		Not Available	TRIM BAR FOR UPPER PANEL
046	NLA		Not Available	POLE BLOCK FOR DOOR MAGNET
047	331101		Not Available	BEZEL FOR TIMER-ACCUMULATOR
048	NLA		Not Available	HINGE RIVET
049	NLA		Not Available	DOWEL PIN FOR HANDLE
050	NLA		Not Available	INSTRUCTION PLATE-CT
051	NLA		Not Available	SCREW-TEMP CONTROL LEVER
052	<a href="#">331151</a>			Lever-Temperature Control
053	<a href="#">331165</a>			Gasket For Door Glass
054	<a href="#">331166</a>			Glass For Door
055	<a href="#">331167</a>			Gasket For Door-Outer
056	<a href="#">331185</a>			Hinge Pin For Door
057	911852	<a href="#">486009</a>		Lockwasher