



014	<a href="#">1330143</a>	Not Available	ASSEMBLY
015	<a href="#">330184</a>		Timer Accumulator-25
016	Y330192	Not Available	SWITCH, PUSH TO START
017	331014	<a href="#">8281196</a>	Screw
018	331032	<a href="#">61002031</a>	Screw, Handle
019	<a href="#">331036</a>		Washer-Front Panel Screws
020	<a href="#">331041</a>		Button-Push-To-Start Switch
021	NLA	Not Available	TIMER DIAL - CA 60 MINUTES
022	<a href="#">331061</a>		Knob For Temperature Contro
023	NLA	Not Available	KNOB FOR TIMER
024	NLA	Not Available	MOUNTING PLATE FOR TIMER
025	NLA	Not Available	TRIM BAR FOR UPPER PANEL
026	331101	Not Available	BEZEL FOR TIMER-ACCUMULATOR
027	NLA	Not Available	INSTRUCTION PLATE (CA)
028	NLA	Not Available	INSTRUCTION PLATE - CM
029	NLA	Not Available	INSTRUCTION PLATE-CT
030	NLA	Not Available	MOUNTING PLATE-TICKET CONT
031	NLA	Not Available	INSTRUCT LABEL - SINGLE COI
032	<a href="#">331151</a>		Lever-Temperature Control

