


Maytag LDG34CQ 04 - DOOR, DOOR SWITCH, & COIN BOX

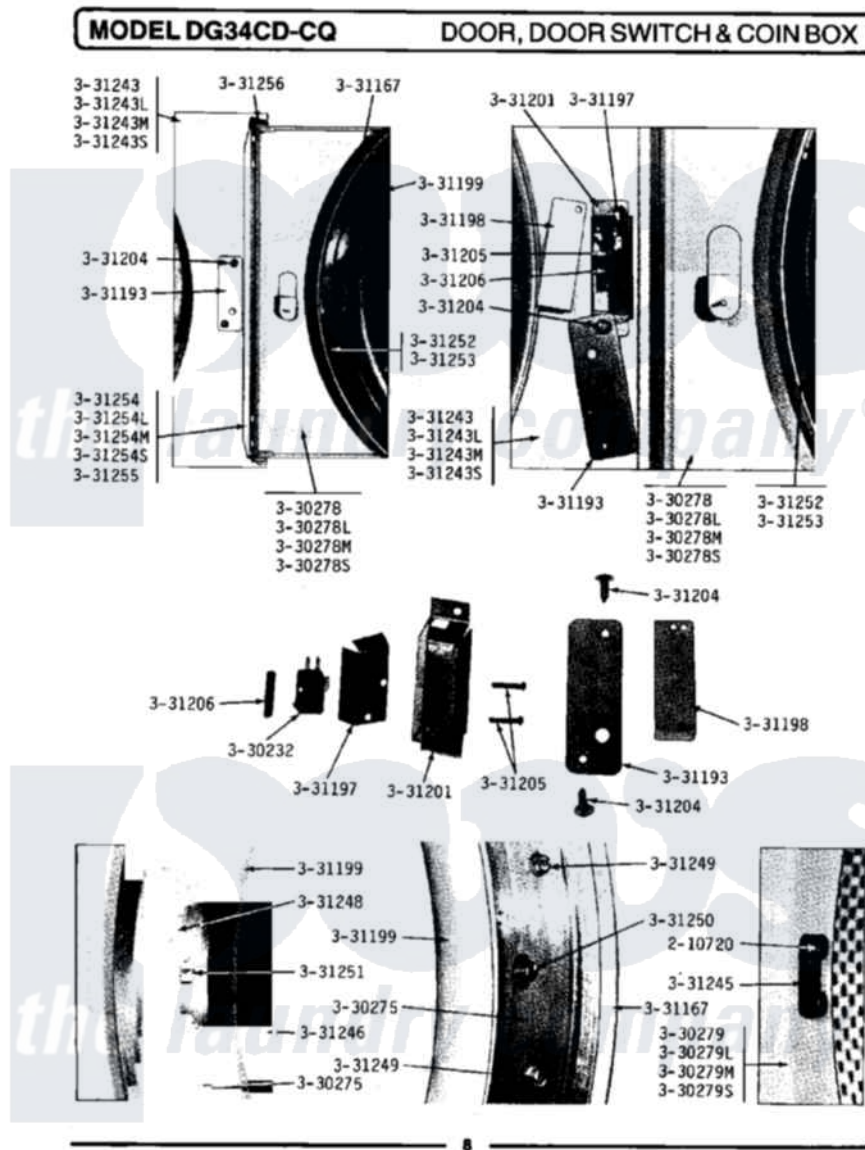

Maytag [Residential Maytag LDG34CQ Dryer Parts](#) Parts Diagram 04 - DOOR, DOOR SWITCH, & COIN BOX
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	210720			Rivet, Bearing To Tumbler Frmt
002	Y330232		Not Available	DOOR SWITCH
003	Y330275			Door Assembly
004	NLA		Not Available	COIN BOX, WHITE
005	330276L		Not Available	COIN BOX-ALMOND
006	NLA		Not Available	COIN BOX - HARVEST WHEAT
007	NLA		Not Available	HINGE ASSEMBLY-WHITE
008	NLA		Not Available	HINGE ASSEMBLY-ALMOND
009	NLA		Not Available	HINGE ASSEMBLY-HARVEST WHEA
011	NLA		Not Available	FRONT PANEL-WHITE
012	NLA		Not Available	FRONT PANEL-ALMOND
020	331199		Not Available	GASKET FOR DOOR GLASS
023	NLA		Not Available	SCREW
024	331197		Not Available	SHIELD FOR DOOR SWITCH
"	NLA		Not Available	TWIN FASTENER

025	331198		Actuator For Door Switch
"	NLA	Not Available	FRONT PANEL-WHITE
029	331204	61003351	Screw, Handle To Frame
"	331245		Catch For Door
030	331193	Not Available	COVER FOR DOOR SWITCH BOX
"	331246	Not Available	GLASS FOR DOOR
031	NLA	Not Available	FRONT PANEL-HARVEST WHEAT
032	331243L	Not Available	FRONT PANEL-ALMOND
"	NLA	Not Available	SCREW FOR DOOR HANDLE
033	331201		Door Switch Box
"	331250		Stud For Door Catch
039	331252	3400094	Screw, 10-32 X 3/8
"	NLA	Not Available	HINGE STRAP-HARVEST WHEAT
040	331253	3400029	Nut, Adapter Plate
041	NLA	Not Available	FRONT PANEL-HARVEST WHEAT
042	331251	Y707702	Locknut
"	331256		Screw
043	NLA	Not Available	HINGE STRAP-WHITE
044	331167		Gasket For Door-Outer
"	331258	Not Available	LATCH FOR COIN BOX
046	331254L		Hinge Strap-Almond
047	NLA	Not Available	WASHER FOR LOCK
048	NLA	Not Available	WASHER - UNDER LOCK HEAD

the laundry company[®]

the laundry company[®]