


Maytag LDG410 01 - CONTROL PANEL

MODEL DE-DG410 CONTROL PANEL

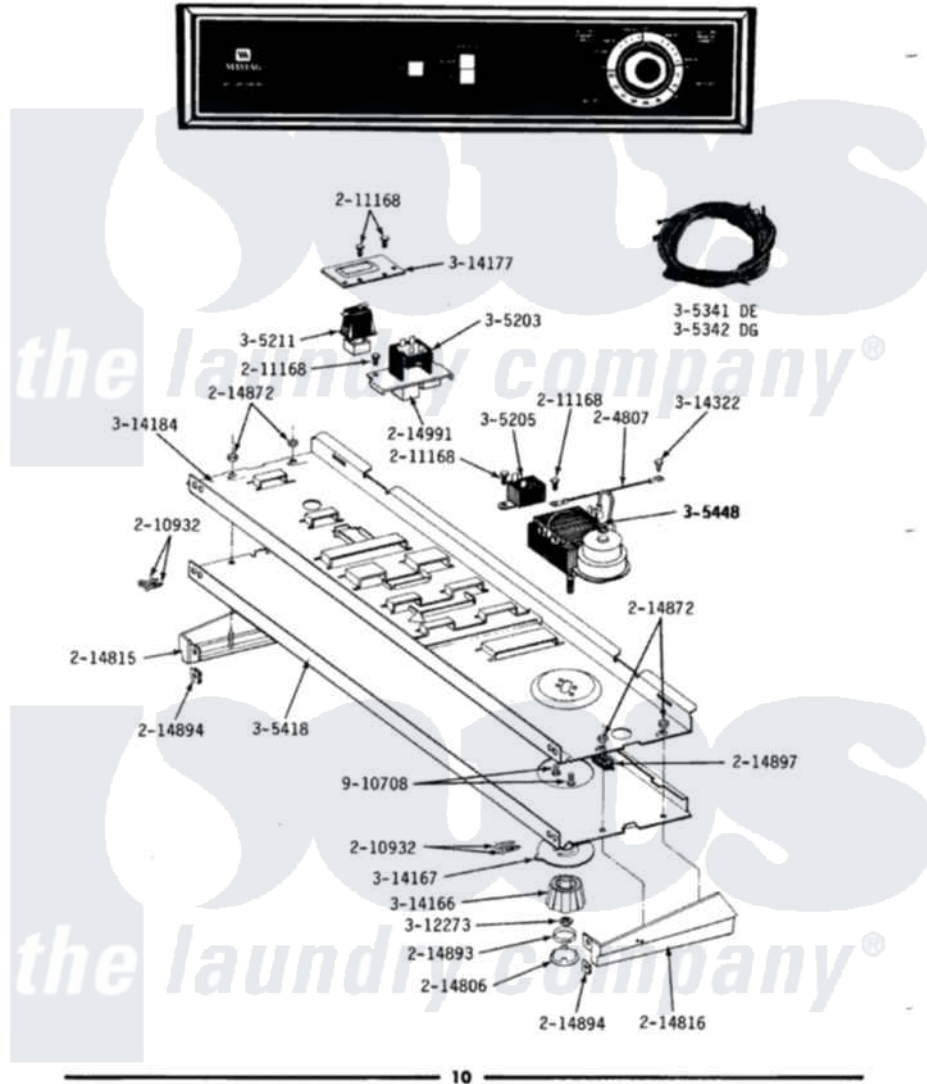

Maytag [Residential Maytag LDG410 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	204807			Ground Wire, Supp. Plte To Top Cover
2	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
3	211168	W10139210		Screw, 8-18 X 5/16
4	214806		Not Available	CAP FOR TIMER KNOB
5	214815			End Cap F/Control Panel-LH
6	214816			End Cap F/Control Panel-RH
7	214872			Palnut, End Cap Note: Nut, Lamp Holder
8	214893		Not Available	DETENT RING F/TIMER KNOB CA
9	214894			Fastener, End Cap
10	214897			Pad, Control Panel
11	214991			Button For Switch
12	305203		Not Available	TEMPERATURE SELECTOR SWITCH
13	305205	694419		Mini-Buzzer

14	305211		Push To Start Switch
15	305448		Timer
16	305341		Main Wire Harness
17	305342	Not Available	MAIN WIRE HARNESS
18	305418	Not Available	CONTROL PANEL
19	312273		Nut, Control Knob
20	Y314166		Knob For Timer
21	314167	Not Available	TIMER DIAL INDICATOR
22	314177	Not Available	BRACKET FOR START SWITCH
23	314184		Back Up Plate
24	Y314322	211251	Screw, Transformer
25	910708	488234	Screw 8-32 X 1/4

the laundry company[®]

the laundry company[®]

the laundry company[®]