


# Maytag LDG410 02 - FRONT PANEL & DOOR ASSEMBLY

**MODELS DE-DG110-210-410-510-610-710-810**

**FRONT PANEL & DOOR ASSEMBLY  
ORIGINAL & SERIES 01**

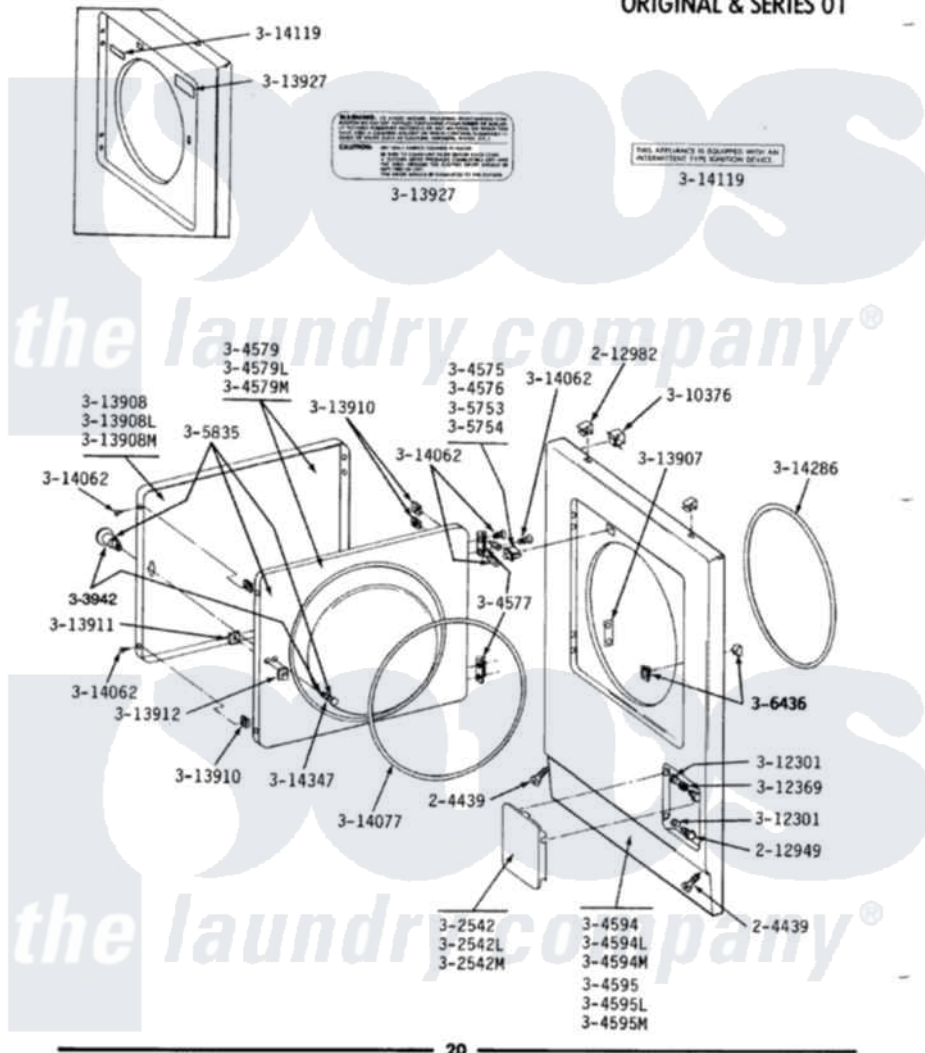

Maytag Residential Maytag LDG410 Dryer Parts Parts Diagram 02 - FRONT PANEL & DOOR ASSEMBLY  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
2	212949	<a href="#">22001866</a>		Screw, Relay
3	212982	<a href="#">22001650</a>		Fastener, Spring
5	302542L		Not Available	PART NOT USED. (DG ONLY)
7	Y304575	<a href="#">W10169313</a>		Switch-Dor
8	Y304576	<a href="#">W10169313</a>		Switch-Dor
9	Y304577	<a href="#">33001230</a>		Hinge, Door
10	<a href="#">306436</a>			Door Latch Kit--W
12	304579L		Not Available	DOOR-ALMOND
15	304594L		Not Available	FRONT PANEL-ALMOND
20	Y305753	<a href="#">W10169313</a>		Switch-Dor
21	Y305754	<a href="#">W10169313</a>		Switch-Dor
22	305835		Not Available	INNER DOOR WITH KNOB & SCRE
23	303942		Not Available	KNOB AND SCREW
24	<a href="#">Y310376</a>			Clip, Door Switch Harness
25	312301		Not Available	BUSHING FOR ACCESS STUD

26	<a href="#">312369</a>		Sleeve, Access Panel Stud Part Not Used
27	<a href="#">Y313907</a>		Fastener, Twin
29	313908L	Not Available	DOOR PANEL-ALMOND
31	<a href="#">Y313910</a>		Clip, Door Liner To Outer Panel
32	<a href="#">Y313911</a>		Door Strike Retainer
33	Y313912	<a href="#">306436</a>	Door Latch Kit--W
34	Y313927		INSTRUCTION LABEL
35	<a href="#">Y314062</a>		Screw, Door Hinge And Panel
36	<a href="#">314077</a>		Door Seal
37	314119	Not Available	GAS IGNITION LABEL
38	<a href="#">314286</a>		Seal For Front Panel
39	314347	<a href="#">400021-1</a>	Screw

*the laundry company*<sup>®</sup>

**lows**  
*the laundry company*<sup>®</sup>

**lows**  
*the laundry company*<sup>®</sup>