


# Maytag LDG5004AAW 03 - CONTROL PANEL

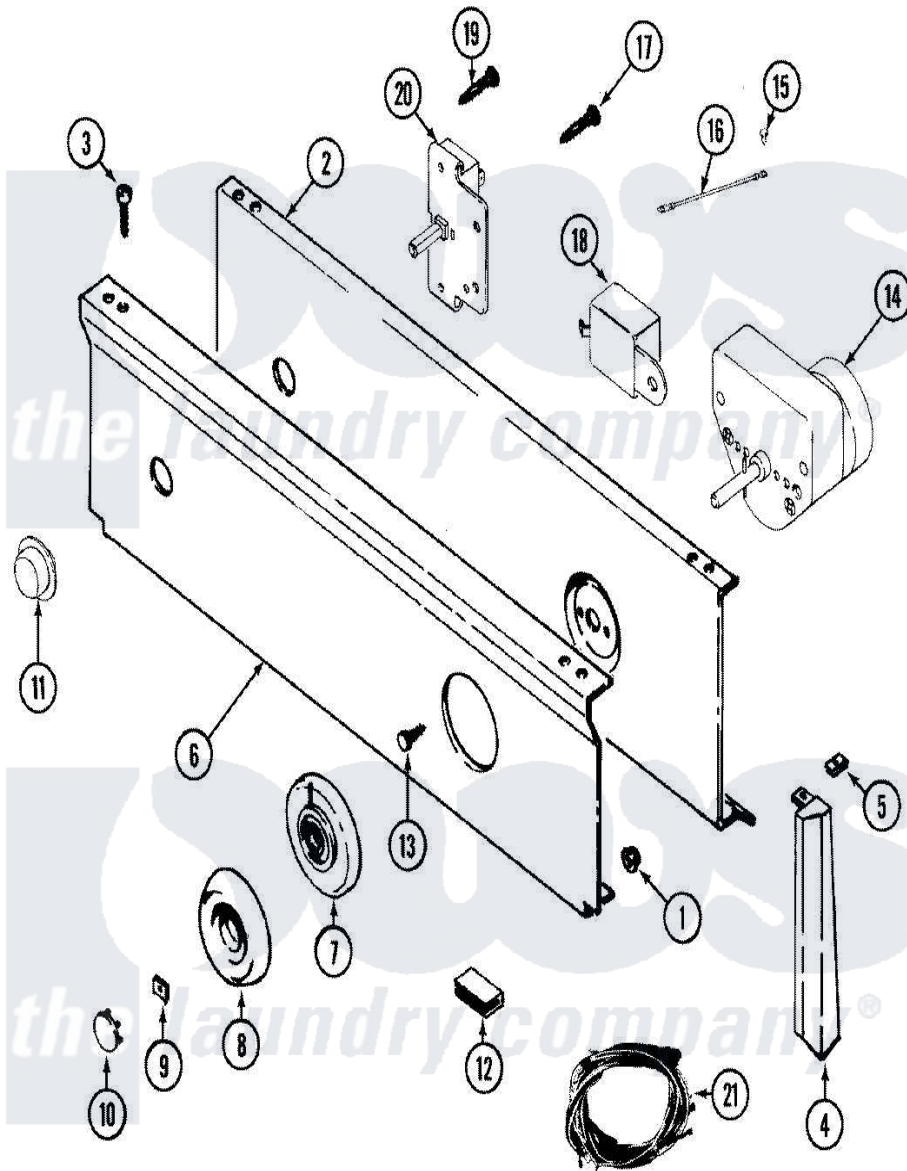

Maytag Residential Maytag LDG5004AAW Dryer Parts Parts Diagram 03 - CONTROL PANEL  
 Click on the part number to view part

| Item | Original Part Number     | Replaced By              | Status        | Part Description                                |
|------|--------------------------|--------------------------|---------------|---|
| 1    | <a href="#">214872</a>   |                          |               | Palnut, End Cap Note: Nut, Lamp Holder          |
| 2    | 33001237                 |                          | Not Available | PLATE, SUPPORT                                  |
| 3    | 314728                   | <a href="#">210932</a>   |               | Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct |
| 4    | <a href="#">207927</a>   |                          |               | End Cap, Control Panel                          |
| "    | 207928                   |                          | Not Available | END CAP, CTRL. PNL. (LT-BLK)                    |
| "    | 22001562                 | <a href="#">22001290</a> |               | End Cap, Control Panel                          |
| "    | 22001563                 | <a href="#">22001288</a> |               | End Cap, Control Panel                          |
| 5    | <a href="#">214894</a>   |                          |               | Fastener, End Cap                               |
| 6    | 33001091                 |                          | Not Available | PANEL, CONTROL (BLK)                            |
| 7    | 33001182                 |                          | Not Available | SKIRT, TIMER DIAL (BLK)                         |
| 8    | <a href="#">315041</a>   |                          |               | Knob, Timer                                     |
| 9    | <a href="#">312273</a>   |                          |               | Nut, Control Knob                               |
| 10   | 216193                   |                          | Not Available | CAP, TIMER KNOB (BLK)                           |
| 11   | <a href="#">33001184</a> |                          |               | Button  |

|    |                          |                          |                                      |
|----|--------------------------|--------------------------|--------------------------------------|
| 12 | <a href="#">214897</a>   |                          | Pad, Control Panel                   |
| 13 | 315317                   | <a href="#">488234</a>   | Screw 8-32 X 1/4                     |
| 14 | <a href="#">Y308218</a>  |                          | Timer RPR                            |
| 15 | 210186                   | <a href="#">3370225</a>  | Screw                                |
| 16 | <a href="#">204807</a>   |                          | Ground Wire, Supp. Plte To Top Cover |
| 17 | 315317                   | <a href="#">488234</a>   | Screw 8-32 X 1/4                     |
| 18 | Y308205                  | <a href="#">33001623</a> | Buzzer, Non-Adjustable               |
| 19 | 315317                   | <a href="#">488234</a>   | Screw 8-32 X 1/4                     |
| 20 | 33001232                 |                          | Not Available SWITCH, PUSH TO START  |
| 21 | <a href="#">33001528</a> |                          | Harness, Wire                        |
| "  | <a href="#">33001119</a> |                          | Harness, Wire                        |

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>