


# Maytag LDG510 01 - CONTROL PANEL

MODEL DE-DG510

CONTROL PANEL

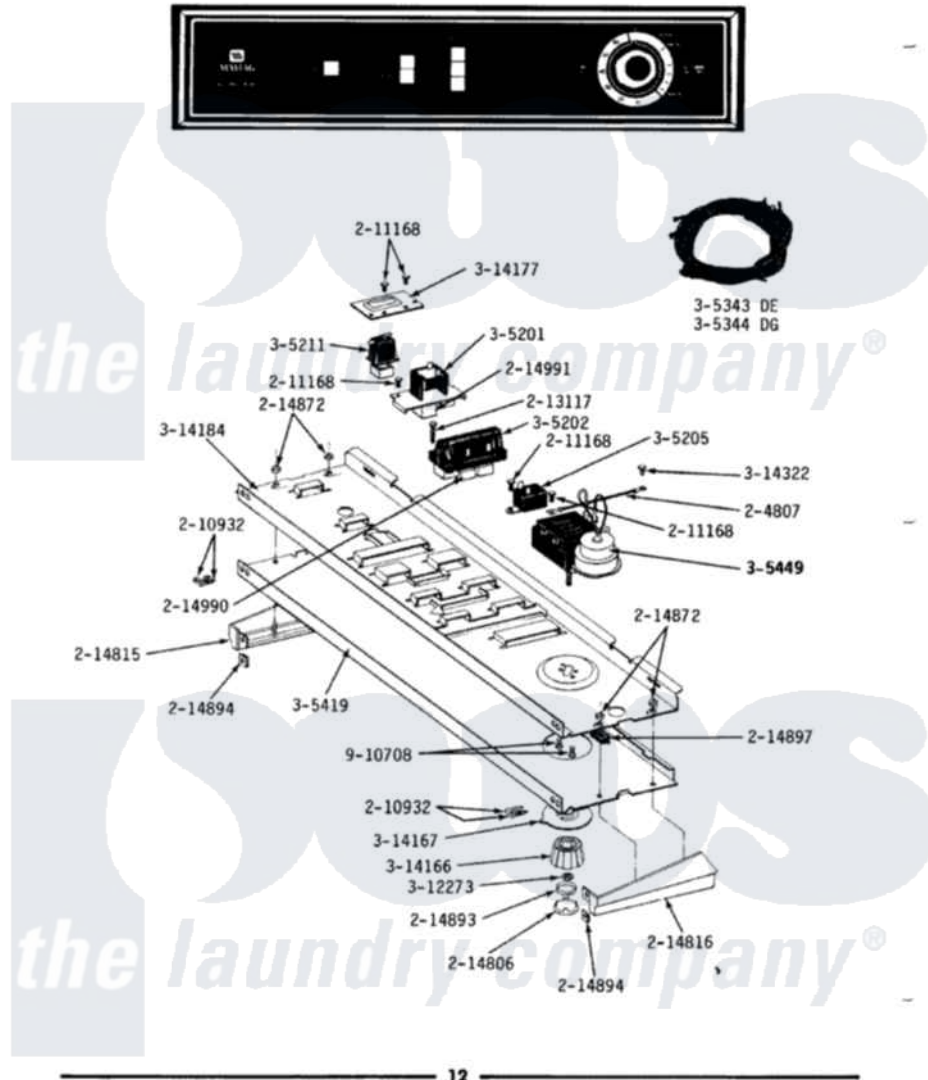

12

Maytag [Residential Maytag LDG510 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">204807</a>			Ground Wire, Supp. Plte To Top Cover
2	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
3	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
4	213117	<a href="#">67006908</a>		Screw, Ice Rack
5	214806		Not Available	CAP FOR TIMER KNOB
6	<a href="#">214815</a>			End Cap F/Control Panel-LH
7	<a href="#">214816</a>			End Cap F/Control Panel-RH
8	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
9	214893		Not Available	DETENT RING F/TIMER KNOB CA
10	<a href="#">214894</a>			Fastener, End Cap
11	<a href="#">214897</a>			Pad, Control Panel
12	<a href="#">214990</a>			Button For Switch
13	<a href="#">214991</a>			Button For Switch
14	<a href="#">305201</a>			Auto Dry Or Chime Switch

15	305202	Not Available	TEMPERATURE SELECTOR SWITCH
16	305205	<a href="#">694419</a>	Mini-Buzzer
17	<a href="#">305211</a>		Push To Start Switch
18	<a href="#">305449</a>		Timer
19	305343	Not Available	MAIN WIRE HARNESS
20	305344	Not Available	MAIN WIRE HARNESS
21	305419	Not Available	CONTROL PANEL
22	<a href="#">312273</a>		Nut, Control Knob
23	<a href="#">Y314166</a>		Knob For Timer
24	314167	Not Available	TIMER DIAL INDICATOR
25	314177	Not Available	BRACKET FOR START SWITCH
26	<a href="#">314184</a>		Back Up Plate
27	Y314322	<a href="#">211251</a>	Screw, Transformer
28	910708	<a href="#">488234</a>	Screw 8-32 X 1/4

