


Maytag LDG710 03 - FRONT VIEW

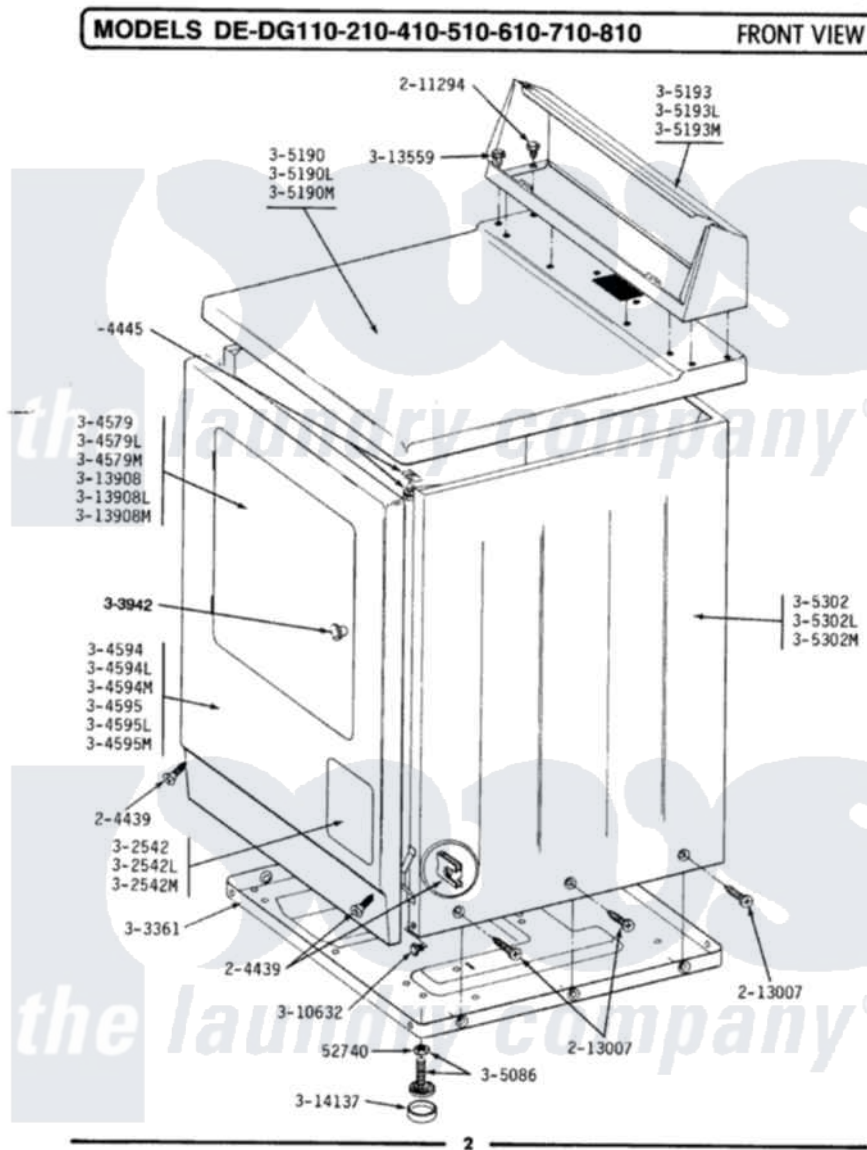

Maytag Residential Maytag LDG710 Dryer Parts Parts Diagram 03 - FRONT VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y052740	62739		Nut, Lock
2	204439			Screw And Fstner Assembly
3	204445			Screw And Fastener Assembly
4	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	213007			Xfor Cabinet See Cabinet, Back
7	302542L		Not Available	PART NOT USED. (DG ONLY)
9	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
11	304579L		Not Available	DOOR-ALMOND
14	304594L		Not Available	FRONT PANEL-ALMOND
16	304595	3369903		Dishrack
17	304595L		Not Available	FRONT PANEL-ALMOND
18	304595M		Not Available	FRONT PANEL-HARVEST WHEAT
19	Y305086			Adjustable Leg And Nut
21	305190L	307104L		Top Cover Assembly

24	305193L		Console
27	305302L	Not Available	CABINET-ALMOND
29	303942	Not Available	KNOB AND SCREW
30	Y310632	1163839	Screw
31	Y313559		Screw
33	313908L	Not Available	DOOR PANEL-ALMOND
35	Y314137		Foot, Rubber

