


Maytag LDG713 03 - FRONT VIEW

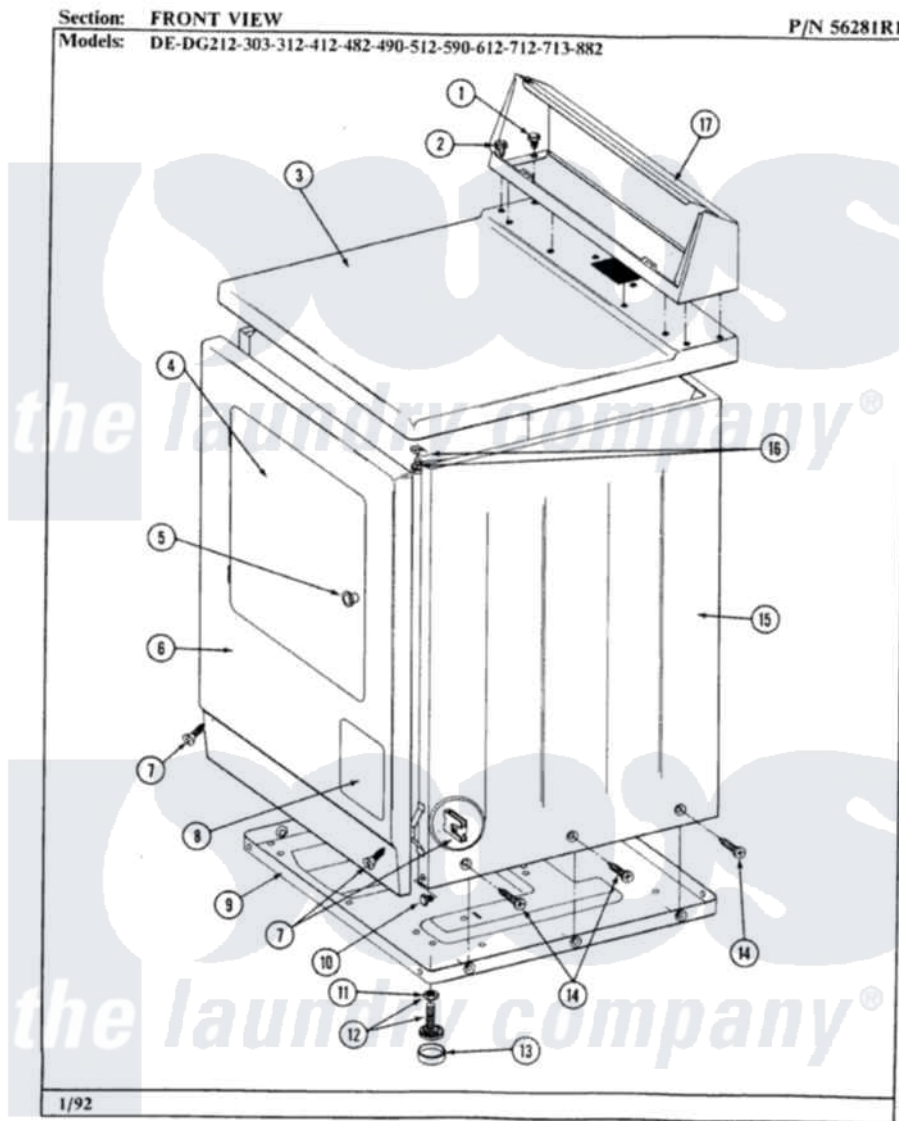

26

Maytag Residential Maytag LDG713 Dryer Parts Parts Diagram 03 - FRONT VIEW
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	211194		Not Available	LOCK WASHER
2	Y313559			Screw
3	307104L			Top Cover Assembly
4	306668L		Not Available	DOOR, ALMOND
5	303942		Not Available	KNOB AND SCREW
6	304594L		Not Available	FRONT PANEL-ALMOND
7	204439			Screw And Fstner Assembly
8	302542L		Not Available	PART NOT USED. (DG ONLY)
9	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
10	Y310632	1163839		Screw
11	Y052740	62739		Nut, Lock
12	Y305086			Adjustable Leg And Nut
13	Y314137			Foot, Rubber
14	213007			Xfor Cabinet See Cabinet, Back
15	305302L		Not Available	CABINET-ALMOND

