


Maytag LDG7480ABW 01 - CABINET-FRONT

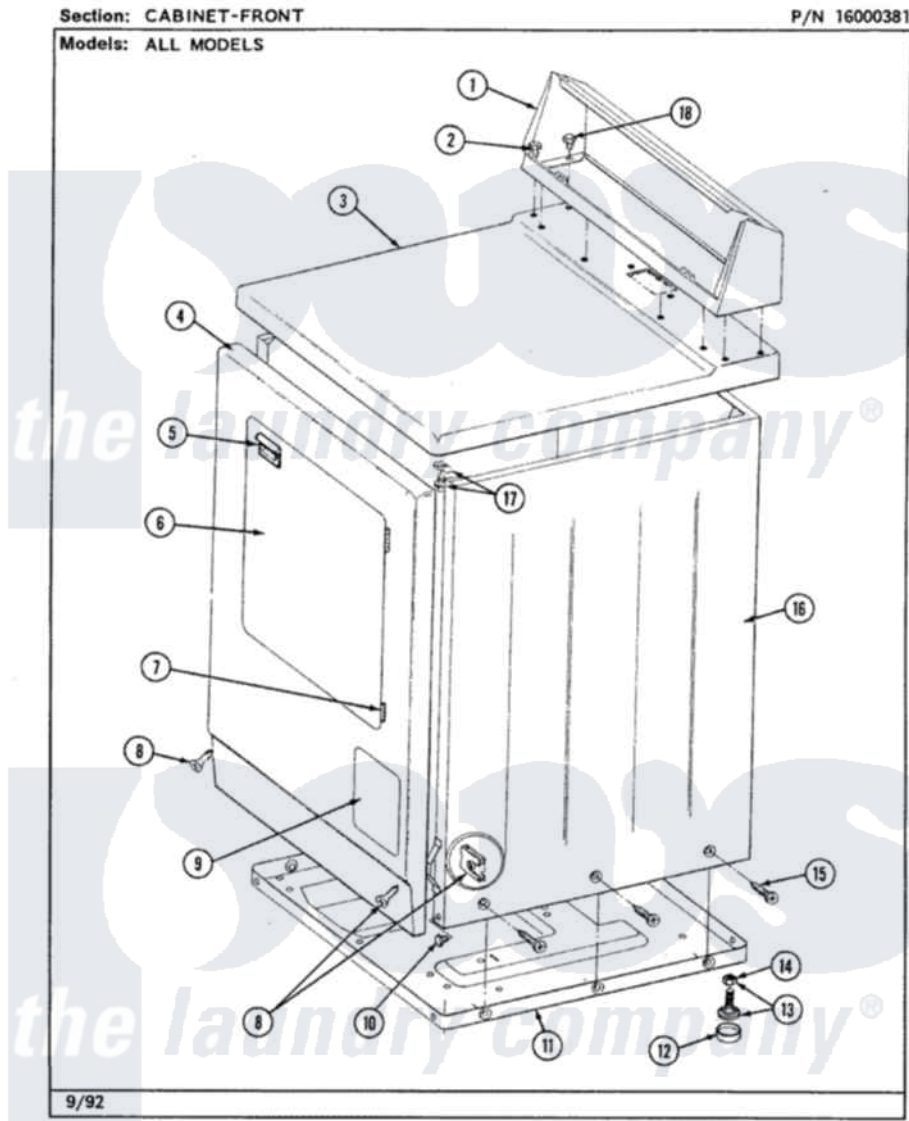

4

Maytag Residential Maytag LDG7480ABW Dryer Parts Parts Diagram 01 - CABINET-FRONT
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y305193			Console
2	Y313559			Screw
3	307104			Top Cover Assembly
4	Y307998			Front Panel
5	314946			Handle White
6	314966			Panel, Outer
"	Y307111		Not Available	DOOR ASSY. COMPLETE (WHT)
7	307099	33001230		Hinge, Door
8	204439			Screw And Fstner Assembly
9	302542		Not Available	PART NOT USED. (DG ONLY)
10	Y310632	1163839		Screw
11	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
12	Y314137			Foot, Rubber
13	Y305086			Adjustable Leg And Nut
14	Y052740	62739		Nut, Lock

15	213007		Xfor Cabinet See Cabinet, Back
16	307124		Cabinet
17	204445		Screw And Fastener Assembly
18	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping

