


# Maytag LDG8420ABW 03 - CONTROL PANEL

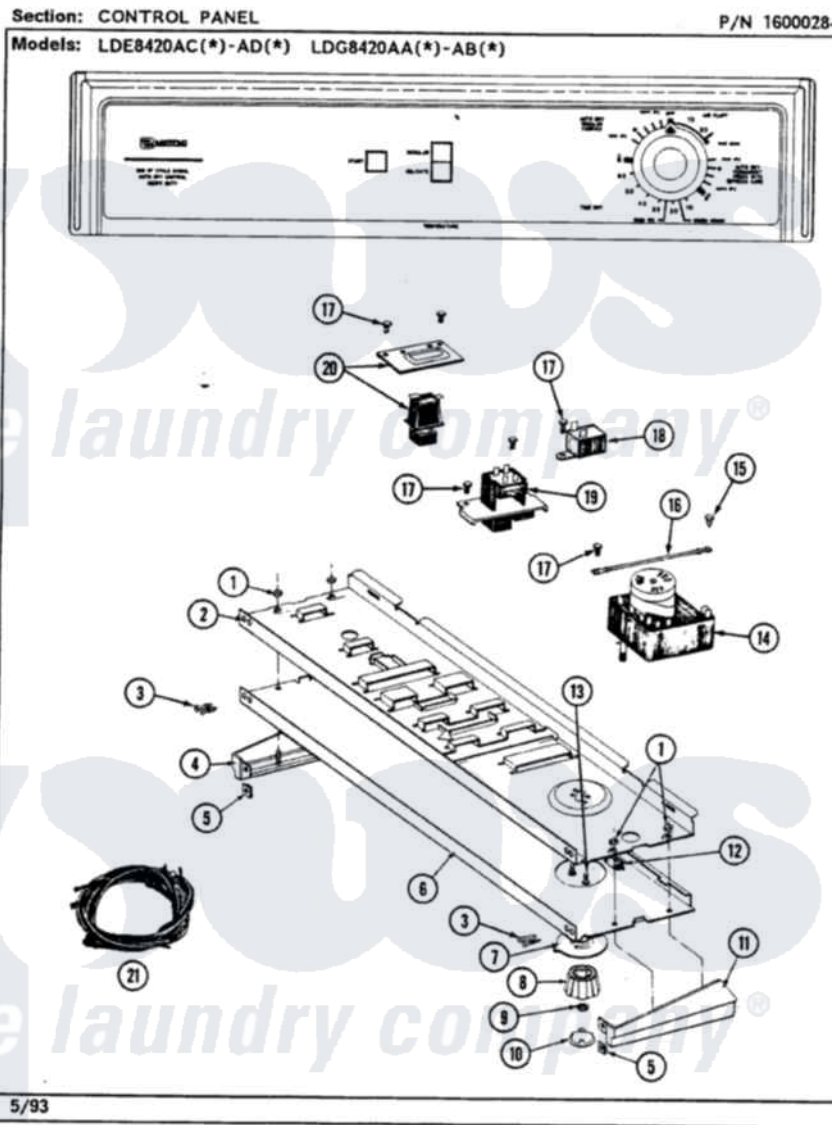

Maytag Residential Maytag LDG8420ABW Dryer Parts Parts Diagram 03 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
2	<a href="#">314184</a>			Back Up Plate
3	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
4	207215		Not Available	END CAP LH
5	<a href="#">214894</a>			Fastener, End Cap
6	307906		Not Available	CONTROL PANEL
7	<a href="#">315042</a>			Dial Skirt
8	<a href="#">315041</a>			Knob, Timer
9	<a href="#">312273</a>			Nut, Control Knob
10	314723	<a href="#">W10133501</a>		Cap, Knob
11	207216		Not Available	END CAP RH
12	<a href="#">214897</a>			Pad, Control Panel
13	315317	<a href="#">488234</a>		Screw 8-32 X 1/4
14	<a href="#">Y308254</a>			Timer
15	211204	<a href="#">00767</a>		Screw, 8A X 3/8 HeX Washer

15	211294	<a href="#">30707</a>	Head Tapping
16	<a href="#">204807</a>		Ground Wire, Supp. Plte To Top Cover
17	211168	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
18	305205	<a href="#">694419</a>	Mini-Buzzer
19	<a href="#">207365</a>		2 Button Switch
20	<a href="#">307305</a>		Switch Push To Start
21	308496	Not Available	HARNES, WIRE
"	307293	Not Available	WIRE HARNES
22	16000327	Not Available	GUIDE, QUICK REF. - MAYTAG
"	315078	Not Available	MANUAL, USE & CARE
"	315092	Not Available	MANUAL, USE & CARE

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>