


Maytag LDG9824AAL 03 - CONTROL PANEL

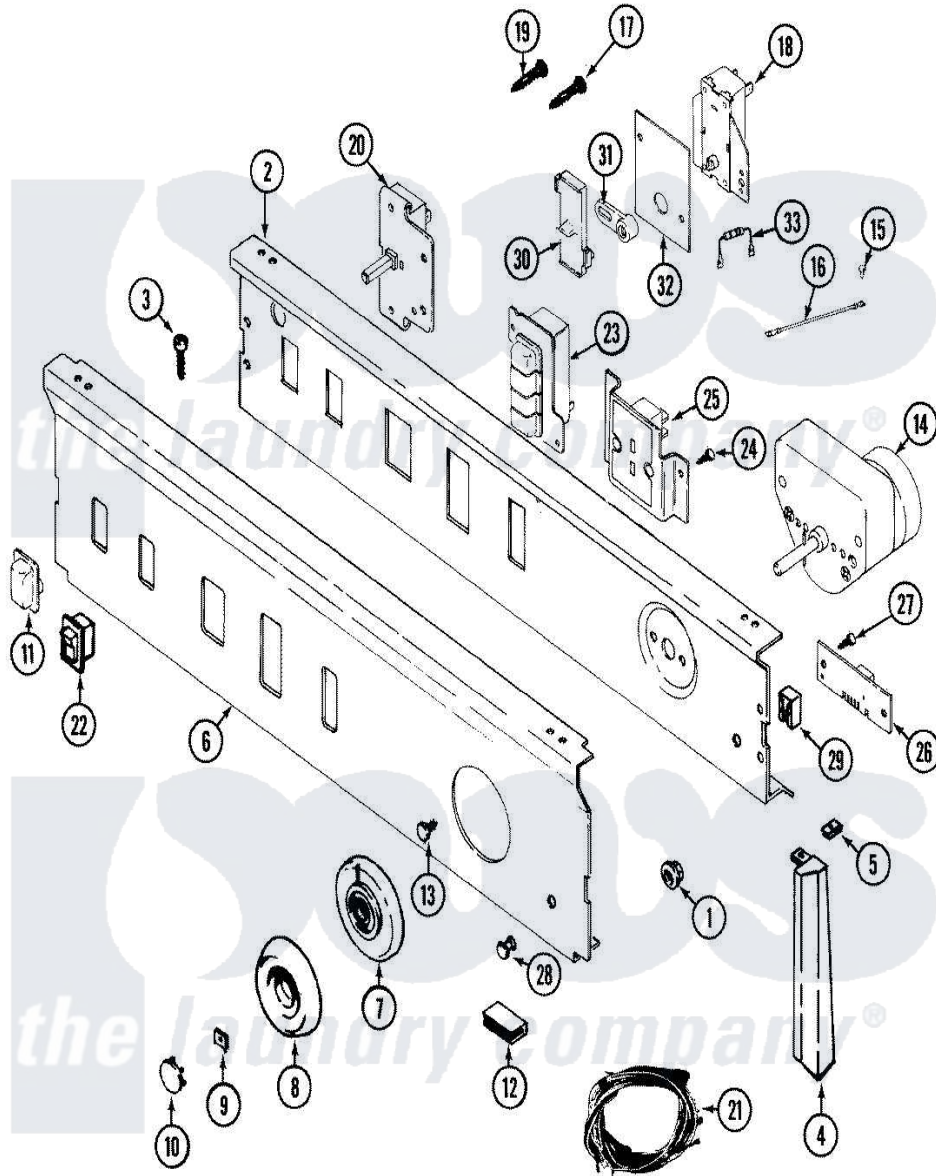

Maytag Residential Maytag LDG9824AAL Dryer Parts Parts Diagram 03 - CONTROL PANEL
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|--------------------------|------------------------|---------------|---|
| 1 | 214872 | | | Palnut, End Cap Note: Nut, Lamp Holder |
| 2 | 33001265 | | | Plate, Support |
| 3 | 314728 | 210932 | | Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct |
| 4 | 22001290 | | | End Cap, Control Panel |
| " | 22001288 | | | End Cap, Control Panel |
| 5 | 214894 | | | Fastener, End Cap |
| 6 | 33001101 | | | Panel, Control |
| 7 | 33001182 | | Not Available | SKIRT, TIMER DIAL (BLK) |
| 8 | 315041 | | | Knob, Timer |
| 9 | 312273 | | | Nut, Control Knob |
| 10 | 216193 | | Not Available | CAP, TIMER KNOB (BLK) |
| 11 | 33001186 | | Not Available | BUTTON (BLK) |
| 12 | 214897 | | | Pad, Control Panel |
| 13 | 315317 | 488234 | | Screw 8-32 X 1/4 |
| 14 | 33001035 | | | Timer |

| | | | | |
|----|--------------------------|-----------------------------|---------------|--------------------------------------|
| 15 | 210186 | 3370225 | | Screw |
| 16 | 204807 | | | Ground Wire, Supp. Plte To Top Cover |
| 17 | 315317 | 488234 | | Screw 8-32 X 1/4 |
| 18 | 308719 | | Not Available | BUZZER, ADJUSTABLE |
| 19 | 315317 | 488234 | | Screw 8-32 X 1/4 |
| 20 | 33001232 | | Not Available | SWITCH, PUSH TO START |
| 21 | 33001549 | | Not Available | HARNESS, WIRE |
| " | 33001140 | | Not Available | WIRE HARNESS, MAIN |
| " | 33001354 | | Not Available | WIRE HARNESS, MAIN |
| 22 | 22001134 | 22001135 | | Switch, Rocker |
| 23 | 33001213 | | Not Available | SWITCH, PUSH BUTTON (4 POSITIO |
| 24 | 315317 | 488234 | | Screw 8-32 X 1/4 |
| 25 | 33001047 | | | Display, Dryness Assembly |
| " | 33001046 | | | Display, Dryness Assembly |
| 26 | 33001212 | | | Board, Control-Moisture Sensor |
| 27 | 315317 | 488234 | | Screw 8-32 X 1/4 |
| 28 | 22001215 | 7730P011-60 | | Lens, Indicator Light |
| 29 | 33001224 | | | Light, Indicator |
| 30 | 33001038 | | Not Available | PAD, SLIDE |
| " | 33001180 | | | Slide, Buzzer |
| 31 | 33001039 | | | Arm, Pivot |
| 32 | 315562 | | Not Available | BRACKET, ADJ. BUZZER |
| 33 | 33001105 | | | Resistor |

the laundry company[®]

the laundry company[®]