


Maytag LNC6760A71 03 - CONTROL PANEL

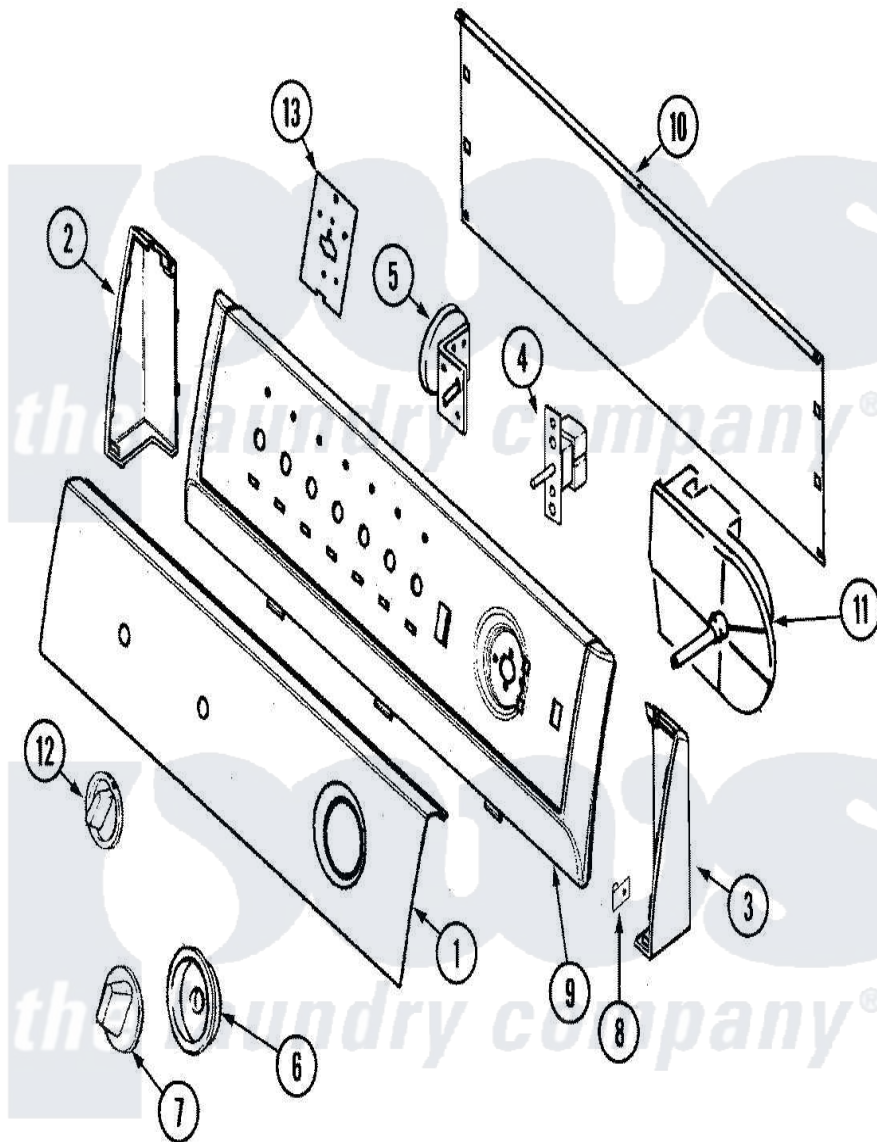

Maytag [Residential Maytag LNC6760A71 Washer Parts](#) Parts Diagram 03 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	21001582			Panel, Control
2	21001546			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	21001547			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	21001139			Switch, Water Temp. 3 Position
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	21001554			Switch, Water Level
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
6	21001520			Skirt, Timer Knob
7	21001526			Knob, Timer
8	25-7851			Speedclip, End Cap To Top
9	21001553			Frame

10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7853	25-7933	Ring, Retaining
"	25-3457		Screw, Sems
"	21001527		Shield, Rear
11	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	21001522		Timer
12	21001544		Knob, Selector
13	53-2504	31001193	Pad, Shield
"	21001517		Shield, Control
"	31001193		Pad, Shield

