


Maytag LSE7804ACL 08 - FRONT PANEL & CONTROL PANEL

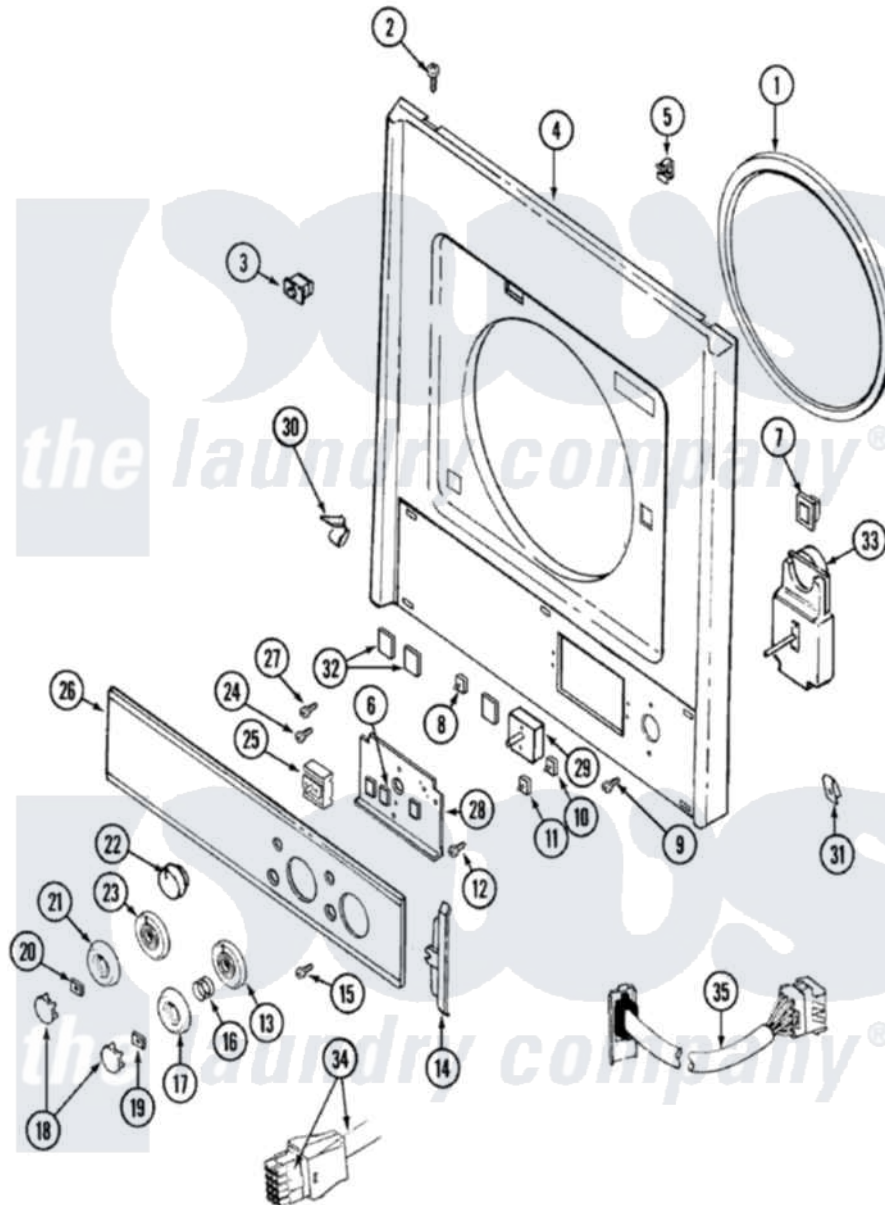

Maytag Residential Maytag LSE7804ACL Stacked Washer and Dryer Parts Parts Diagram 08 - FRONT PANEL & CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	314286			Seal For Front Panel
2	212277			Screw, No.8 X 1/2 Inch
3	33001509	W10169313		Switch-Dor
"	Y305753	W10169313		Switch-Dor
4	33001486	98008544		Screw
"	33001190	33002366		Panel- FRO
5	Y310376			Clip, Door Switch Harness
6	315287			Bumper Small
7	Y304578	LA-1003		Door Catch Kit
8	308017			Switch, Dryer Temperature
9	216042	22001627		Screw
10	207782			Switch, Water Temperature
11	22001188			Switch, Rotary
12	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
13	22001034		Not Available	KNOB, TIMER (BLK)

14	315267	Not Available	END CAP, CONTROL PANEL (BLK)
15	211000		SCREW, BRAKE DRUM (HEX HEAD)
16	211065		Spring, Index Wheel
17	215828		Knob, Timer
18	216193	Not Available	CAP, TIMER KNOB (BLK)
19	211605		Bezel, Timer Dial
20	312273		Nut, Control Knob
21	315041		Knob, Timer
22	33001291		Knob, Selector Switch
23	33001009		Dial, Dryer Timer NA
24	315317	488234	Screw 8-32 X 1/4
25	Y308025		Switch, Push To Start
26	33001008	Not Available	PANEL, CONTROL (BLK)
27	215952		Screw
28	315237		Bracket For Switch And Timer
29	33001034		Timer, Dryer
30	314482		Fastener, Spring
31	33001292	488660	Nut, Speed
32	315286		Bumper Large
33	22001180		Timer
34	208772		Wire Harness
"	22001427	Not Available	WIRE HARNESS (UPR) NA
35	208776	Not Available	WIRE HARNESS (LOWER)
"	22001432		Wire Harness
36	33001368		Wire Harness, Dryer
"	33001042		Wire Harness, Dryer
"	33001553		Harness, Wire

