


# Maytag LSE7806GGE 08 - FRONT PANEL & CONTROL PANEL

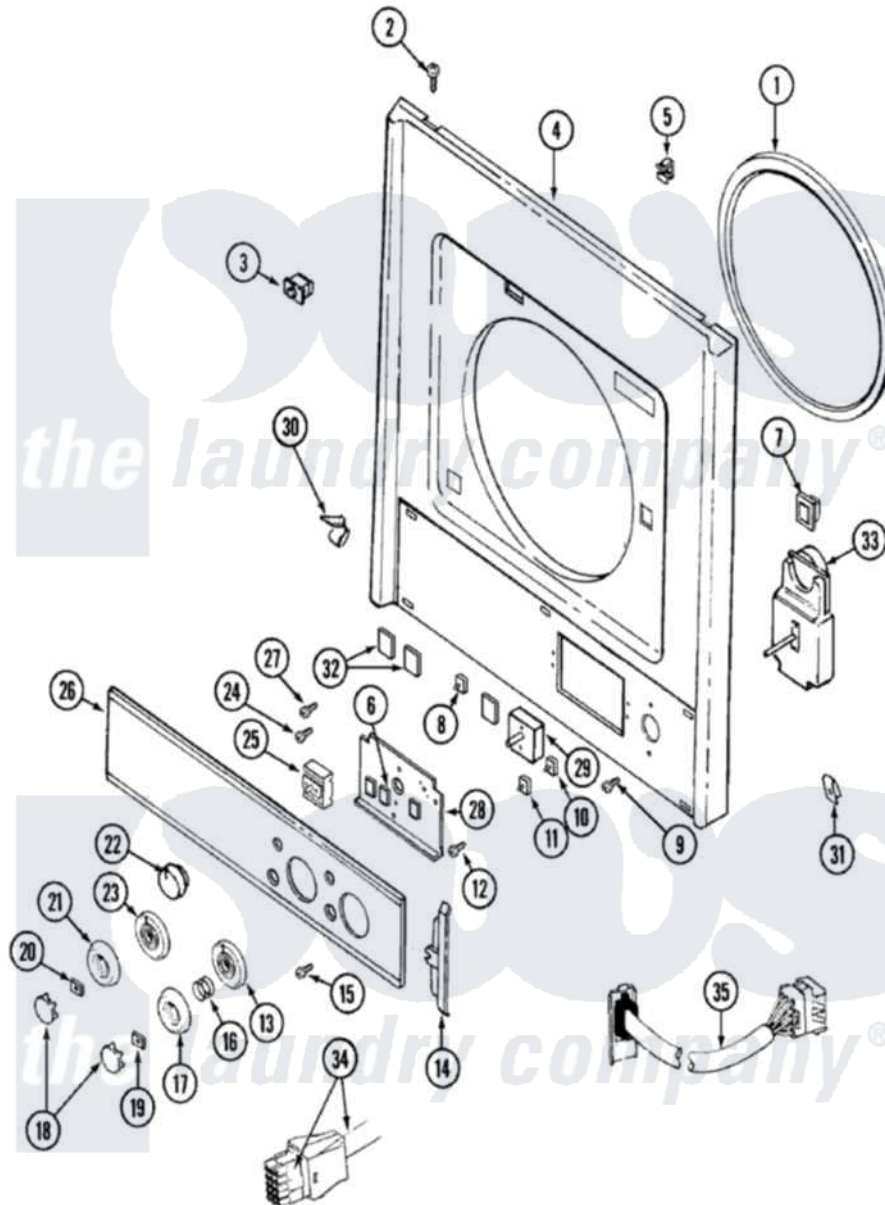

Maytag Residential Maytag LSE7806GGE Stacked Washer and Dryer Parts Parts Diagram 08 - FRONT PANEL & CONTROL PANEL

Click on the part number to view part

| Item | Original Part Number     | Replaced By              | Status | Part Description                        |
|------|--------------------------|--------------------------|--------|---|
| 1    | <a href="#">314286</a>   |                          |        | Seal For Front Panel                    |
| 2    | <a href="#">212277</a>   |                          |        | Screw, No.8 X 1/2 Inch                  |
| 3    | 33001892                 | <a href="#">33002239</a> |        | Switch, Door                            |
| 4    | <a href="#">33001191</a> |                          |        | Panel, Front                            |
| "    | 33001486                 | <a href="#">98008544</a> |        | Screw                                   |
| 5    | <a href="#">Y310376</a>  |                          |        | Clip, Door Switch Harness               |
| 6    | <a href="#">315287</a>   |                          |        | Bumper Small                            |
| 7    | Y304578                  | <a href="#">LA-1003</a>  |        | Door Catch Kit                          |
| 8    | <a href="#">308017</a>   |                          |        | Switch, Dryer Temperature               |
| 9    | 216042                   | <a href="#">22001627</a> |        | Screw                                   |
| 10   | <a href="#">22001923</a> |                          |        | Switch, Water Temperature               |
| 11   | <a href="#">22001188</a> |                          |        | Switch, Rotary                          |
| 12   | 211294                   | <a href="#">90767</a>    |        | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 13   | <a href="#">33002864</a> |                          |        | Timer Dial - Dryer                      |
| "    | <a href="#">22001925</a> |                          |        | Dial, Washer Timer                      |

|    |                          |                          |                              |
|----|--------------------------|--------------------------|------------------------------|
| 14 | <a href="#">315423</a>   |                          | End Cap, Control Panel       |
| 15 | 211000                   |                          | SCREW, BRAKE DRUM (HEX HEAD) |
| 16 | <a href="#">211065</a>   |                          | Spring, Index Wheel          |
| 17 | 22001198                 | Not Available            | KNOB, TIMER (WHT)            |
| 18 | <a href="#">22001446</a> |                          | Cap, Knob                    |
| 19 | <a href="#">211605</a>   |                          | Bezel, Timer Dial            |
| 20 | <a href="#">312273</a>   |                          | Nut, Control Knob            |
| 21 | <a href="#">33001255</a> |                          | Knob, Timer                  |
| 22 | Y308453                  | <a href="#">22001663</a> | Knob, Selector Switch        |
| 23 | 22001926                 | Not Available            | DIAL, DRYER TIMER (WHT)      |
| 24 | 315317                   | <a href="#">488234</a>   | Screw 8-32 X 1/4             |
| 25 | Y308449                  | <a href="#">Y308025</a>  | Switch, Push To Start        |
| 26 | <a href="#">33002865</a> |                          | Control Panel                |
| "  | <a href="#">22001927</a> |                          | Panel, Control               |
| 27 | <a href="#">215952</a>   |                          | Screw                        |
| 28 | <a href="#">315237</a>   |                          | Bracket For Switch And Timer |
| 29 | <a href="#">33001390</a> |                          | Timer                        |
| 30 | <a href="#">314482</a>   |                          | Fastener, Spring             |
| 31 | 33001292                 | <a href="#">488660</a>   | Nut, Speed                   |
| 32 | <a href="#">315286</a>   |                          | Bumper Large                 |
| 33 | <a href="#">22001931</a> |                          | Spacer, Timer                |
| "  | <a href="#">22001932</a> |                          | Retainer, Wire               |
| "  | 22002228                 | Not Available            | BAG, TIMER                   |
| "  | <a href="#">33001733</a> |                          | Timer, Washer                |
| 34 | <a href="#">22001930</a> |                          | Wire Harness                 |
| 35 | <a href="#">22001585</a> |                          | Harness, Wire                |
| 36 | <a href="#">33001555</a> |                          | Harness, Wire                |
| "  | <a href="#">22004233</a> |                          | Wire Harness                 |
| "  | <a href="#">22004370</a> |                          | Harness, Wire                |

