


Maytag LSG7800ABL 07 - FRONT PANEL & CONTROL PANEL
(LSG7800ABx)

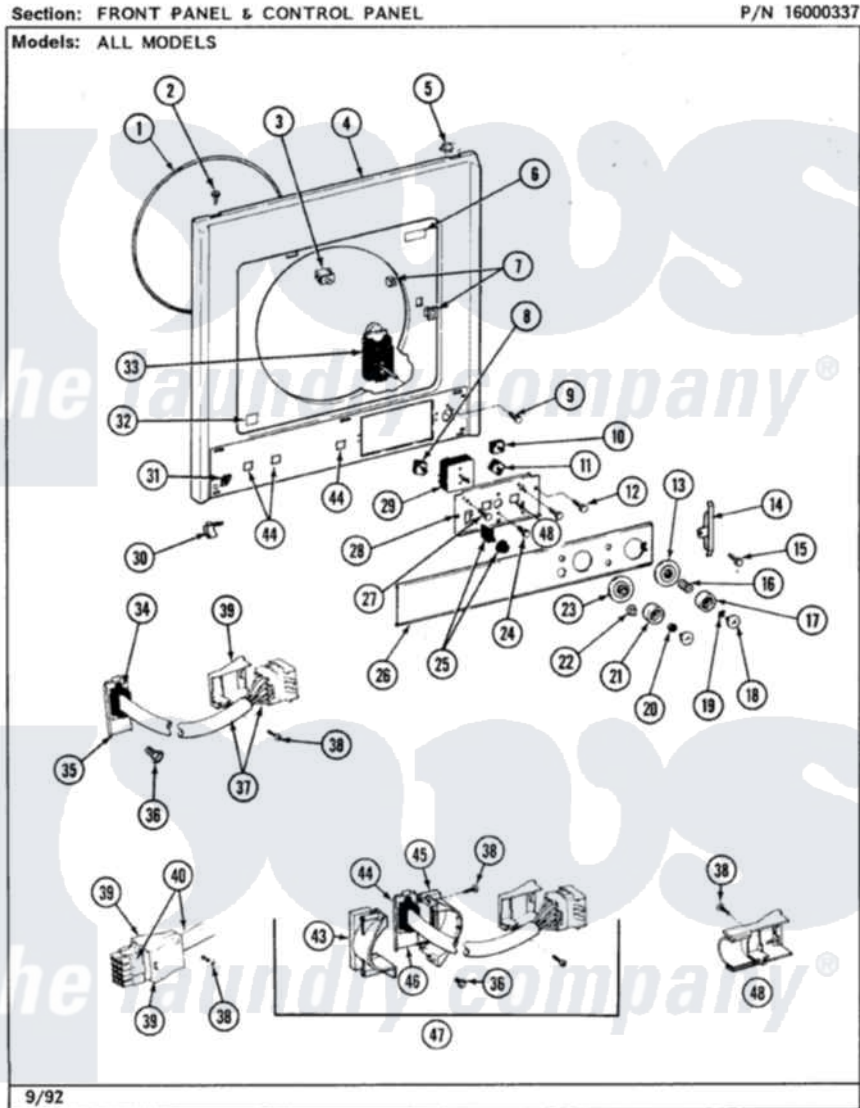

5A

Maytag Residential Maytag LSG7800ABL Stacked Washer and Dryer Parts Parts Diagram 07 - FRONT PANEL & CONTROL PANEL (LSG7800ABx)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	314286			Seal For Front Panel
2	212277			Screw, No.8 X 1/2 Inch
3	Y305753	W10169313		Switch-Dor
4	315261L		Not Available	FRONT PANEL (ALMOND)
5	Y310376			Clip, Door Switch Harness
6	Y313927			INSTRUCTION LABEL
7	306436			Door Latch Kit-W
8	308017			Switch, Dryer Temperature
9	213966	3400014		Screw
10	207782			Switch, Water Temperature
11	207800			Switch, Water Level
12	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
13	207794		Not Available	TIMER DIAL - WASHER
14	315267		Not Available	END CAP,CONTROL PANEL

14	310207	Not Available	(BLK)
15	211000		SCREW, BRAKE DRUM (HEX HEAD)
16	211065		Spring, Index Wheel
17	215828		Knob, Timer
18	215821	Not Available	CAP, KNOB
19	211605		Bezel, Timer Dial
20	312273		Nut, Control Knob
21	315041		Knob, Timer
22	308035	Not Available	KNOB, ROTARY
23	308032		Timer Dial
24	315317	488234	Screw 8-32 X 1/4
25	Y308025		Switch, Push To Start
26	308038	Not Available	CONTROL PANEL
27	215952		Screw
28	315237		Bracket For Switch And Timer
29	Y308252		Timer
30	314482		Fastener, Spring
31	314748	488660	Nut, Speed
32	314486	Not Available	LABEL
33	207783		Timer
36	211168	W10139210	Screw, 8-18 X 5/16
38	215953	Not Available	SCREW
39	215960	Not Available	STRAIN RELIEF
40	208212	Not Available	WIRE HARNESS (CANADA)
41	315286		Bumper Large
42	315287		Bumper Small
43	Y216007	Not Available	SHIELD LOWER
44	216002	Not Available	GROMMET
45	Y216006	Not Available	SHIELD UPPER
46	216008	Not Available	BRACKET GROMMET
47	208300	Y03000113	Spray Arm
"	308019	Not Available	WIRE HARNESS
49	315287		Bumper Small

