


Maytag LSG7800ABW 04 - CABINET (LSG7800ABx)

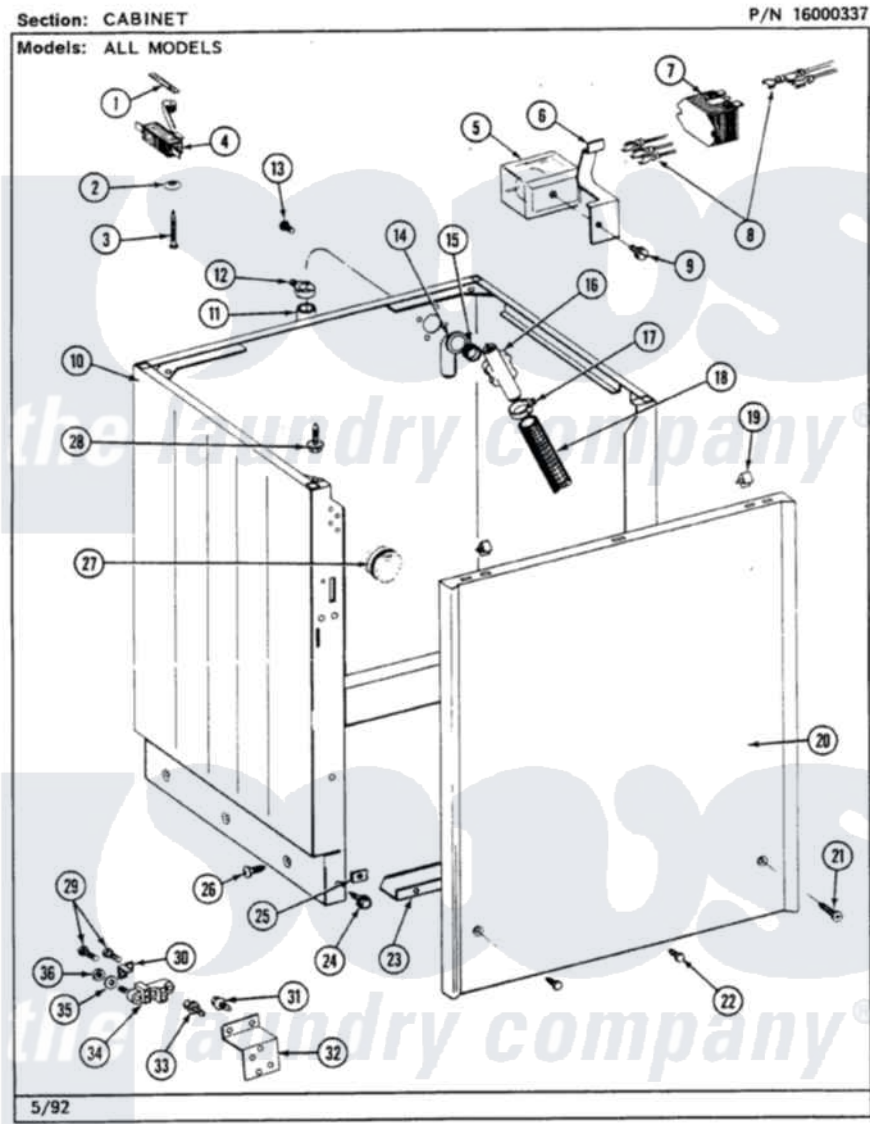

Maytag Residential Maytag LSG7800ABW Stacked Washer and Dryer Parts Parts Diagram 04 - CABINET (LSG7800ABx)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	210866			Nut, Twin Speed
2	211500			Washer, Bracket To Top Cover
3	213501			Screw, No.6-20 X 1-1/8 Inch
4	202476			Unbalance Switch
5	207797			Relay
6	215273			Clip, Spring Relay
7	207834	8566493		Power Relay
8	208212		Not Available	WIRE HARNESS (CANADA)
9	212949	22001866		Screw, Relay
10	207207		Not Available	CABINET WHT
11	216017			Hose, Drain
12	200908	285655		Clamp, Hose
13	Y014874			Screw, Idler Arm And Sleeve
14	Y216016	W10116738		Elbow
15	214765			Gasket, Siphon Break
16	206638			Siphon Break

17	202574	3367052	Clamp, Hose
18	215365	22001448	Hose, Pump
19	215711		Fastener, Spring
20	207205		Panel, Front
21	213123	22001496	Front Panel Fastener And Screw
22	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
23	213846		Guard, Belt
24	213122	27001200	Screw
25	213280	204439	Screw And Fstner Assembly
26	213007		Xfor Cabinet See Cabinet, Back
27	207787	12002304	Switch-WL
28	214354		Screw, Top Cover To Cabnt.

