


Maytag LSG7800ABW 05 - CABINET-DRYER (LSG7800ABx)

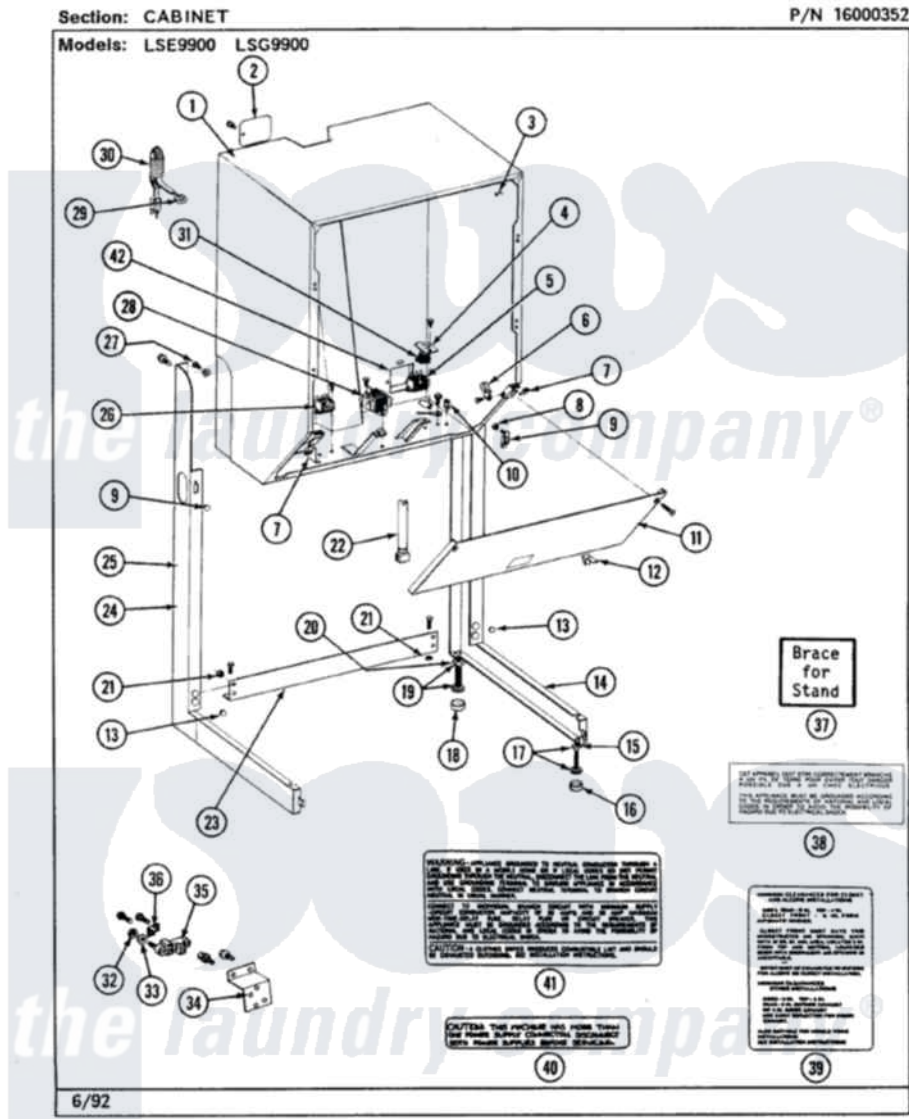

6

Maytag Residential Maytag LSG7800ABW Stacked Washer and Dryer Parts Parts Diagram 05 - CABINET-DRYER (LSG7800ABx)

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	315270			Grommet
2	308044		Not Available	CORD, POWER
3	Y313561			Screw----NA
4	314470		Not Available	COVER, TERMINAL
5	308055			Cabinet
6	312548			Fastener-Access Panel To CA
7	215954			Screw
8	Y308033	7401P037-60		Block, Terminal
9	211168	W10139210		Screw, 8-18 X 5/16
10	314532		Not Available	MOUNTING BRACKET
11	216002		Not Available	GROMMET
12	315264	74006784		Clip, Harness
13	215075			Fastener, Control Panel To Console
14	Y310632	1163839		Screw
15	314489			Guide, Pin

16	214872		Palnut, End Cap Note: Nut, Lamp Holder
17	Y313262	W10116752	Retainer-
18	211252		Screw, Ground Wire
19	208212		Not Available WIRE HARNESS (CANADA)
20	314477		Screw, Access Panel
21	306072		Not Available ACCESS PANEL-WHITE
22	314482		Fastener, Spring
23	314498		Pad, Dryer Leg
24	306073		Not Available LEG ASSM, (RT-WHT)
25	Y052740	62739	Nut, Lock
26	Y314137		Foot, Rubber
27	Y305086		Adjustable Leg And Nut
28	210684		Foot, Adjustable Leg
29	Y302699	22003428	Leg, Adjustable
30	Y052721		Nut, Terminal Block Plate
31	210385		Lock Nut For Adjustable Leg
32	314499		Not Available BRACE
33	214354		Screw, Top Cover To Cabnt.
34	Y306110		Stand, Dryer
35	306074		Not Available LEG ASSM, LEFT-WHITE
36	303846	22003781	Screw, Ground Strap
37	314663	214354	Screw, Top Cover To Cabnt.
38	305205	694419	Mini-Buzzer
39	211168	W10139210	Screw, 8-18 X 5/16
42	214519		LABEL, ELECTRICAL INSTR. PART NOT USED-GAS MODELS ONLY
43	314486		Not Available LABEL
44	306128		Not Available BRACE FOR STAND-ACCESSORY
45	215960		Not Available STRAIN RELIEF
46	215953		Not Available SCREW

