


Maytag LSG7804ABE 03 - CABINET-DRYER

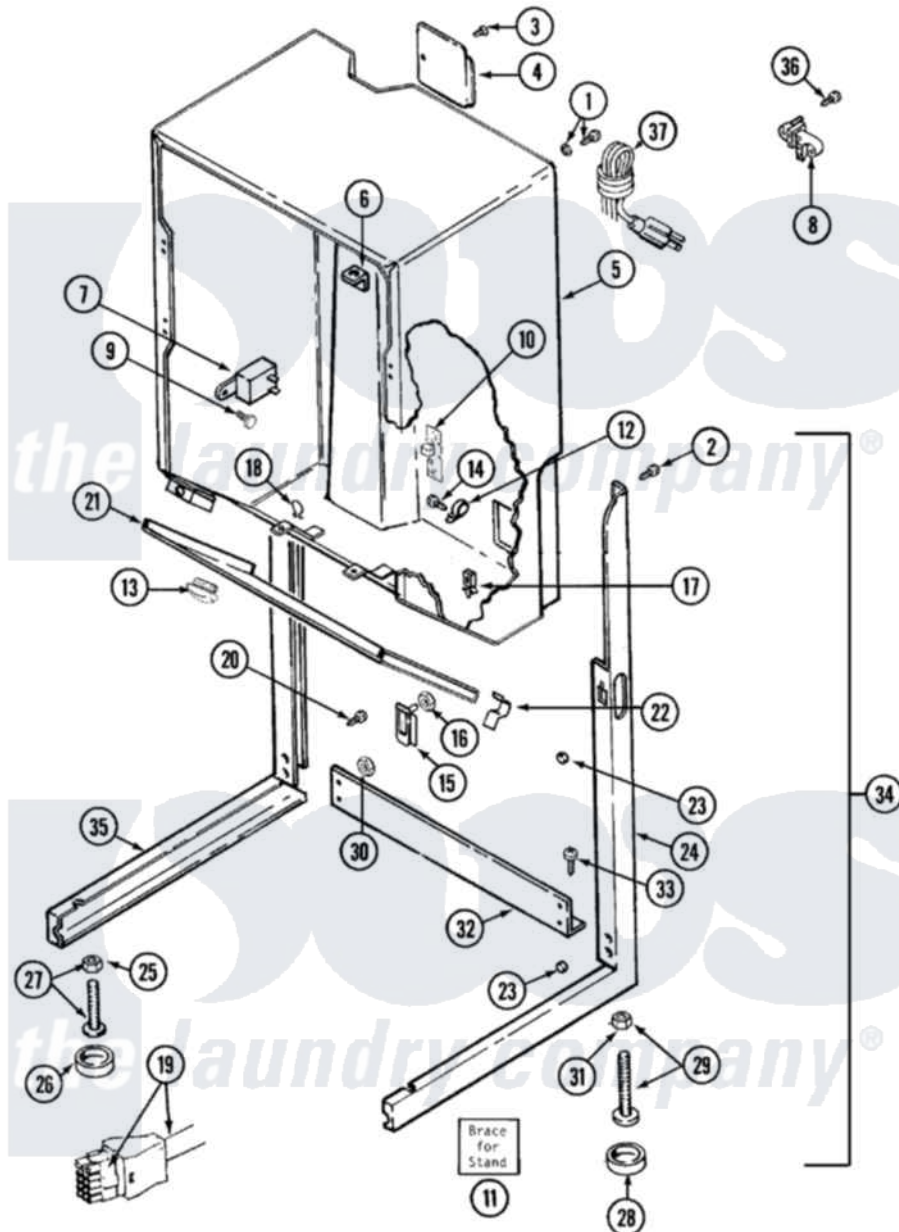

Maytag Residential Maytag LSG7804ABE Stacked Washer and Dryer Parts Parts Diagram 03 - CABINET-DRYER
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	303846	22003781		Screw, Ground Strap
2	314663	214354		Screw, Top Cover To Cabnt.
3	Y313561			Screw---NA
4	314470		Not Available	COVER, TERMINAL
5	308055			Cabinet
6	312548			Fastener-Access Panel To CA
7	Y308205	33001623		Buzzer, Non-Adjustable
8	33001309			Block, Terminal
9	211168	W10139210		Screw, 8-18 X 5/16
10	33001212			Board, Control-Moisture Sensor
11	306128		Not Available	BRACE FOR STAND-ACCESSORY
12	315264	74006784		Clip, Harness
13	22001010			Bumper
14	Y310632	1163839		Screw
15	314489			Guide, Pin

16	214872		Palnut, End Cap Note: Nut, Lamp Holder
17	Y313262	W10116752	Retainer-
18	315471	22003298	Retainer, Wire
19	33001554		Harness, Wire
"	33001369		Wire Harness, Dryer
"	22001428	Not Available	WIRE HARNESS, MAIN (UPR)
"	22001271		Harness, Wire
"	33001043		Wire Harness, Dryer
20	314477		Screw, Access Panel
21	33001130		Shield, Reflective
"	33001050		Panel, Access
22	314482		Fastener, Spring
23	314498		Pad, Dryer Leg
24	33001293	Not Available	LEG ASSY. (RT-WHT)
25	Y052740	62739	Nut, Lock
26	Y314137		Foot, Rubber
27	Y305086		Adjustable Leg And Nut
28	210684		Foot, Adjustable Leg
29	Y302699	22003428	Leg, Adjustable
30	Y052721		Nut, Terminal Block Plate
31	210385		Lock Nut For Adjustable Leg
32	314499	Not Available	BRACE
33	214354		Screw, Top Cover To Cabnt.
34	Y306110		Stand, Dryer
35	33001295	Not Available	LEG ASSY. (LT-WHT)
36	215954		Screw
37	33001308	Not Available	CORD, POWER

