


Maytag MAF18MC4AW 04 - CONTROL MODULE (MAF18MC4Ax)

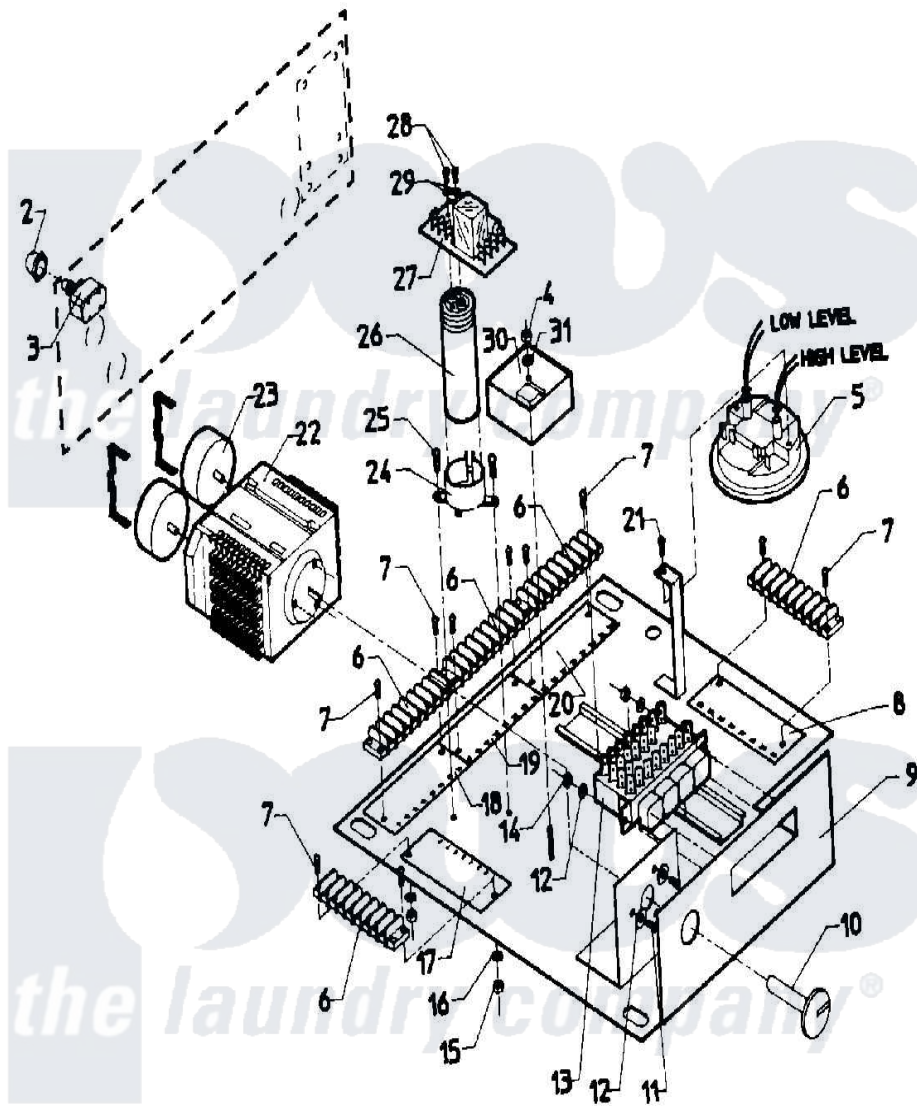

Maytag Residential Maytag MAF18MC4AW Washer Parts Parts Diagram 04 - CONTROL MODULE (MAF18MC4Ax)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	24001104		Not Available	CONTACTOR, AUX. ADDER
"	24001737			Relay
"	24001738			Relay
002	24001744		Not Available	BOOT, PUSH BUTTON
003	24001254			Switch, Momentary
004	24001419	W10139757		Nut
005	24001223		Not Available	SWITCH, DUAL LEVEL
006	24001412		Not Available	STRIP, TERMINAL
007	24001414	4450038		Screw
008	24001030		Not Available	DECAL,INSUL.TERM STIRP (33-40)
009	W10124350		Not Available	PART NUMBER NOT AVAILABLE
010	W10124350		Not Available	PART NUMBER NOT AVAILABLE
011	24001357			Screw, Stainless Steel
012	24001358			Washer, Flat

013	NLA		Not Available	SWITCH, CYCLE SELECTOR
014	NLA		Not Available	NUT, FIBERLOCK
015	24001417	7103P070-60		Nut, Top Pilot
016	24001415			Washer, S.s.
017	NLA		Not Available	DECAL,INSUL. TERM STRIP (1-8)
018	NLA		Not Available	DECAL,INSUL. TERM STRIP (9-16)
019	NLA		Not Available	DECAL,INSUL. TERM STRIP (17-24)
020	NLA		Not Available	DECAL,INSUL. TERM STRIP (25-32)
021	24001411	313806		Screw
022	24001178			Kit, Timer Cycle
023	24001577			Motor, Timer
024	W10124350		Not Available	PART NUMBER NOT AVAILABLE
025	24001578	3196170		Screw
026	24001247			Capacitor, Door Lock
027	24001248		Not Available	PC BOARD, DOOR UNLOCK (110V)
"	24001742			Board, P.C.
028	24001580			Screw, S.s.
029	24001579			Washer, S.s.
030	24001176			Kit, Timer Delay
031	24001295			Lockwasher, S.s.

