


Maytag MAH20PDCXQ 02 - TOP

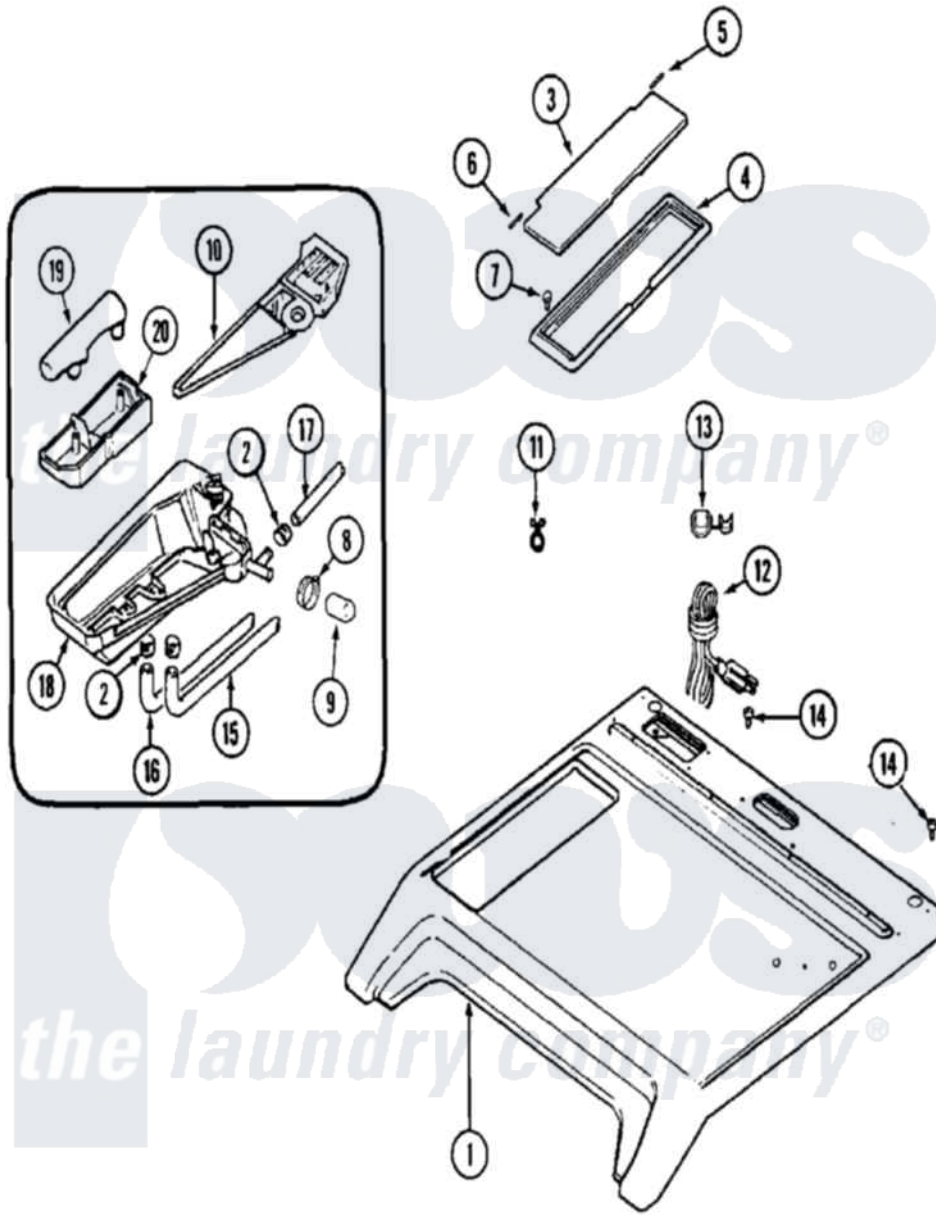

Maytag [Residential Maytag MAH20PDCXQ Washer Parts](#) Parts Diagram 02 - TOP
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	22002116			Cover, Top
"	22002666		Not Available	COVER, TOP (BSQ)
"	22003584	22004180		Cover, Top
"	22003586	22004178		Cover, Top
"	22003587	22004181		Cover, Top
"	NLA		Not Available	COVER, TOP (WHT)
002	205161	489503		Clamp
003	22002941			Lid, Dispenser Commercial
004	22002940	22003665		Bezel, Dispenser
005	Y912678	6-912678		Pin- Hinge
006	Y912679			Pin, Hinge
007	22002060	400021-1		Screw
008	22001984	285655		Clamp, Hose
009	22002796			Cap
010	22002555			Flume, Dispenser
011	212276	W10116760		Screw

"	22002027	74007164	Lock- Purs
012	22001178	22003062	Cord, Power
013	211881		Grommet, Cord Part Not Used- Gas Models Only
014	912365	3370225	Screw
015	22002551		Hose, Bleach
016	22002552		Hose, Fabric Softener----NA
017	22002553		Hose, Detergent
018	22002554	12001558	Dispenser Bottom With 4 Clamps
019	22002266		Cap, Siphon
020	22002265		Cup, Siphon


the laundry company[®]


the laundry company[®]


the laundry company[®]