


Maytag MAH2440BGW 02 - CONTROL PANEL - FRONT

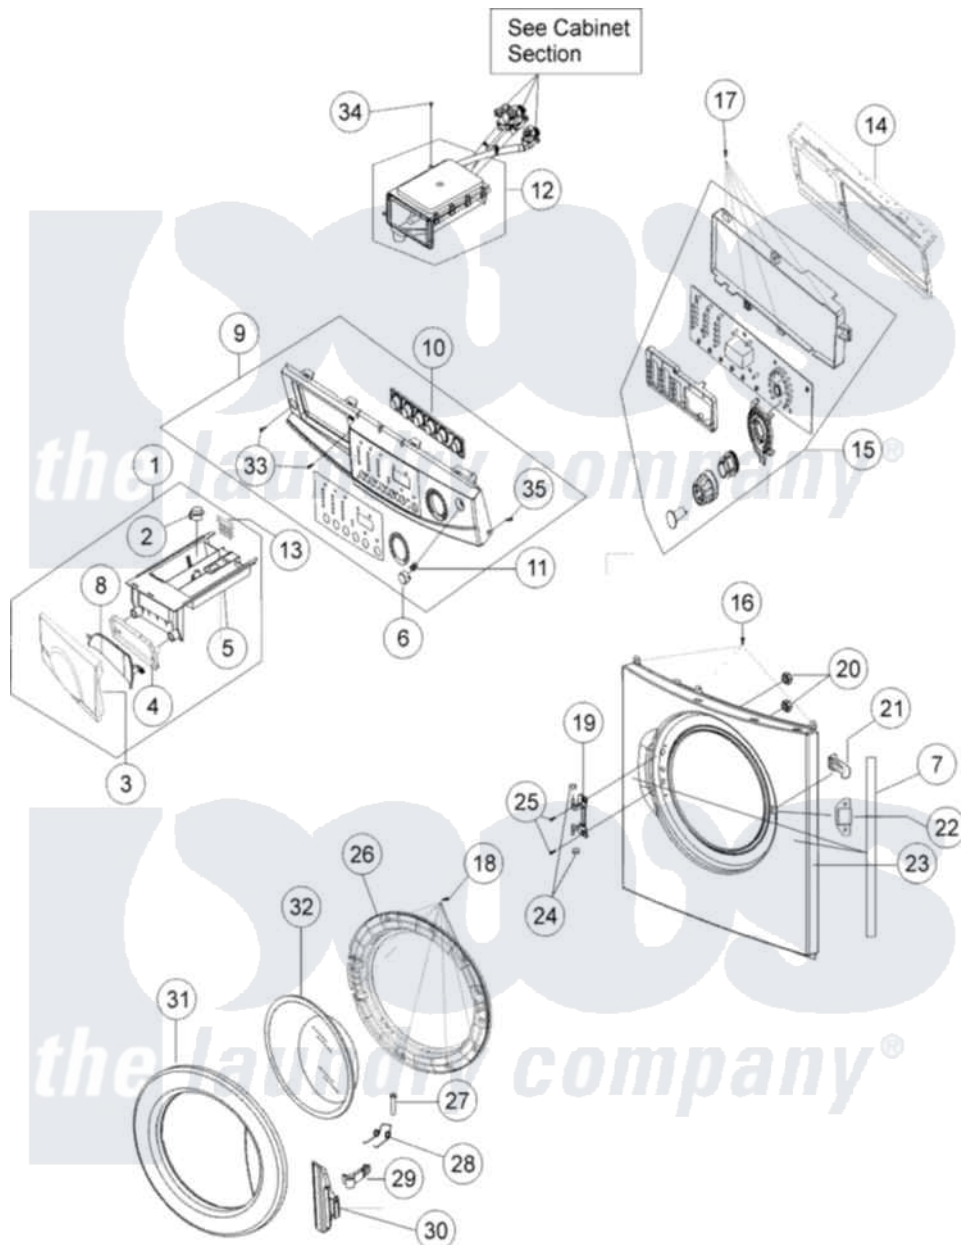

Maytag Residential Maytag MAH2440BGW Washer Parts Parts Diagram 02 - CONTROL PANEL - FRONT
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	34001489			Assembly-Pcb Part
2	34001087			Cap-Rinse
3	34001344			Panel-Drawer
4	34001345			Handle-Drawer
5	34001103			Body-Drawer
6	35001053			Button-Push
7	34001375			Sponge-Epdm
8	34001374			Cover-Panel
9	12002618			Control Board Assembly
"	34001347			Assembly-Panel Control
10	35001069			Button-Push
11	35001068			Spring Etc-Button
12	34001102			Assembly-Housing Drawer
13	34001317			Screw, Special
14	34001100			Assembly-Frame Plate
15	34001368			Assembly-Pcb Parts

"	34001489		Assembly-Pcb Part
16	35001166	34001211	Screw-Pump Bracket
17	6002-000213		Not Available Screw-Tapping (5)
18	6002-001006		Not Available SCREW
19	34001215		Hinge-Door
20	34001144	58001026	Nut, Hex
21	34001474		Door Switch
22	34001051		Cover-Front
23	34001145		Not Available ASSY-FRAME FRONT LU
24	34001192		Bushing, Hinge Guide
25	6002-001006		Not Available SCREW
26	34001179		Holder-Glass
27	34001194		Guide-Bar
28	34001195		Spring-Handle
29	34001111		Lever-Door
30	34001196		Handle-Door
31	34001178		Cover-Door
32	34001106		Door-Glass
33	34001214		Screw-Console To Front Frame
34	6002-000473	1163283	Screw
35	34001213		Screw-Painted, Side Panel

