


# Maytag MAH3000AEW 04 - CONTROL PANEL

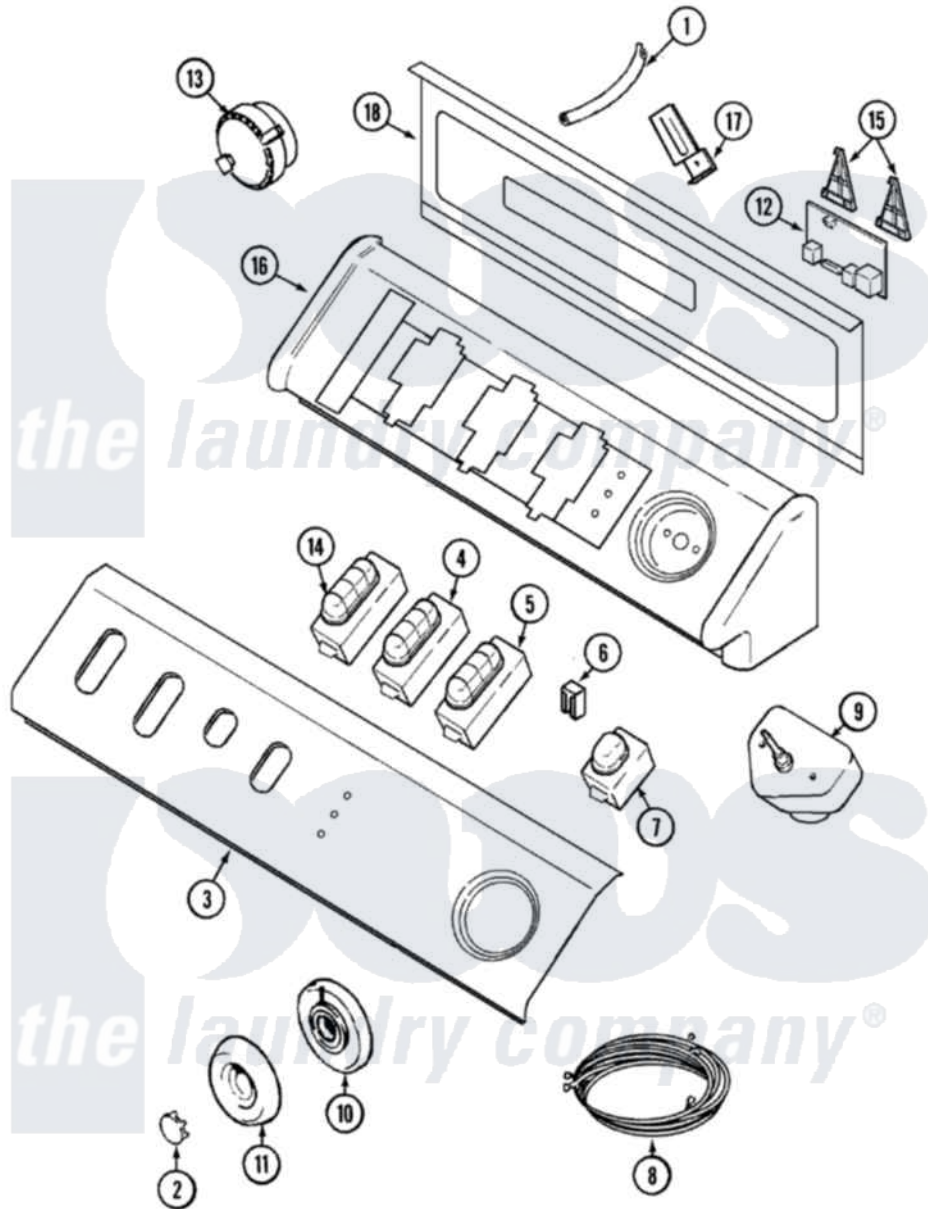

Maytag [Residential Maytag MAH3000AEW Washer Parts](#) Parts Diagram 04 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">22002010</a>			Hose, Pressure Switch
2	<a href="#">22001664</a>			Timer Knob Insert/Cap
3	<a href="#">22002275</a>			Panel, Control
4	<a href="#">22001788</a>			Button, Switch
"	<a href="#">22001789</a>			Button, Switch
"	<a href="#">22002489</a>			Switch, Temperature
5	<a href="#">22001788</a>			Button, Switch
"	<a href="#">22001789</a>			Button, Switch
"	<a href="#">22002488</a>			Switch, Options
6	<a href="#">903115</a>			Lock Light
"	<a href="#">22002281</a>			Indicator Light
7	<a href="#">22002560</a>			Switch, Push To Start
8	22002491		Not Available	WIRE HARNESS, MAIN
"	<a href="#">22002644</a>			Wire Harness, Main
9	22001662	<a href="#">8534058</a>		Screw
"	<a href="#">22002992</a>			Timer

10	<a href="#">22002282</a>		Bezel, Timer Dial
11	<a href="#">22001659</a>		Timer Knob - Grey
12	22002492	<a href="#">22002917</a>	Board, Control
"	<a href="#">912077</a>		Locknut, Reader Harness
"	<a href="#">22002287</a>		Screw, Machine Control
13	<a href="#">22002994</a>		Switch, Pressure
"	22002048	<a href="#">22002921</a>	Switch- Pr
14	<a href="#">22002490</a>		Switch, Fabric
"	<a href="#">22001788</a>		Button, Switch
"	<a href="#">22001789</a>		Button, Switch
15	<a href="#">22002284</a>		Bracket
16	<a href="#">22001948</a>		Lens, Indicator Light
"	33002105	Not Available	CONSOLE (WHT)
17	<a href="#">22002178</a>		Bracket, Air Dome Hose
"	22001996	<a href="#">3370225</a>	Screw
"	22002345	Not Available	TIE, WIRE
18	33001806	Not Available	BACK, CONSOLE PANEL
"	Y22002339	<a href="#">8534058</a>	Screw
"	22001996	<a href="#">3370225</a>	Screw
19	16009250	<a href="#">22002298</a>	Manual, Use And Care
20	22002303	Not Available	VIDEO, U & C (BURGUNDY)
21	16010061	Not Available	MANUAL KIT, SERVICE

