


Maytag MAV408DAWW 01 - BASE & MOTOR

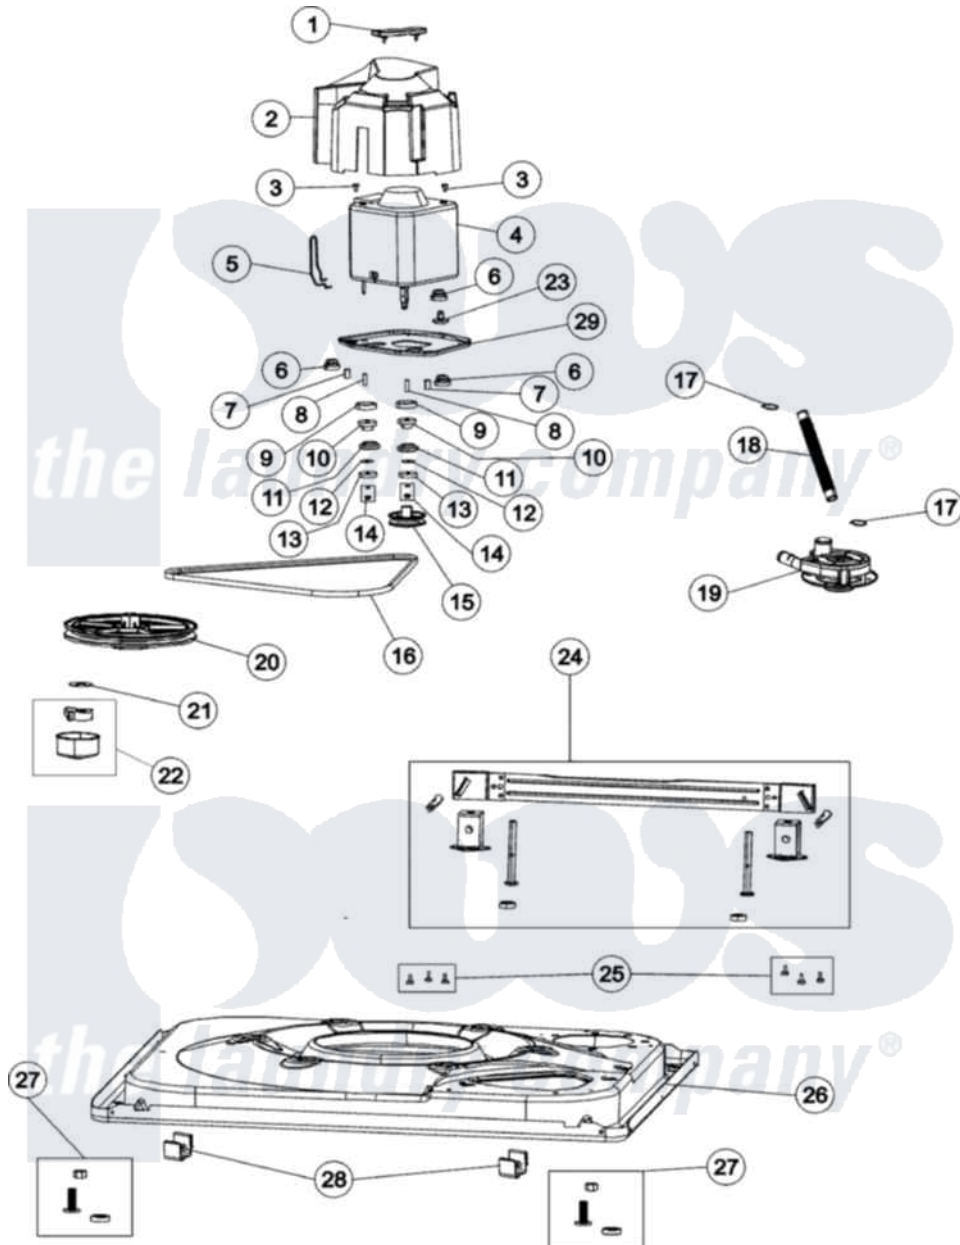

Maytag Residential Maytag MAV408DAWW Washer Parts Parts Diagram 01 - BASE & MOTOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2065			Pad, Motor Plate
2	22002721			Shield, Motor
3	25-7733	681414		Screw, 10AB X 1/2
4	21001950			MoTor, 2SP 1/2hp 120V/60Hz Hi-Tor
5	21001110	22004376		Spring, Motor Pivot
6	35-3646			Isolator, Motor Plate
7	25-7831			Spacer, Mounting
8	25-7830			Spacer
9	35-3570			Washer, Motor Pivot
10	33-9946			Isolator, Motor
11	35-3571			Slide, Motor Pivot
12	25-7047			Washer, Flat
13	33-9967			Washer, Motor Isolator
14	21002009	Y707702		Locknut
15	22004297	21001950		MoTor, 2SP 1/2hp 120V/60Hz Hi-Tor

16	21352320		Belt, Drive
17	21002254	285655	Clamp, Hose
"	25-6068	285655	Clamp, Hose
18	21001915		Hose, Tub To Pump
19	21001873	35-6780	Pump-Water
20	21001733	12002213	Thrust Bearing Kit
21	35-2132		Washer, 1.25ODX.530IDX.032
22	12002213		Thrust Bearing Kit
23	21001486		Foot Slide, Isolator
24	21002221		Stabilizer Bar Kit
25	25-7828	489483	Screw 10-32 X 1/2
26	21001893	12002701	Base Kit
27	25001119		Foot And Pad Assembly
28	53-0120		Clip, Front Panel
29	25-7833	21001977	Screw
"	25-7834		Washer, Motor/Base Screw
"	21001366	21001783	Plate And Screw Assembly

