


# Maytag MAV7257AWQ 03 - CONTROL PANEL

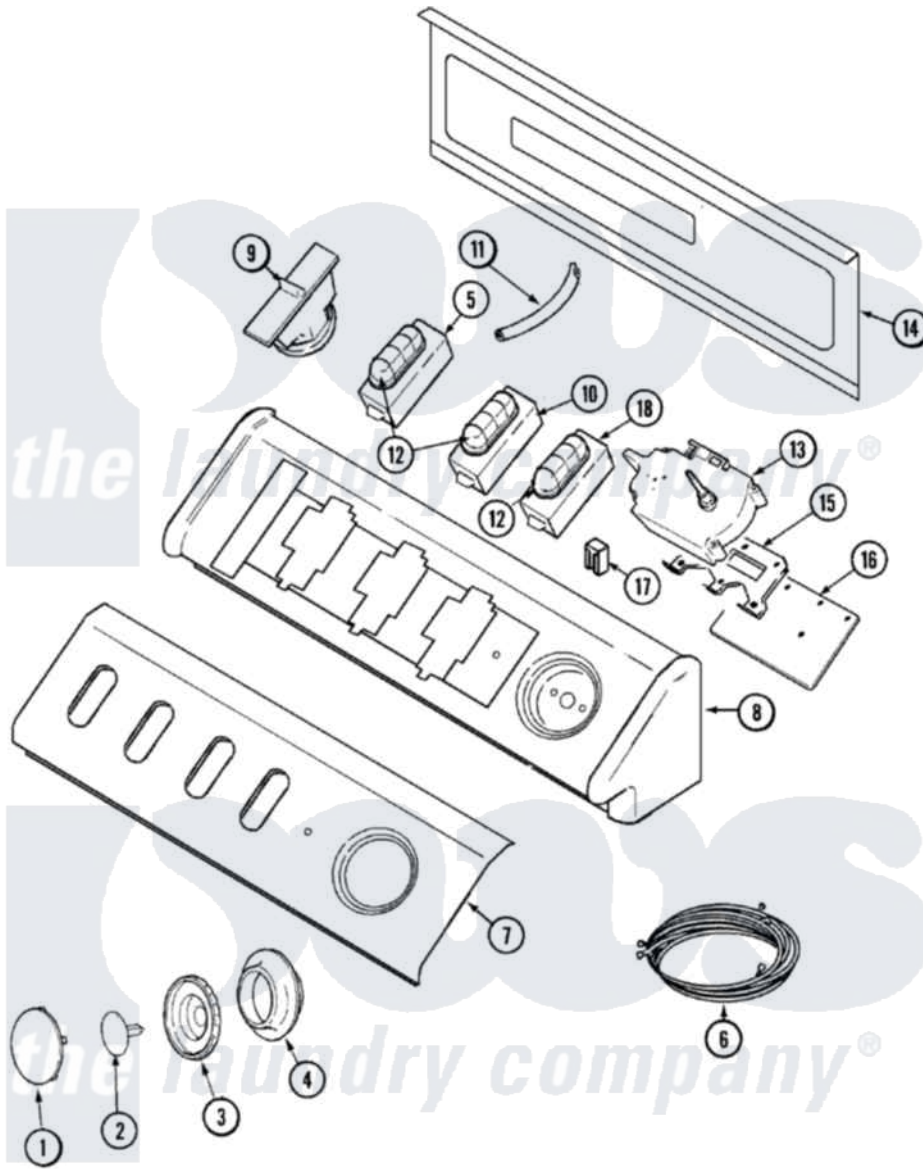

Maytag [Residential Maytag MAV7257AWQ Washer Parts](#) Parts Diagram 03 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">33002347</a>			Timer Knob Insert/Cap
2	<a href="#">22002997</a>			Pin, Locking
3	22002996	<a href="#">22003952</a>		Knob, Timer
4	22003005	<a href="#">27001191</a>		Skirt, Timer Knob
5	<a href="#">22003006</a>			Switch,
6	<a href="#">22003562</a>			Harness, Wire
7	22003564	<a href="#">22003566</a>		Panel, Control
8	33002327	<a href="#">37001115</a>		Console
"	22002925	<a href="#">3370225</a>		Screw
9	<a href="#">22002745</a>			Switch, Pressure
"	22003461		Not Available	PAD, PRESSURE SWITCH
10	<a href="#">22003006</a>			Switch,
11	22003237	<a href="#">22003422</a>		Hose, Air Dome
12	<a href="#">22002697</a>			Button, Switch
"	22002698	<a href="#">22003875</a>		Button- SW
13	<a href="#">22003561</a>			Timer

14	Y22002339	<a href="#">8534058</a>	Screw
"	22002529	Not Available	CONSOLE BACK PANEL
15	<a href="#">22003003</a>		Bracket, Atc / Timer
16	22003575	<a href="#">22003906</a>	Analog Temp Control Board-Assembly
"	22002857	<a href="#">22003906</a>	Analog Temp Control Board-Assembly
17	<a href="#">903115</a>		Lock Light
"	<a href="#">22001948</a>		Lens, Indicator Light
18	<a href="#">22003493</a>		Switch, Rinse Opt
19	22003472	<a href="#">22003866</a>	User Guide
"	16009485	Not Available	MANUAL, SERVICE-NO REFUND

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>