


# Maytag MDE26CSAEL 04 - CS CONTROL CENTER

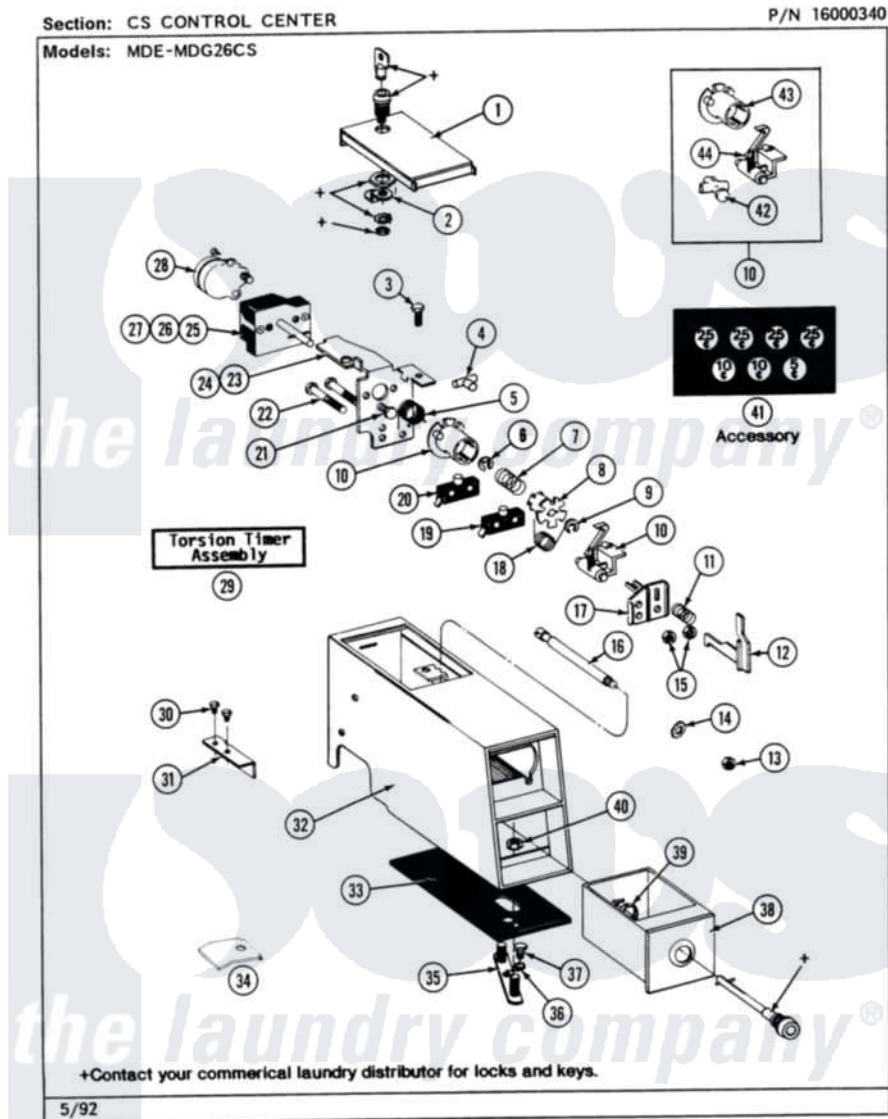

14

Maytag Residential Maytag MDE26CSAEL Dryer Parts Parts Diagram 04 - CS CONTROL CENTER  
 Click on the part number to view part

| Item | Original Part Number    | Replaced By               | Status        | Part Description                            |
|------|-------------------------|---------------------------|---------------|---|
| 001  | 203188                  |                           | Not Available | TIMER ACCESS DOOR (WHT)                     |
| "    | 203188L                 |                           | Not Available | ACCESS DOOR-ALMOND                          |
| "    | 203188M                 |                           | Not Available | ACCESS DOOR-HARVEST WHEAT                   |
| 002  | 213750                  | <a href="#">W10133266</a> |               | Cam-Lock                                    |
| 003  | 211168                  | <a href="#">W10139210</a> |               | Screw, 8-18 X 5/16                          |
| 004  | <a href="#">314335</a>  |                           |               | Peg, Tine Adjustment                        |
| 005  | <a href="#">314331</a>  |                           |               | Spring, Torsion Return                      |
| 006  | <a href="#">Y312270</a> |                           |               | Clip, Spring Retainer                       |
| 007  | <a href="#">211065</a>  |                           |               | Spring, Index Wheel                         |
| 008  | 314330                  |                           | Not Available | DRIVER FOR INDEX WHEEL (NOT INCLUDED W/KIT) |
| 009  | <a href="#">211790</a>  |                           |               | Lock Ring For Timer Shaft                   |
| 010  | <a href="#">306104</a>  |                           |               | Actuator Switch Kit                         |
| 011  | NLA                     |                           | Not Available | HELICAL SPRING ----N                        |
| 012  | 314337                  | <a href="#">33002968</a>  |               | Slider                                      |

|     |                         |                           |   |
|-----|-------------------------|---------------------------|---|
| 013 | <a href="#">Y052721</a> |                           | Nut, Terminal Block Plate               |
| 014 | <a href="#">910387</a>  |                           | Lockwasher, Vault Assembly              |
| 015 | Y052634                 | <a href="#">701719</a>    | Nut, Hex                                |
| 016 | <a href="#">215559</a>  |                           | Bolt, Coin Slide Locking                |
| 017 | <a href="#">314339</a>  |                           | Switch And Slider Bracket               |
| 018 | <a href="#">314332</a>  |                           | Spring, Actuator                        |
| 019 | 305798                  | Not Available             | BYPASS SWITCH FOR MOTOR                 |
| 020 | <a href="#">Y305799</a> |                           | Bypass Switch For Heater                |
| 021 | 910708                  | <a href="#">488234</a>    | Screw 8-32 X 1/4                        |
| 022 | NLA                     | Not Available             | SCREW                                   |
| 023 | <a href="#">314333</a>  |                           | Timer Mounting Bracket                  |
| 024 | NLA                     | Not Available             | INSTRUCTION LABEL                       |
| 025 | <a href="#">305796</a>  |                           | Timer                                   |
| 026 | <a href="#">305813</a>  |                           | Part Not Available Part Not Used        |
| 027 | <a href="#">305800</a>  |                           | Wire Harness For Timer                  |
| 028 | <a href="#">305870</a>  |                           | Timer Motor                             |
| 029 | <a href="#">305797</a>  |                           | Torsion Timer Assembly Complete         |
| 030 | 212707                  | <a href="#">3196385</a>   | Screw                                   |
| 031 | <a href="#">314334</a>  |                           | Bracket For Coin Slide                  |
| 032 | 206956                  | <a href="#">22001405</a>  | Case, Coin Slide                        |
| "   | 206956L                 | <a href="#">22001405</a>  | Case, Coin Slide                        |
| "   | 206956M                 | <a href="#">22001405</a>  | Case, Coin Slide                        |
| 033 | <a href="#">214660</a>  |                           | Gasket, Control Center                  |
| 034 | NLA                     | Not Available             | STOP, TIMER MECHANISM                   |
| 035 | NLA                     | Not Available             | MTG. STRAP----NA                        |
| 036 | <a href="#">910309</a>  |                           | Washer, Mounting Strap                  |
| 037 | 211294                  | <a href="#">90767</a>     | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 038 | 205423                  | <a href="#">208883</a>    | Coin Box K                              |
| "   | 205423L                 | <a href="#">208883</a>    | Coin Box K                              |
| "   | 205423M                 | <a href="#">208883</a>    | Coin Box K                              |
| 039 | 212328                  | <a href="#">W10139762</a> | Hex Nut, 3/4-27                         |
| 040 | Y052740                 | <a href="#">62739</a>     | Nut, Lock                               |
| 041 | <a href="#">214648</a>  |                           | Decal, Coinage                          |
| 042 | 314547                  | <a href="#">Y308109</a>   | Slide And Adj. Return Bracket           |
| 043 | <a href="#">314546</a>  |                           | Wheel, Index                            |
| 044 | 314548                  | <a href="#">33002967</a>  | Actuator, Switch                        |