


# Maytag MDE26PCADG 04 - PC CONTROL CENTER

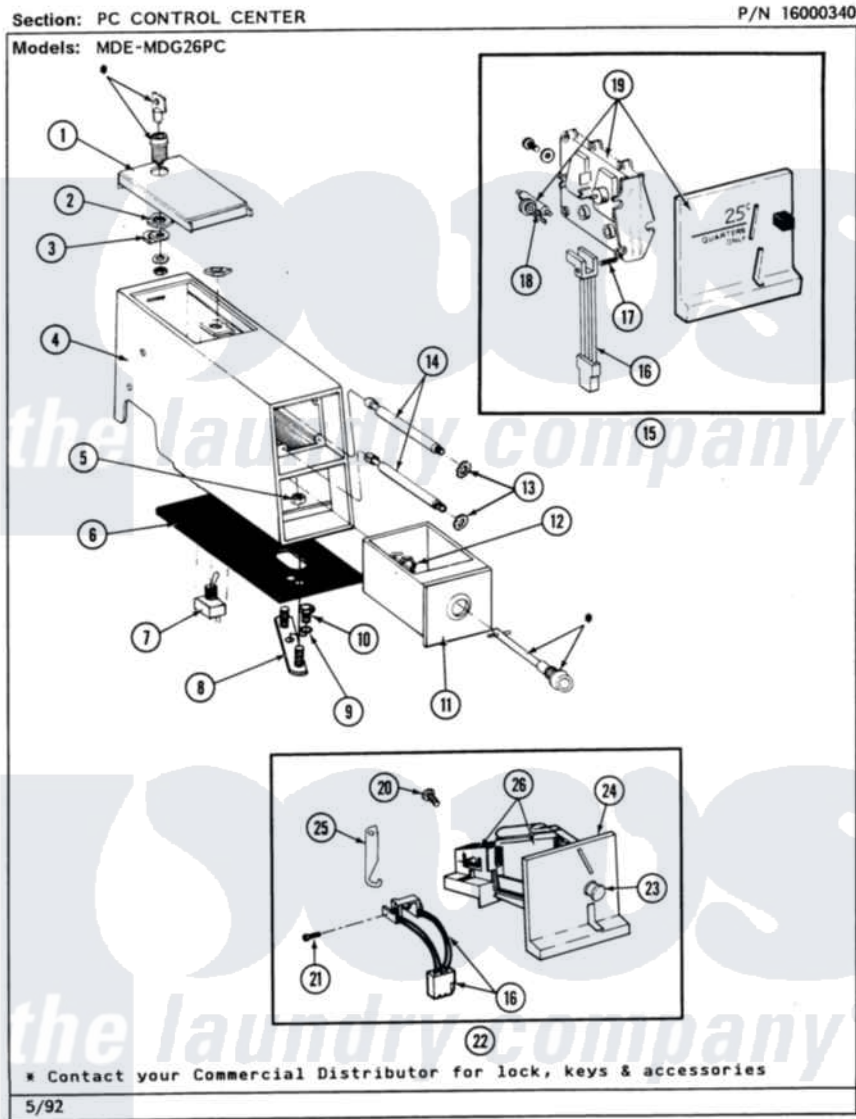

Maytag Residential Maytag MDE26PCADG Dryer Parts Parts Diagram 04 - PC CONTROL CENTER  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	203188		Not Available	TIMER ACCESS DOOR (WHT)
"	203188L		Not Available	ACCESS DOOR-ALMOND
"	203188M		Not Available	ACCESS DOOR-HARVEST WHEAT
002	212328	<a href="#">W10139762</a>		Hex Nut, 3/4-27
003	213750	<a href="#">W10133266</a>		Cam-Lock
004	207673	<a href="#">22001407</a>		Case, Coin Slide
"	207673L	<a href="#">22001408</a>		(ALM)
"	207940	<a href="#">22001407</a>		Case, Coin Slide
"	207940L	<a href="#">22001408</a>		(ALM)
"	NLA		Not Available	(H. WHEAT)
"	NLA		Not Available	(H. WHEAT)
005	Y052740	<a href="#">62739</a>		Nut, Lock
006	<a href="#">214660</a>			Gasket, Control Center
007	206794		Not Available	SWITCH (W/NUT)
008	NLA		Not Available	MTG. STRAP---NA

009	<a href="#">910309</a>		Washer, Mounting Strap
010	211294	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
011	207912	<a href="#">208884</a>	Coin Box K
"	207912L	<a href="#">208884</a>	Coin Box K
"	NLA		Not Available (H. WHEAT)
012	212328	<a href="#">W10139762</a>	Hex Nut, 3/4-27
013	<a href="#">910181</a>		Lockwasher, Terminal Block
014	<a href="#">213035</a>		Bolt, Locking
015	NLA		Not Available COIN DROP ASSY.
016	<a href="#">206799</a>		Optic Switch Assembly
017	<a href="#">314665</a>		Screw, Switch Assembly
018	NLA		Not Available BALANCE ARM W/WEIGHT (\$ .25)
019	NLA		Not Available COIN REJECTOR
020	NLA		Not Available SCREW FOR CAUTION PLATE----NA
021	<a href="#">314665</a>		Screw, Switch Assembly
022	<a href="#">207948</a>		Coin Drop Assembly
"	NLA		Not Available COIN DROP ASSY (CANADA)
023	216009		BUTTON, RETURN
024	216010	<a href="#">Y208306</a>	Kit- Mtg C
025	<a href="#">216011</a>		Spring, Return Button
026	<a href="#">207947</a>		Rejector, Coin
"	<a href="#">207949</a>		Rejector, Coin

