


# Maytag MDE27MNAGW 03 - SUPPORT ASSY., TIMER, TIMER DIAL & KNOB

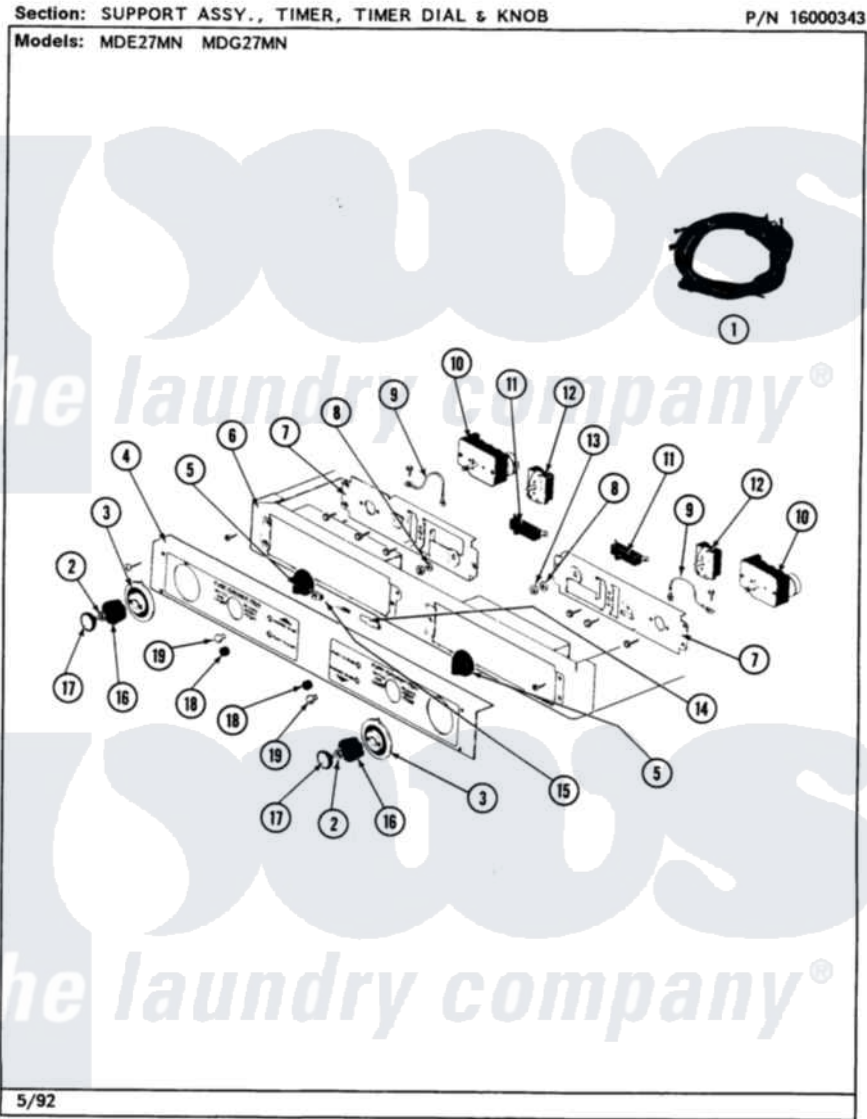

12

Maytag Residential Maytag MDE27MNAGW Dryer Parts Parts Diagram 03 - SUPPORT ASSY., TIMER, TIMER DIAL & KNOB

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	HARNES, MAIN (UPPER)
002	<a href="#">312273</a>			Nut, Control Knob
003	314725	<a href="#">33001500</a>		Dial, Timer Indicator
004	314664	<a href="#">212277</a>		Screw, No.8 X 1/2 Inch
"	NLA		Not Available	CONTROL PANEL
005	<a href="#">205663</a>			Knob For Selector Switch
006	307314L		Not Available	(ALMOND)
"	NLA		Not Available	SUPPORT ASSY. (WHITE)
"	Y310632	<a href="#">1163839</a>		Screw
007	910186	<a href="#">99002757</a>		Screw
"	NLA		Not Available	MTG. BRACKET
008	<a href="#">312751</a>			Lockwasher, Start Switch
009	<a href="#">205810</a>			Wire, Ground
"	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
"	<a href="#">211252</a>			Screw, Ground Wire

010	<a href="#">Y307496</a>		Timer
"	Y313588	<a href="#">488234</a>	Screw 8-32 X 1/4
011	306940	<a href="#">W10149462</a>	Switch, Push-To-Start
012	<a href="#">307253</a>		Switch, Cycle Selector
"	Y313588	<a href="#">488234</a>	Screw 8-32 X 1/4
013	Y312706	<a href="#">422617</a>	Nut
014	Y201110	Not Available	CONNECTOR, WIRE (INDIC. LIGHT)
015	NLA	Not Available	INDICATOR LIGHT 240V 50HZ
016	<a href="#">314724</a>		Knob For Timer
017	314723	<a href="#">W10133501</a>	Cap, Knob
018	<a href="#">Y312702</a>		Knurled Nut, Start Switch
019	<a href="#">215564</a>		Lens, Indicator Light

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>