


# Maytag MDG10CSABW 01 - CONTROL PANEL

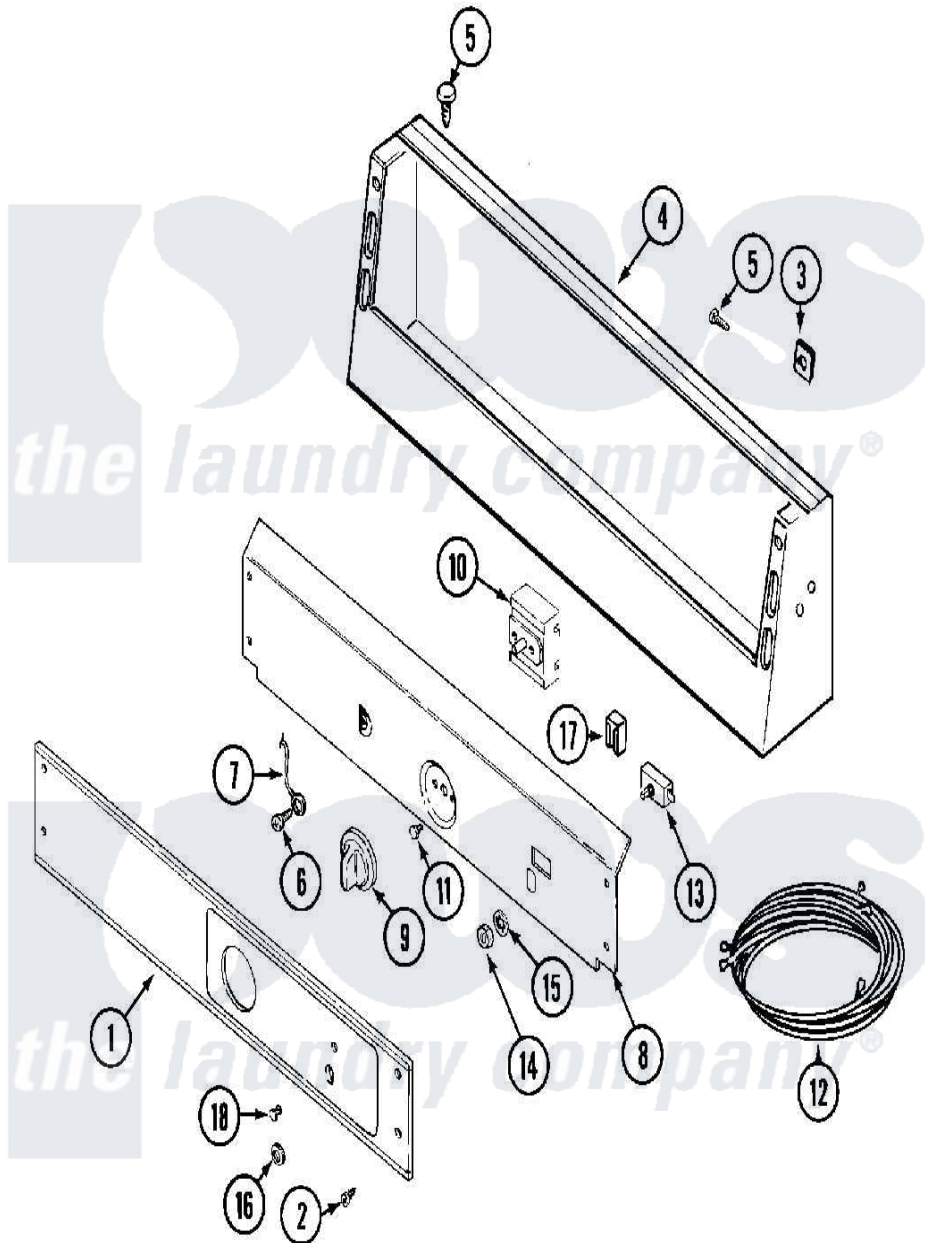

Maytag [Residential Maytag MDG10CSABW Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	<a href="#">33001022</a>			Panel, Control
002	<a href="#">215506</a>			Screw, Control Panel Overlay
003	<a href="#">215003</a>			Fastener, Panel And Bracket
004	NLA		Not Available	CONSOLE (WHT)
005	212276	<a href="#">W10116760</a>		Screw
006	<a href="#">211252</a>			Screw, Ground Wire
"	<a href="#">Y313559</a>			Screw
007	<a href="#">205810</a>			Wire, Ground
008	314912		Not Available	BRACKET, CONTROL PANEL (WHT)
"	NLA		Not Available	(ALM)
009	<a href="#">306938</a>			Knob, Selector Switch
010	307237	<a href="#">W10327105</a>		Switch, Cycle Selection
011	Y313588	<a href="#">488234</a>		Screw 8-32 X 1/4
012	<a href="#">33001530</a>			Wire Harness, Main
"	NLA		Not Available	WIRE HARNESS, MAIN---NA
013	306940	<a href="#">W10149462</a>		Switch, Push-To-Start

014	Y312706	<a href="#">422617</a>	Nut
015	<a href="#">312751</a>		Lockwasher, Start Switch
016	<a href="#">Y312702</a>		Knurled Nut, Start Switch
017	204075	Not Available	PILOT LAMP (DG MODELS ONLY)
018	<a href="#">215564</a>		Lens, Indicator Light

