


Maytag MDG10PDEGL 03 - CABINET-FRONT

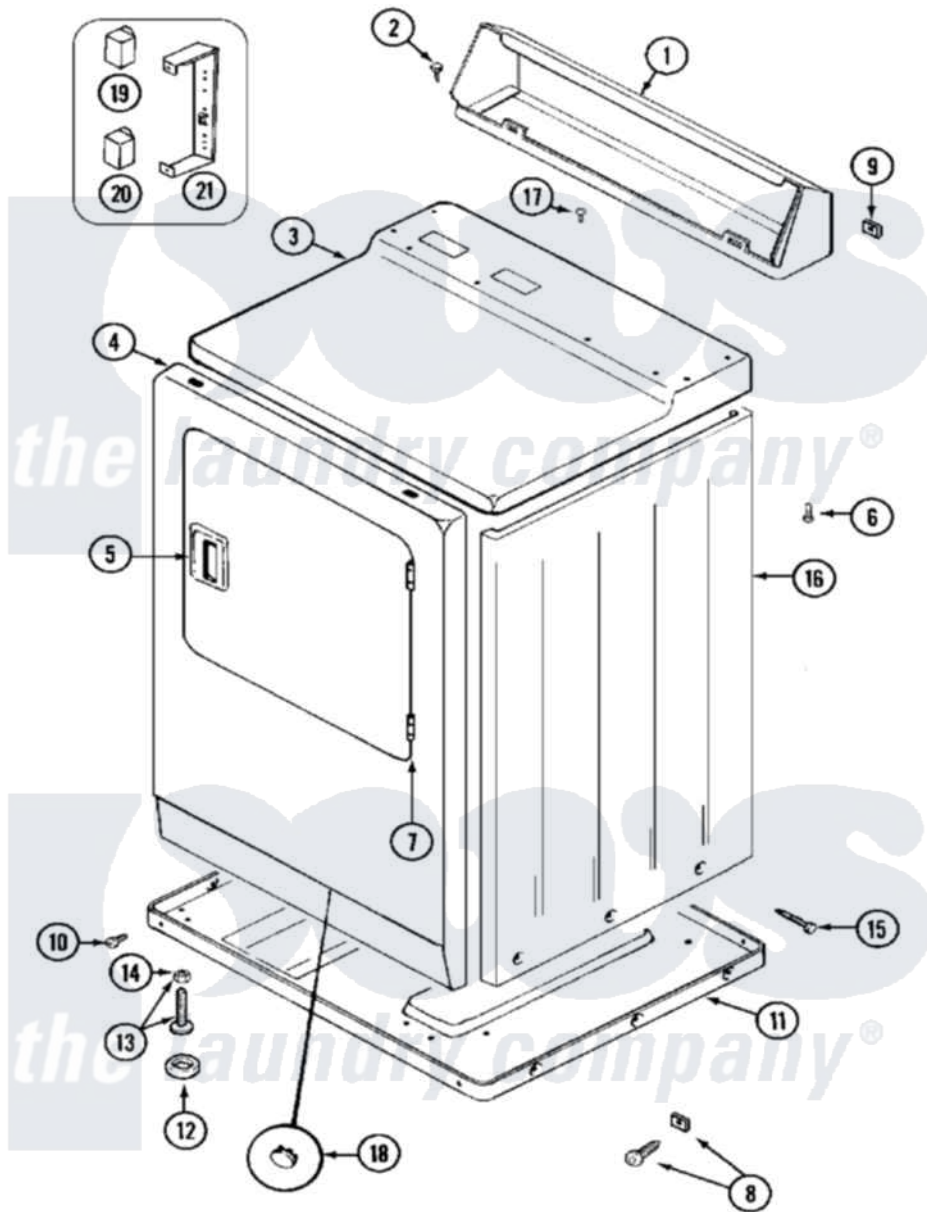

Maytag Residential Maytag MDG10PDEGL Dryer Parts Parts Diagram 03 - CABINET-FRONT
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	CONSOLE (WHT)
002	212276	W10116760		Screw
003	33001163		Not Available	COVER, TOP (WHT)
"	33001164		Not Available	COVER, TOP (ALM)
004	NLA		Not Available	PANEL, FRONT (WHT)
005	33001241			Handle, Door
"	33001254	37001047		Handle, Door
006	214354			Screw, Top Cover To Cabnt.
007	33001230			Hinge, Door
008	204439			Screw And Fstner Assembly
009	215075			Fastener, Control Panel To Console
010	Y313561			Screw---NA
"	Y310632	1163839		Screw
011	Y303361		Not Available	BASE ASSY. (UPPER & LOWER)
012	Y314137			Foot, Rubber

013	Y305086		Adjustable Leg And Nut
014	Y052740	62739	Nut, Lock
015	213007		Xfor Cabinet See Cabinet, Back
016	NLA		Not Available
			CABINET (WHT)
017	210186	3370225	Screw
018	33001132	33002342	Plug, Sifht Hole
"	33001168		Not Available
			PLUG, SIGHT HOLE (ALM)
019	206421		Relay, Motor Reversing
020	306398		Relay, Heater
021	212949	22001866	Screw, Relay
"	Y313561		Screw---NA
"	314627		Bracket, Relays
"	Y251119	3177991	Screw
"	Y310632	1163839	Screw

