


Maytag MDG11CSEGW 07 - CONTROL CENTER

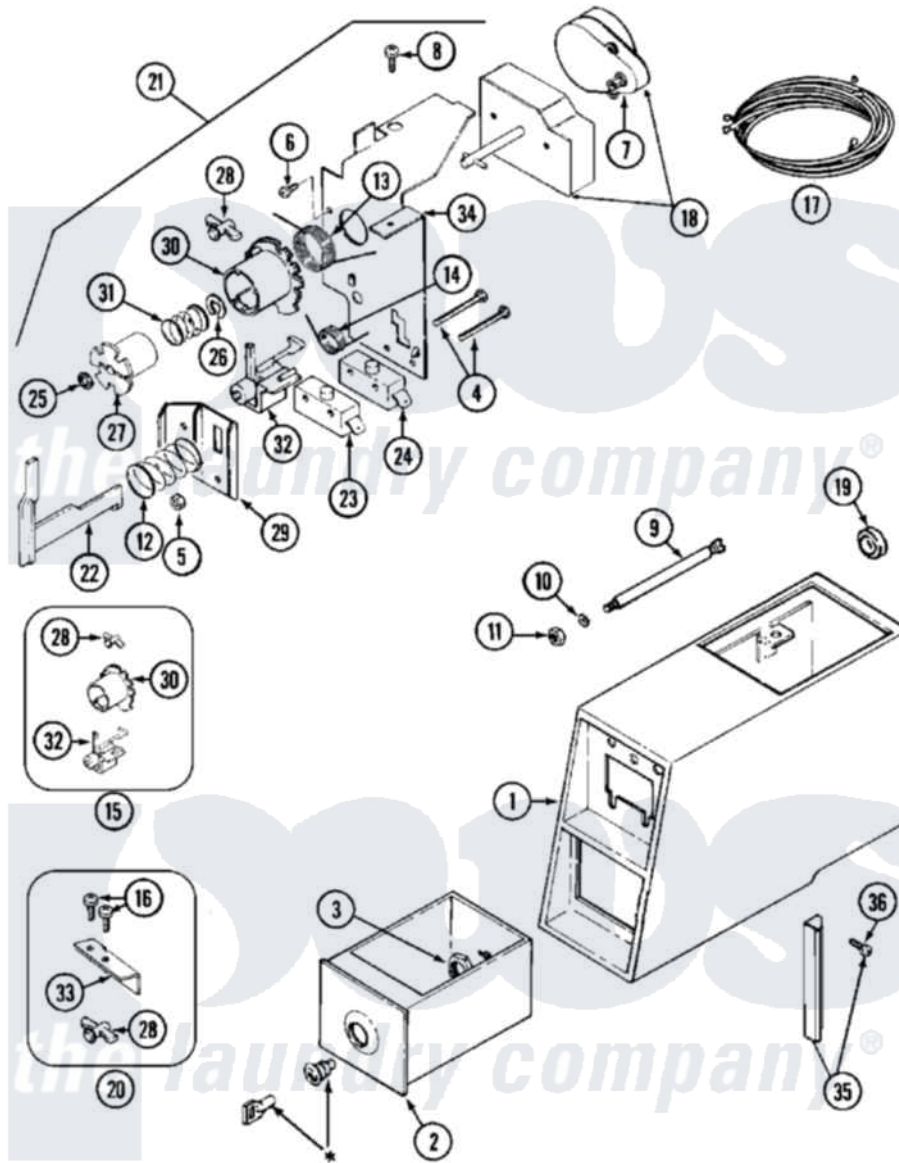

* CONTACT YOUR COMMERCIAL LAUNDRY DISTRIBUTOR

Maytag [Residential Maytag MDG11CSEGW Dryer Parts](#) Parts Diagram 07 - CONTROL CENTER
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|---------------------------|---------------|----------------------------|
| 001 | Y307081 | | | Coin Meter Weld Assembly |
| " | NLA | | Not Available | (ALM) |
| 002 | 205423 | 208883 | | Coin Box K |
| " | 205423L | 208883 | | Coin Box K |
| 003 | 212328 | W10139762 | | Hex Nut, 3/4-27 |
| 004 | 315277 | | | Screw |
| 005 | Y052634 | 701719 | | Nut, Hex |
| 006 | 910708 | 488234 | | Screw 8-32 X 1/4 |
| 007 | 306527 | 305812 | | Timer |
| 008 | 211168 | W10139210 | | Screw, 8-18 X 5/16 |
| 009 | 215559 | | | Bolt, Coin Slide Locking |
| 010 | 910387 | | | Lockwasher, Vault Assembly |
| 011 | Y052721 | | | Nut, Terminal Block Plate |
| 012 | NLA | | Not Available | SPRING, HELICAL |
| 013 | 314331 | | | Spring, Torsion Return |
| 014 | 314332 | | | Spring, Actuator |

| | | | |
|-----|-------------------------|--------------------------|---|
| 015 | 306104 | | Actuator Switch Kit |
| 016 | 212707 | 3196385 | Screw |
| 017 | 305800 | | Wire Harness For Timer |
| 018 | 305812 | | Timer |
| 019 | Y313671 | 33001303 | Grommet, Plate Hole |
| 020 | Y308109 | | Slide And Adj. Return Bracket |
| 021 | 305831 | | Torsion Timer Assembly |
| 022 | 314337 | 33002968 | Slider |
| 023 | 305798 | Not Available | BYPASS SWITCH FOR MOTOR |
| 024 | Y305799 | | Bypass Switch For Heater |
| 025 | 211790 | | Lock Ring For Timer Shaft |
| 026 | Y312270 | | Clip, Spring Retainer |
| 027 | 314330 | Not Available | DRIVER FOR INDEX WHEEL (NOT INCLUDED W/KIT) |
| 028 | 314335 | | Peg, Tine Adjustment |
| " | 314547 | Y308109 | Slide And Adj. Return Bracket |
| 029 | 314339 | | Switch And Slider Bracket |
| 030 | 314546 | | Wheel, Index |
| 031 | 211065 | | Spring, Index Wheel |
| 032 | 314548 | 33002967 | Actuator, Switch |
| 033 | 314334 | | Bracket For Coin Slide |
| 034 | 314333 | | Timer Mounting Bracket |
| 035 | NLA | Not Available | STOP, COIN METER |
| 036 | Y014872 | | Screw, Coin Meter Stop - |

tools
the laundry company®

tools
the laundry company®