


Maytag MDG16MNSAW 01 - CONTROL PANEL

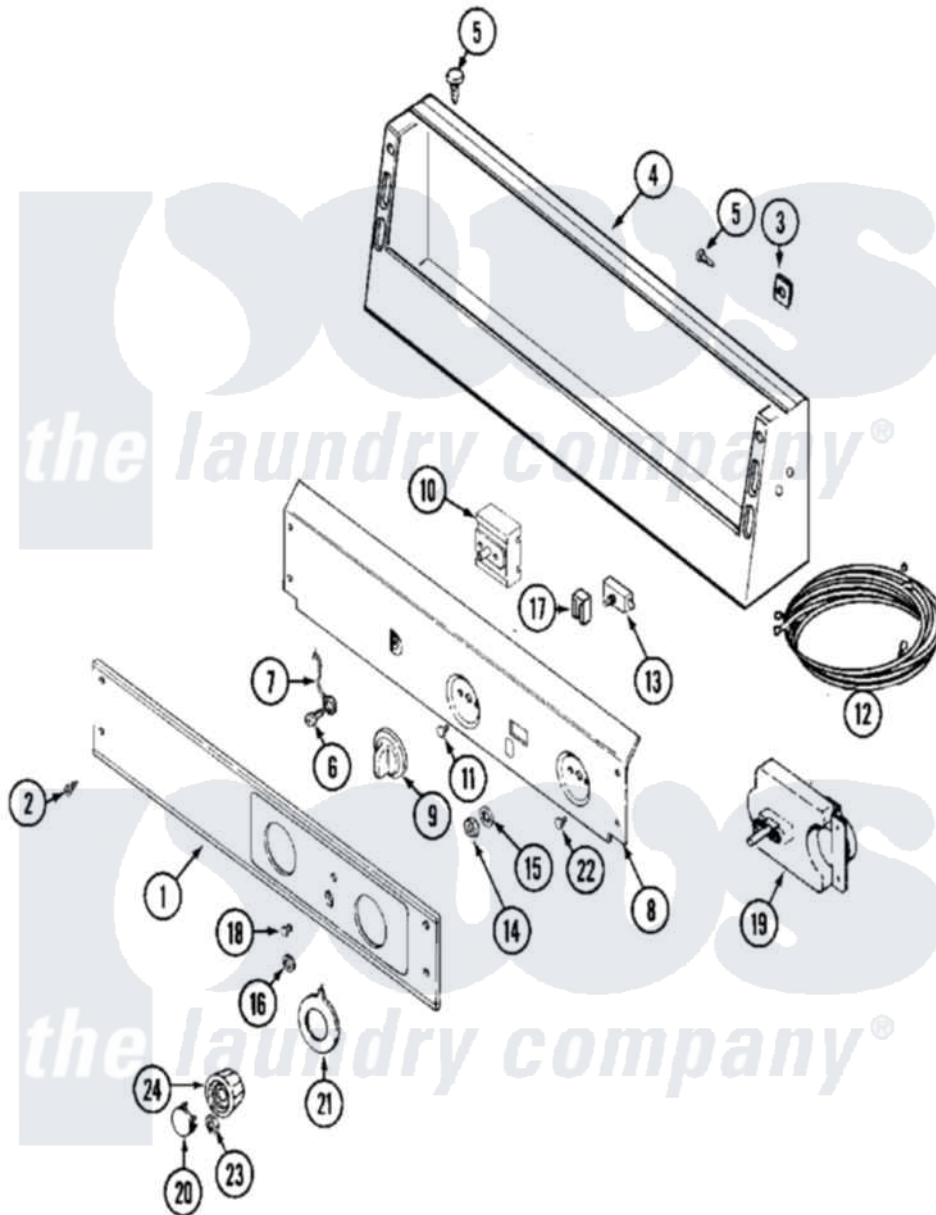

Maytag [Residential Maytag MDG16MNSAW Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	33001967			Panel, Control
002	215506			Screw, Control Panel Overlay
003	215003			Fastener, Panel And Bracket
004	22003101			Console
"	33001957			Console
005	22001996	3370225		Screw
006	211252			Screw, Ground Wire
007	205810			Wire, Ground
008	33001968			Bracket, Back
"	33002524			Bracket, Back
009	306938			Knob, Selector Switch
010	307237	W10327105		Switch, Cycle Selection
"	33002276			Switch, Cycle Selector
011	Y313588	488234		Screw 8-32 X 1/4
012	33001971			Wire Harness, Main
"	33001972			Wire Harness, Main

"	33002246		Wire Harness, Main
"	33002247		Wire Harness, Main
"	33002773		Wire Harness, Main
013	306940	W10149462	Switch, Push-To-Start
014	Y312706	422617	Nut
015	312751		Lockwasher, Start Switch
016	Y312702		Knurled Nut, Start Switch
017	204075	Not Available	PILOT LAMP (DG MODELS ONLY)
"	22001365	W10139459	Lamp-Indicator 230 V.
018	215564		Lens, Indicator Light
019	305214		Timer
"	Y305758		Timer 240-50
020	314723	W10133501	Cap, Knob
021	33001500		Dial, Timer Indicator
022	Y313588	488234	Screw 8-32 X 1/4
023	312273		Nut, Control Knob
024	314724		Knob For Timer
025	33002712	Not Available	MANUAL, OWNERS

