


Maytag MDG26PCABG 03 - PC CONTROL PANEL

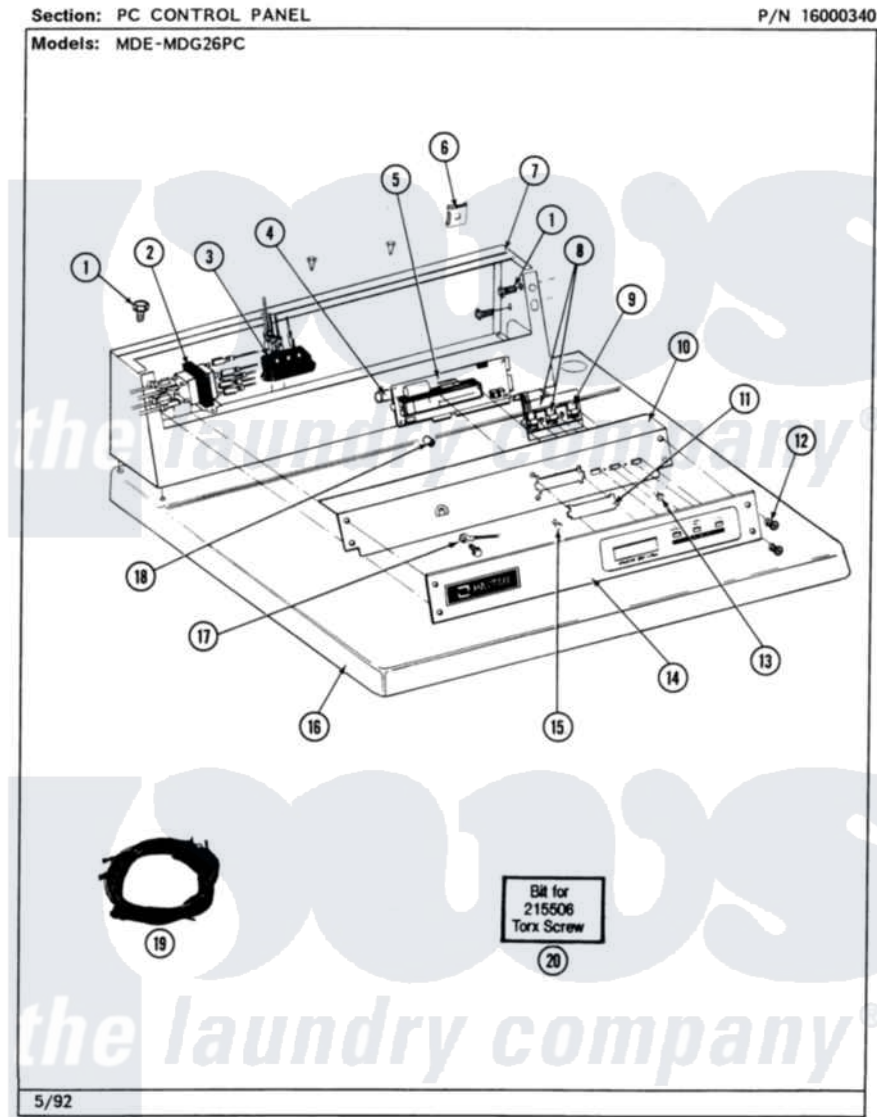

12

Maytag [Residential Maytag MDG26PCABG Dryer Parts](#) Parts Diagram 03 - PC CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	212276	W10116760		Screw
002	207766			Transformer
"	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
003	206824	W10133335		Relay, Motor
"	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
004	206828			Battery
005	215510		Not Available	SUPPORT, PC BOARD
"	NLA		Not Available	CIRCUIT BOARD ASSY
006	215003			Fastener, Panel And Bracket
007	212276	W10116760		Screw
"	NLA		Not Available	CONTROL COVER (WHT)
008	306694			Backup Plate With Switch
009	215517	W10131113		Push Button
010	NLA		Not Available	BACK UP PLATE (WHT)
011	215515		Not Available	COVER, DISPLAY

012	215506		Screw, Control Panel Overlay
013	215527	W10140652	Screw, 6-20 X 1/2
014	NLA		Not Available CONTROL PANEL
015	215526		Screw, Circuit Board
016	307105		Not Available COVER, TOP ASSY. (WHT)
"	NLA		Not Available (ALM)
017	205810		Wire, Ground
"	211252		Screw, Ground Wire
018	Y215513		Standoff, Circuit Board
019	308368		Wire Harness
"	NLA		Not Available WIRE HARNESS
"	Y308513		Harness, Wire
020	Y038227		Not Available TORX BIT (215506 SCREW)

the laundry company[®]

the laundry company[®]

the laundry company[®]