


Maytag MDG27MNAGW 03 - SUPPORT ASSY., TIMER, TIMER DIAL & KNOB

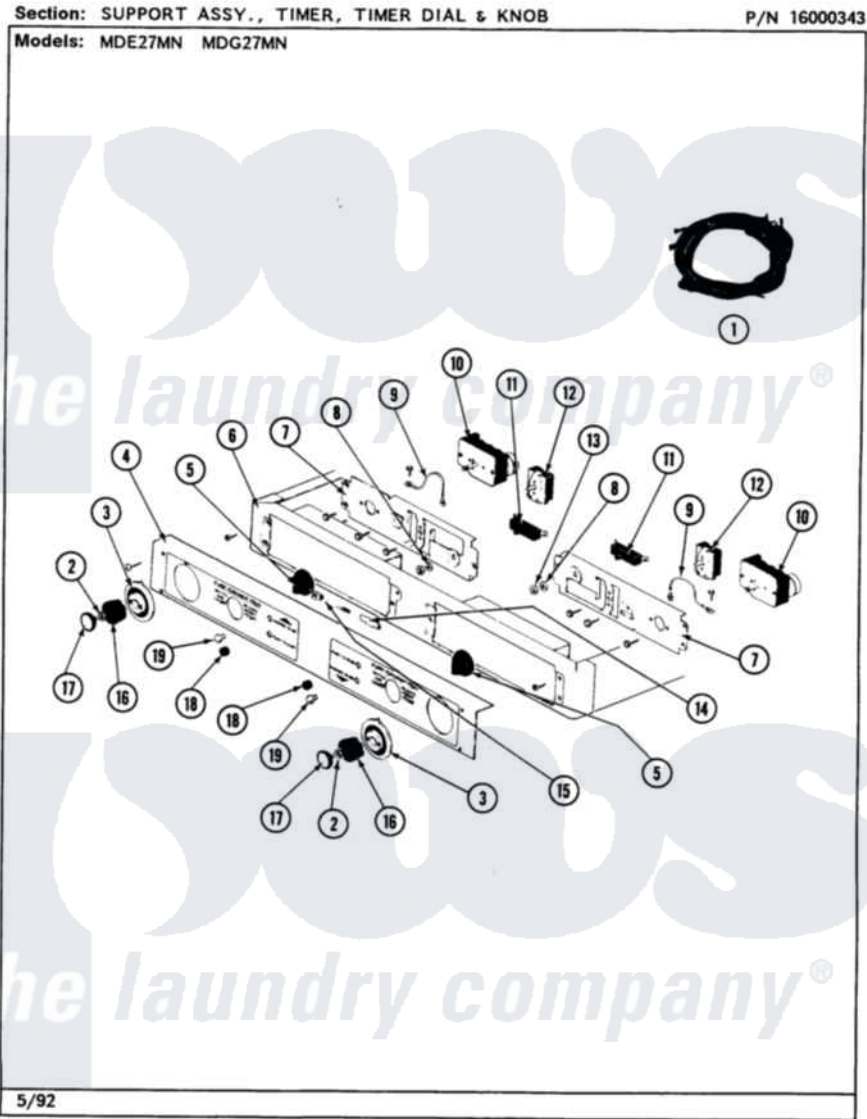

Maytag Residential Maytag MDG27MNAGW Dryer Parts Parts Diagram 03 - SUPPORT ASSY., TIMER, TIMER DIAL & KNOB

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
001	Y308499			Harness, Wire
"	NLA		Not Available	HARNES, MAIN (UPPER)
002	312273			Nut, Control Knob
003	314725	33001500		Dial, Timer Indicator
004	314664	212277		Screw, No.8 X 1/2 Inch
"	NLA		Not Available	CONTROL PANEL
005	205663			Knob For Selector Switch
006	NLA		Not Available	SUPPORT ASSY. (WHITE)
"	Y310632	1163839		Screw
007	910186	99002757		Screw
"	NLA		Not Available	MTG. BRACKET
008	312751			Lockwasher, Start Switch
009	205810			Wire, Ground
"	211168	W10139210		Screw, 8-18 X 5/16
"	211252			Screw, Ground Wire

010	Y307496		Timer
"	Y313588	488234	Screw 8-32 X 1/4
011	306940	W10149462	Switch, Push-To-Start
012	307253		Switch, Cycle Selector
"	Y313588	488234	Screw 8-32 X 1/4
013	Y312706	422617	Nut
014	Y201110	Not Available	CONNECTOR, WIRE (INDIC. LIGHT)
015	NLA	Not Available	INDICATOR LIGHT 240V 50HZ
016	314724		Knob For Timer
017	314723	W10133501	Cap, Knob
018	Y312702		Knurled Nut, Start Switch
019	215564		Lens, Indicator Light

the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]