


Maytag MDG27PCABW 06 - LINT SCREEN, TUMBLER (FRONT & BACK)

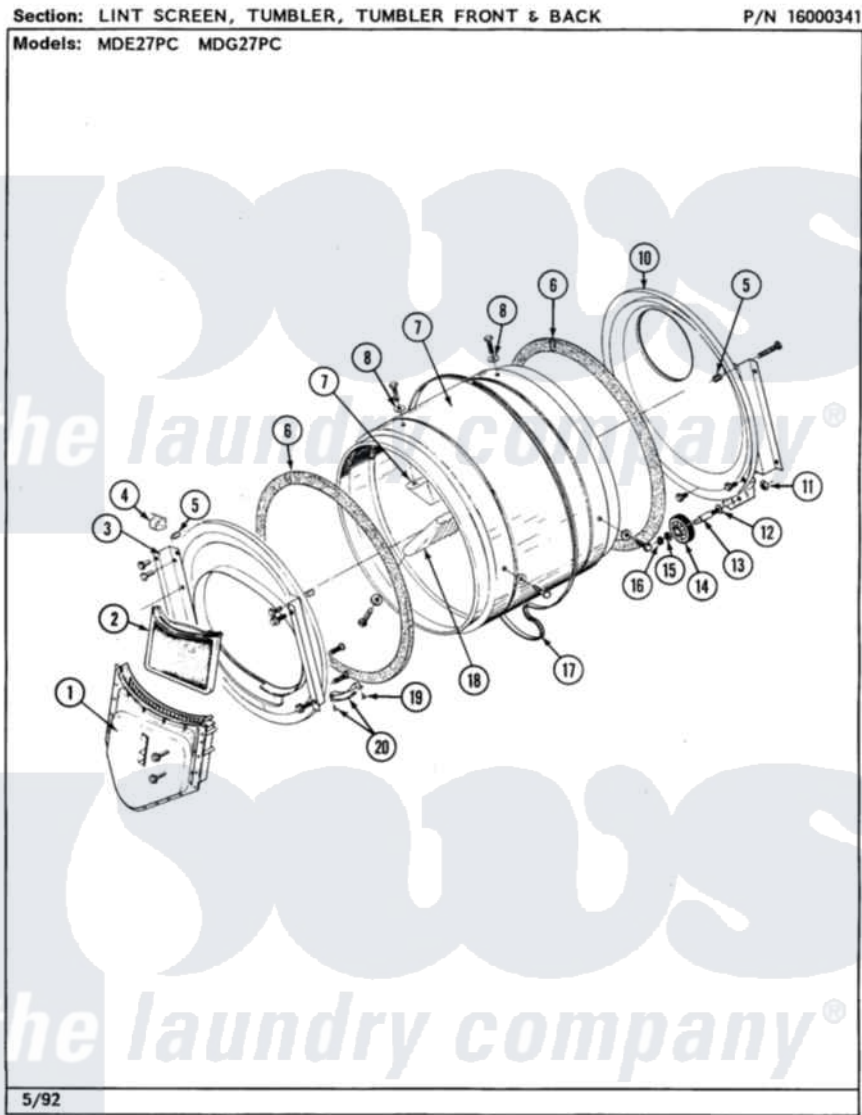

16

Maytag [Residential Maytag MDG27PCABW Dryer Parts](#) Parts Diagram 06 - LINT SCREEN, TUMBLER (FRONT & BACK)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
001	Y307112	33001016		Outlet Duct Assembly
"	Y314110	33002917		Screw, No.10-16
002	307108	33002970		Lint Filte
003	307109	33001179		Front, Tumbler
"	Y313561			Screw----NA
"	NLA		Not Available	SCREW
"	Y310632	1163839		Screw
004	Y310376			Clip, Door Switch Harness
005	NLA		Not Available	COVER, THREAD
006	314820			Seal, Tumbler
007	314803	33001012		Baffle
"	Y310759			Screw, Tumbler Baffles
008	314158			Washer, Baffle To Tumbler
009	306663		Not Available	TUMBLER W/BAFFLES
"	314802		Not Available	TUMBLER W/OUT BAFFLES
				Screw, 2A X 2/8 Hex Washer

010	211294	90767	Screw, 0A X 3/8 Hex Washer Head Tapping
"	Y307114	33001178	Back, Tumbler
"	Y308544	33001178	Back, Tumbler
011	312538	33001443	Nut, Hex
012	Y313347	312535	Washer, Vault Mounting Brk.
013	Y312948	6-3129480	Shaft- Tumbler
014	Y303373	12001541	Drum Roller/Washer Assembly--W
015	312535		Washer, Vault Mounting Brk.
016	410233	9703438	Ring-Retrn
017	Y312959		Poly "V" Belt For Tumbler
018	314804	33001004	Baffle, Tall
"	Y310759		Screw, Tumbler Baffles
019	210720		Rivet, Bearing To Tumbler Frnt
020	306508		Tumbler Bearing Kit ---W

