


Maytag MDG3000AXA 04 - CONTROL PANEL

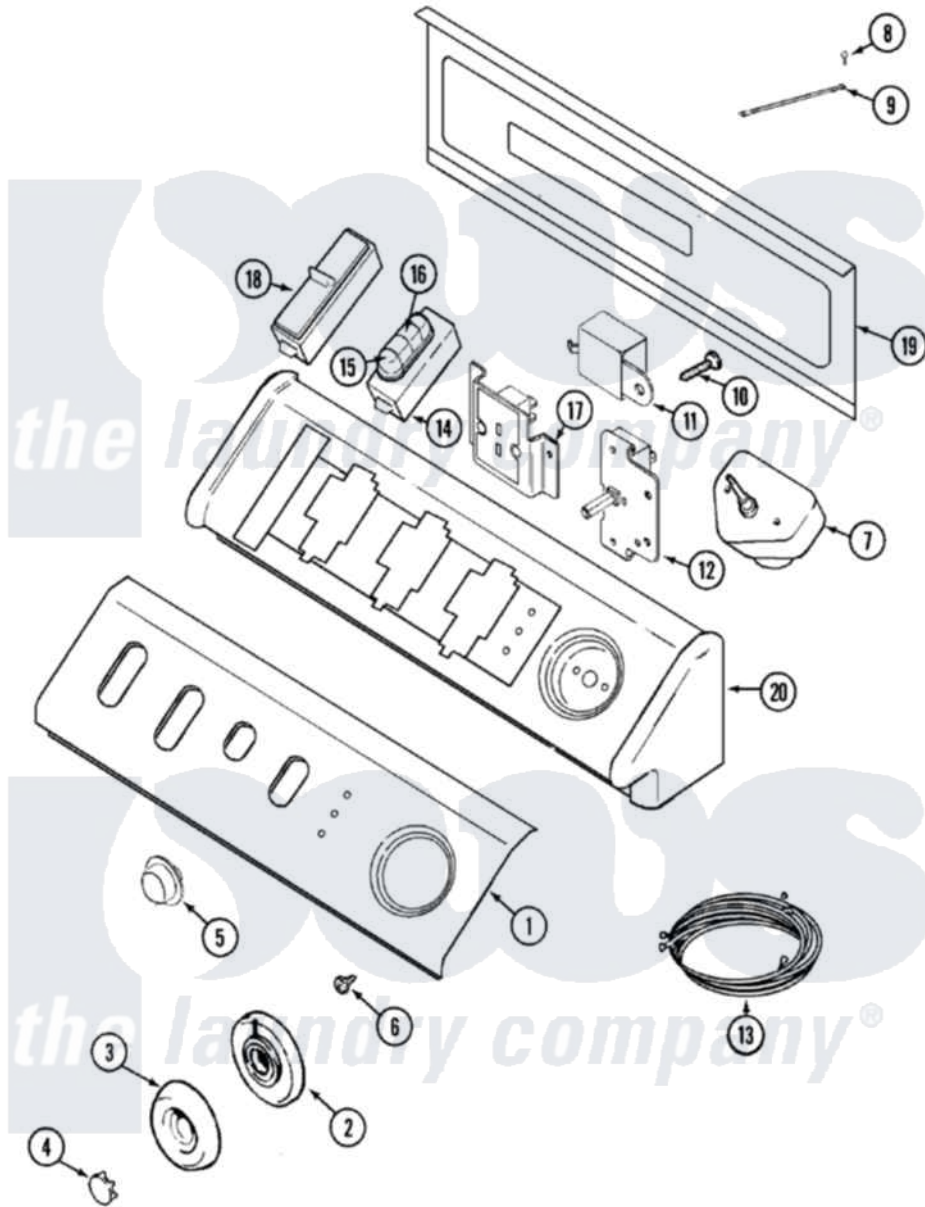

Maytag [Residential Maytag MDG3000AXA Dryer Parts](#) Parts Diagram 04 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y22002339	8534058		Screw
"	33001858			Panel, Control
2	33001622	33002346		Skirt, Timer Dial
3	22001659			Timer Knob - Grey
4	22001665			Insert, Timer Knob
5	33001620	33002435		Button, Push-To-Start
6	33001690	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
7	33001730			Timer
8	210186	3370225		Screw
9	33001859		Not Available	WIRE, GROUND
10	33001860	W10116760		Screw
11	33001848			Signal, End Of Cycle
"	33001660	33001848		Signal, End Of Cycle
12	33001862	33001618		Switch- PU
13	33001887		Not Available	WIRE HARNESS, MAIN
"	33001864			Wire Harness, Main

14	22001909		Switch, Option
15	22001790	22003876	Button- SW
16	22001791	22003875	Button- SW
17	33001662	Not Available	DISPLAY, DRYNESS (ALM)
18	33001659		Switch, Temperature
19	33001806	Not Available	BACK, CONSOLE PANEL
"	216423	3370225	Screw
20	22002286	22004094	Facia, Export Mav7750
21	33001875	Not Available	MANUAL, USE & CARE (FRENCH)

