


Maytag MDG32PC3AW 14 - SAIL SWITCH ASSEMBLY

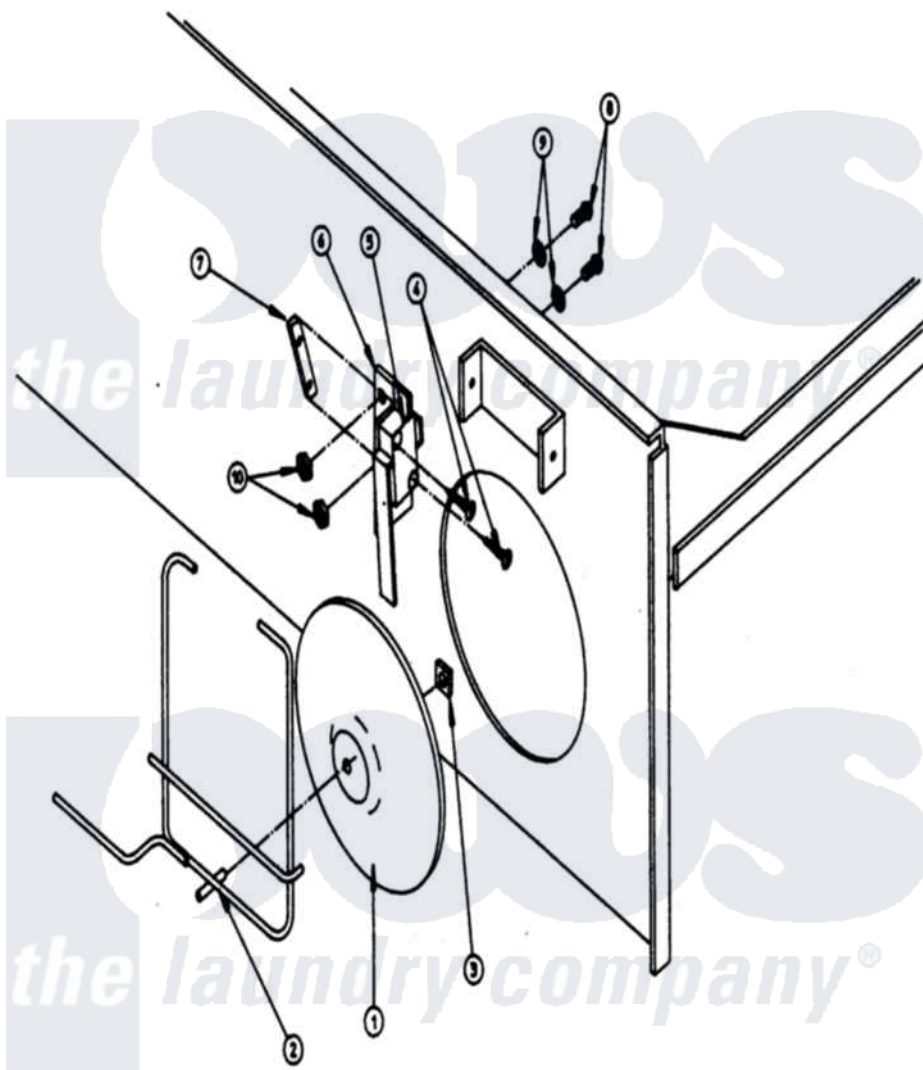

Maytag Residential Maytag MDG32PC3AW Dryer Parts Parts Diagram 14 - SAIL SWITCH ASSEMBLY

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
000	W10124350		Not Available	ORDER PART FROM AMERICAN DRYER CORP AT 508-678-9000
001	A309206		Not Available	DAMPER, SAIL SWITCH
"	A802805		Not Available	SAIL SWITCH ROD & DAMPER ASSY. (INCL. ITEMS 1 THRU 3)
002	A105550	W10146642		320 330 43
003	A154002	154002		1 8 Push O
004	A150303	150303		4 X 3 4 P
005	A122200	122200		Sail Switch
"	A802807	W10147081		320 330 43
006	A319208	319208		320 330 43
007	A154004	154004		Tinneman
008	A150001	150001		6-32 X 1 2
009	A153010	153010		6 Internal
010	A152000			6-32 HEX N