


# Maytag MDG3500BWQ 03 - CONTROL PANEL

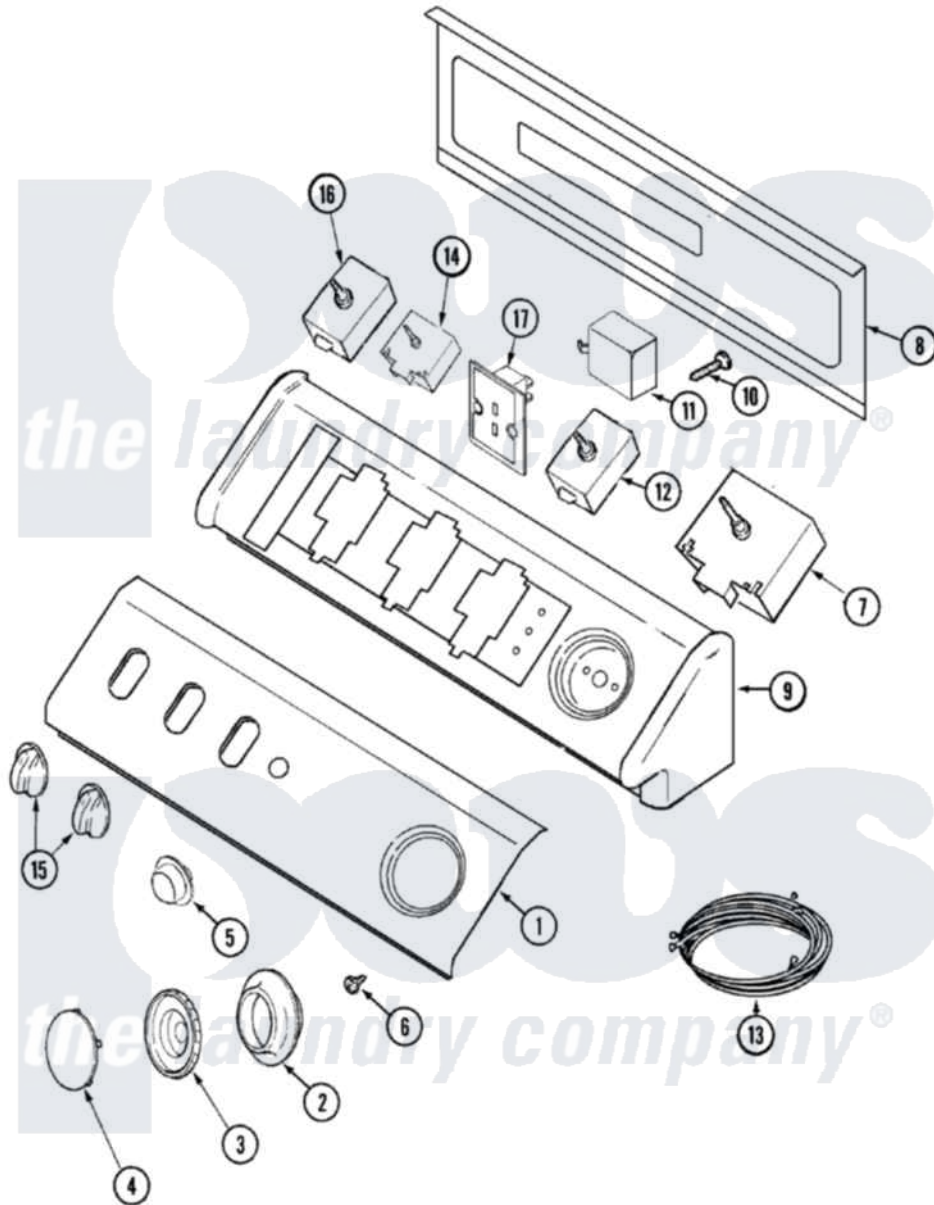

Maytag [Residential Maytag MDG3500BWQ Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL  
 Click on the part number to view part

| Item | Original Part Number     | Replaced By              | Status        | Part Description                        |
|------|--------------------------|--------------------------|---------------|---|
| 1    | <a href="#">33002601</a> |                          |               | Panel, Control                          |
| "    | Y22002339                | <a href="#">8534058</a>  |               | Screw                                   |
| 2    | <a href="#">33002346</a> |                          |               | Skirt, Timer Dial                       |
| 3    | <a href="#">22001659</a> |                          |               | Timer Knob - Grey                       |
| 4    | <a href="#">33002347</a> |                          |               | Timer Knob Insert/Cap                   |
| 5    | <a href="#">33002435</a> |                          |               | Button, Push-To-Start                   |
| 6    | 33001690                 | <a href="#">90767</a>    |               | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 7    | <a href="#">33002689</a> |                          |               | Timer, Mallory Electronic Dry           |
| "    | <a href="#">33001634</a> |                          |               | Timer                                   |
| 8    | 216423                   | <a href="#">3370225</a>  |               | Screw                                   |
| "    | 33001806                 |                          | Not Available | BACK, CONSOLE PANEL                     |
| 9    | 33002327                 | <a href="#">37001115</a> |               | Console                                 |
| 10   | 216423                   | <a href="#">3370225</a>  |               | Screw                                   |
| 11   | <a href="#">33001623</a> |                          |               | Buzzer, Non-Adjustable                  |
| 12   | 33002356                 | <a href="#">33001618</a> |               | Switch- PU                              |
| 13   | <a href="#">33002320</a> |                          |               | Wire Harness, Main                      |

|    |                          |               |                               |
|----|--------------------------|---------------|-------------------------------|
| "  | <a href="#">33002691</a> |               | Wire Harness                  |
| 14 | <a href="#">33002527</a> |               | Switch, Four Pos. Rotary Gas  |
| 15 | <a href="#">22002589</a> |               | Knob, Selector                |
| 16 | <a href="#">22001794</a> |               | Switch, Rotary                |
| 17 | 33002400                 | Not Available | DRYNESS DISPLAY CONTROL (BSQ) |
| 18 | 33002558                 | Not Available | MANUAL, USE & CARE            |
| "  | 33002319                 | Not Available | MANUAL, USE & CARE (FRENCH)   |

